

Brazil GM V12.00 test table (Note:For reference only)

Car	system	model	conector	Functions				
				Read DTC	Clear DTC	Data Stream	Id Info	Action
Can bus scan	Motor		CAN BUS	√	√	√		
Astra 1.8	Motor	Alc 00->04 Motronic M1.5.5	OBD-16	√	√	√	√	√
		Gas 98-> Motronic M1.5.5	OBD-16	√	√	√	√	√
	ABS	98->03 ABS 5.3	OBD-16	√	√	√		
	Air Bag	98->99 SAB-6/2	OBD-16	√	√	√	√	
		00-> SAB 6	OBD-16	√	√	√	√	
	Alarme	98-> ATWS+CDL	OBD-16	√	√	√	√	
		02-> GM Alarme 2	OBD-16	√	√	√	√	√
	Chassis	00-> Contr.Veloc.GM-1	OBD-16	√	√	√	√	
		00-> Direcao GM-1	OBD-16	√	√	√	√	
	Clima	98->01 GM A/C+Arref.1	OBD-16	√	√	√	√	
Imobiliz	98-> GM IMOB. 2	OBD-16	√	√	√	√	√	
Painel	01->03 LCD Triplo-1	OBD-16	√	√	√	√	√	
Astra2.0	Motro	Dies98->00EDC-15M	OBD-16	√	√	√	√	√
		Flex04->MotronicME7.9.6	OBD-16	√	√	√	√	√
		Gas95->98MotronicM1.5.2	OPEL-10	√	√	√	√	√
		Gas98->MotronicM1.5.5	OBD-16	√	√	√	√	√
	ABS	98->03ABS5.3	OBD-16	√	√	√		
	AirBag	98->99SAB-6/2	OBD-16	√	√	√	√	
		00->04SAB6	OBD-16	√	√	√	√	
		04->SAB8	OBD-16	√	√	√	√	
	Alarme	98->ATWS+CDL	OBD-16	√	√	√	√	
		02->GMAlarme2	OBD-16	√	√	√	√	√
	Chassis	00->Contr.Veloc.GM-1	OBD-16	√	√	√	√	
		00->DirecaoGM-1	OBD-16	√	√	√	√	
	Clima	98->01GMA/C+Arref.1	OBD-16	√	√	√	√	
	Imobiliz	98->GMIMOB.2	OBD-16	√	√	√	√	√
Painel	01->03LCDTriplo-1	OBD-16	√	√	√	√	√	
Transmis	02->AF13II/17/20/22	OBD-16	√	√	√	√	√	
	Motor	Gas98->MotronicM1.5.5	OBD-16	√	√	√	√	√
	ABS	98->03ABS5.3	OBD-16	√	√	√		
		99->99SAB-6/2	OBD-16	√	√	√	√	

Brazil GM V12.00 test table (Note:For reference only)

Car	system	model	conector	Functions				
				Read DTC	Clear DTC	Data Stream	Id Info	Action
Astra2.0-16V	AirBag	00->04SAB6	OBD-16	√	√	√	√	
		04->SAB8	OBD-16	√	√	√	√	
	Alarme	99->ATWS+CDL	OBD-16	√	√	√	√	
		02->GMAlarمة2	OBD-16	√	√	√	√	√
	Chassis	00->Contr. Veloc. GM-1	OBD-16	√	√	√	√	
		00->DirecaoGM-1	OBD-16	√	√	√	√	
	Clima	98->01GMA/C+Arref. 1	OBD-16	√	√	√	√	
	Imobiliz	98->GMIMOB. 2	OBD-16	√	√	√	√	√
Painel	01->03LCDTriplo-1	OBD-16	√	√	√	√	√	
Transmis	02->AF13II/17/20/22	OBD-16	√	√	√	√	√	
Aveo1.4-16V	Motor	Gas05-07GMDAT-1	OBD-16	√	√	√	√	√
	Transmis	05-07GMDAT-AT-1	OBD-16	√	√	√		√
Aveo1.6-16V	Motor	Gas05-07GMDAT-1	OBD-16	√	√	√	√	√
	Transmis	05-07GMDAT-AT-1	OBD-16	√	√	√		√
Blazer2.2	Motor	Gas97->01MotronicM1.5.4	OBD-16	√	√	√	√	√
		Gas95->97MultecIEFI-6	OBD-16	√	√	√	√	√
Blazer2.4	Motor	Gas00->MotronicM1.5.4	OBD-16	√	√	√	√	√
		Flex04->MotronicME7.9.6	OBD-16	√	√	√	√	√
	AirBag	01->GMSRS-1	OBD-16	√	√	√	√	
	Imobiliz	00->05GMIMOB. 3	OBD-16	√	√	√	√	
06->GMIMOB. 3/2		OBD-16	√	√	√	√		
Blazer2.8	Motor	Dies05-BoschEDC-16C9	OBD-16	√	√	√	√	√
	AirBag	01->GMSRS-1	OBD-16	√	√	√	√	
	Imobiliz	00->05GMIMOB. 3	OBD-16	√	√	√	√	
		00->02GMIMOB. 3	OBD-16	√	√	√	√	
		06->GMIMOB. 3/2	OBD-16	√	√	√	√	
Painel	00->Instrument. GM3	OBD-16	√	√	√	√	√	
Blazer4.3-V6	Motor	Gas92->00CMFI	GM-12	√	√	√	√	
		Gas93-00MFI-1	GM-12	√	√	√	√	
		Gas96->Rochester	OBD-16	√	√	√		
		Gas01->Rochester	OBD-16	√	√	√		
		Gas96->98Rochester-1	OBD-16	√	√	√	√	
		Gas98->01Rochester-2	OBD-16	√	√	√	√	
		Gas01->01Rochester-2	OBD-16	√	√	√	√	

Brazil GM V12.00 test table (Note:For reference only)

Car	system	model	conector	Functions				
				Read DTC	Clear DTC	Data Stream	Id Info	Action
	Transmis	Gas93-95TBIGov	GM-12	√	√	√	√	
		96->984L6-1	OBD-16	√	√	√		
		98->014L6-2	OBD-16	√	√	√		
C15005.7	Motor	Gas92->92TBI-3	GM-12	√	√	√		
		Gas92->96TBIGov	GM-12	√	√	√	√	
		Gas96->VPW	OBD-16	√	√	√		
C204.1	Motor	Gas96->96MotronicM2.8	DAEW00-12	√	√	√	√	√
C25005.7	Motor	Gas92->92TBI-3	GM-12	√	√	√		
		Gas97->VPW	OBD-16	√	√	√		
Cadillac4.6	Motor	Gas97->VPW	OBD-16	√	√	√		
Calibra2.016V	Motor	Gas94-96MotronicM2.8	DAEW00-12	√	√	√	√	√
Camaro5.0	Motor	Gas92->92P4TPI	GM-12	√	√	√	√	
		Gas92->92TBI-2	GM-12	√	√	√		
Camaro5.7	Motor	Gas93-93MFI-2	GM-12	√	√	√	√	
		Gas92->92P4TPI	GM-12	√	√	√	√	
		Gas94-95SFI-2	GM-12	√	√	√		
		Gas96->VPW	OBD-16	√	√	√		
Caprice4.3	Motor	Gas94-95SFI-2	GM-12	√	√	√		
		Gas92->93TBI-3	GM-12	√	√	√		
Caprice5.7	Motor	Gas95->95SFI-2	GM-12	√	√	√		
Cavalier2.2	Motor	Gas94-95MFI-3	GM-12	√	√	√	√	
		Gas92->93PFI-3	GM-12	√	√	√	√	
		Gas96->VPW	OBD-16	√	√	√		
Cavalier2.4	Motor	Gas96->VPW	OBD-16	√	√	√		
Cavalier2.8	Motor	Gas92->94PFI-1	GM-12	√	√	√	√	
		Gas96->VPW	OBD-16	√	√	√		
Cavalier3.1	Motor	Gas92->93PFI-1	GM-12	√	√	√	√	
		Gas96->VPW	OBD-16	√	√	√		
Celta1.0	Motor	Flex05-Multech	OBD-16	√	√	√	√	√
		Gas01->MultecFC01SE	OBD-16	√	√	√	√	√
		Gas03-MultechHC10YEH	OBD-16	√	√	√	√	√
	Carroceria	02->03GMBCM-1	OBD-16	√	√	√	√	√
	Imobiliz	01->GMIMOB.2	OBD-16	√	√	√	√	√
Celta1.4	Motor	Gas03-MultechHC10YEH	OBD-16	√	√	√	√	√

Brazil GM V12.00 test table (Note:For reference only)

Car	system	model	conector	Functions				
				Read DTC	Clear DTC	Data Stream	Id Info	Action
Certral. 4	Imobiliz	01->GMIMOB. 2	OBD-16	√	√	√	√	√
Chevy1.6	Motor	Gas05-DelphiMR140	OBD-16	√	√	√	√	√
Corsal.0	Motor	Alc96->05MultecIEFI-6	OBD-16	√	√	√	√	√
		Flex05-MotronicME7.9.6	OBD-16	√	√	√	√	√
		Flex05-Multech	OBD-16	√	√	√	√	√
		Gas02->MultecHC10YEH	OBD-16	√	√	√	√	√
		Gas96->03MultecIEFI-6	OBD-16	√	√	√	√	√
	Alarme	03-GMAlarme3	OBD-16	√	√	√	√	√
	Carroceria	02->03GMBCM-1	OBD-16	√	√	√	√	√
	Imobiliz	97->03GMIMOB. 1	OBD-16	√	√	√	√	√
		01->GMIMOB. 2	OBD-16	√	√	√	√	√
Painel	02->04Instrument. GM2	OBD-16	√	√	√	√	√	
	04->Instrument. GM4	OBD-16	√	√	√	√	√	
Corsal.016V	Motor	Gas99->MultecFC10SE	OBD-16	√	√	√	√	√
	Imobiliz	97->99GMIMOB. 1	OBD-16	√	√	√	√	√
Corsal.4	Motor	Flex07-MultechHX14YFH	OBD-16	√	√	√	√	√
		Gas03-MultecHC10YEH	OBD-16	√	√	√	√	√
Corsal.6	Motor	Gas96->03MultecIEFI-6	OBD-16	√	√	√	√	√
	Imobiliz	97->GMIMOB. 1	OBD-16	√	√	√	√	√
	Transmis	96->98AF13/20/22	OBD-16	√	√	√	√	
Corsal.616V	Motor	Gas96->01MultecMC16SEL	OBD-16	√	√	√	√	√
	ABS	96->01Bosch5/TC	OBD-16	√	√	√	√	
	Imobiliz	97->99GMIMOB. 1	OBD-16	√	√	√	√	√
	Transmis	96->98AF13/20/22	OBD-16	√	√	√	√	
Corsa-1.8	Motor	Flex04-05MultecHC18XE	OBD-16	√	√	√	√	√
		Flex06->MultecHC18XF	OBD-16	√	√	√	√	√
		Gas02->MultecHC18NE	OBD-16	√	√	√	√	√
	ABS	03-ABS5.3	OBD-16	√	√	√		
	Alarme	03-GMAlarme3	OBD-16	√	√	√	√	√
	Carroceria	02->07GMBCM-1	OBD-16	√	√	√	√	√
	Imobiliz	02->GMIMOB. 2	OBD-16	√	√	√	√	√
Painel	02->04Instrument. GM2	OBD-16	√	√	√	√	√	
	04->Instrument. GM4	OBD-16	√	√	√	√	√	
CorsaPickup1.6	Motor	Gas96->01MultecIEFI-6	OBD-16	√	√	√	√	√

Brazil GM V12.00 test table (Note:For reference only)

Car	system	model	conector	Functions				
				Read DTC	Clear DTC	Data Stream	Id Info	Action
Corsar 1.0	Imobiliz	97->99GMIMOB. 1	OBD-16	√	√	√	√	√
Corvette-5.7	Motor	Gas95->95SFI-2	GM-12	√	√	√		
		Gas94-94SFIDOHC	GM-12	√	√	√	√	
		Gas96->VPW	OBD-16	√	√	√		
Deville-4.5	Motor	Gas92->93DFI	GM-12	√	√	√	√	
		Gas96->VPW	OBD-16	√	√	√		
Deville-4.9	Motor	Gas92->95DFI	GM-12	√	√	√	√	
Eighty-Eight-3.8	Motor	Gas93-94SFI-1	GM-12	√	√	√	√	
		Gas92->92TPI	GM-12	√	√	√	√	
Eldorado-4.9	Motor	Gas92->93DFI	GM-12	√	√	√	√	
		Gas96->VPW	OBD-16	√	√	√		
Espero-2.0	Motor	Gas94-97Multec	GM-12	√	√	√	√	√
GrVitara-2.0	Motor	Dies00->01BoschEDC-15C2	OBD-16	√	√	√	√	√
Ipanema1.8	Motor	Alc92->97Multec700	GM-12	√	√	√	√	
		Gas92->97Multec700	GM-12	√	√	√	√	
Ipanema2.0	Motor	Alc92->97Multec700	GM-12	√	√	√	√	
		Gas92->97Multec700	GM-12	√	√	√	√	
K15005.7	Motor	Gas93-95TBIGov	GM-12	√	√	√	√	
Kadett1.8	Motor	Alc92->97Multec700	GM-12	√	√	√	√	
		Gas92->97Multec700	GM-12	√	√	√	√	
Kadett2.0	Motor	Alc92->97Multec700	GM-12	√	√	√	√	
		Gas97->98MotronicM1.5.4	DAEWOO-12	√	√	√	√	√
		Gas92->97Multec700	GM-12	√	√	√	√	
Lumina-3.1	Motor	Gas92->95PFI-2	GM-12	√	√	√	√	
		Gas93-94TBI-3	GM-12	√	√	√		
Lumina-3.4	Motor	Gas92->93PFI-2	GM-12	√	√	√	√	
Lumina-3.8	Motor	Gas92->TPI	GM-12	√	√	√	√	
Luv3.0	Motor	Dies05-EDC15M2	OBD-16	√	√	√	√	√
Merival1.4	Motor	Flex08-MultechHX14YFH	OBD-16	√	√	√	√	√
	Motor	Flex04-05MultechHC18XE	OBD-16	√	√	√	√	√
		Flex06->MultechHC18XF	OBD-16	√	√	√	√	√
		Gas02->03MultechHC18NE	OBD-16	√	√	√	√	√
	ABS	04->ABS5.3	OBD-16	√	√	√		
Alarme		03-03GMA1arme3	OBD-16	√	√	√	√	√

Brazil GM V12.00 test table (Note:For reference only)

Car	system	model	conector	Functions				
				Read DTC	Clear DTC	Data Stream	Id Info	Action
Meriva1.8	Alarme	04->GMAlarme5	OBD-16	√	√	√	√	√
	Carroceria	04-07GMBCM-1	OBD-16	√	√	√	√	√
	Imobiliz	02->GMIMOB. 2	OBD-16	√	√	√	√	√
	Painel	02->07Instrument. GM2	OBD-16	√	√	√	√	√
		04->Instrument. GM4	OBD-16	√	√	√	√	√
	04-07LCDTriplo-1	OBD-16	√	√	√	√	√	
Meriva-1.8-16V	Motor	Gas02->03MultechHC18NE	OBD-16	√	√	√	√	√
	ABS	03-03ABS5. 3	OBD-16	√	√	√		
	Alarme	03-03GMAlarme3	OBD-16	√	√	√	√	√
	Imobiliz	02->GMIMOB. 2	OBD-16	√	√	√	√	√
	Painel	02->Instrument. GM2	OBD-16	√	√	√	√	√
Montana-1.4	Motor	Flex07-MultechHX14YFH	OBD-16	√	√	√	√	√
Montana-1.8	Motor	Flex04-05MultechHC18XE	OBD-16	√	√	√	√	√
		Flex06->MultechHC18XF	OBD-16	√	√	√	√	√
		Gas03-03MultechHC18NE	OBD-16	√	√	√	√	√
	ABS	04->ABS5. 3	OBD-16	√	√	√		
	Alarme	03-GMAlarme4	OBD-16	√	√	√	√	√
	Imobiliz	03-GMIMOB. 2	OBD-16	√	√	√	√	√
Monza1.8	Motor	Alc91-96Multec700	GM-12	√	√	√	√	
		Gas91-96Multec700	GM-12	√	√	√	√	
Monza1.8J91	Motor	Gas91-91Multec700	GM-12	√	√	√	√	
Monza2.0	Motor	Alc91-96Multec700	GM-12	√	√	√	√	
		Gas91-96Multec700	GM-12	√	√	√	√	
Monza2.0J91	Motor	Gas91-91Multec700	GM-12	√	√	√	√	
Omega2.0	Motor	Alc93-95MotronicM1.5.2	OPEL-10	√	√	√	√	√
		Gas94-95MotronicM1.5.2	OPEL-10	√	√	√	√	√
Omega2.2E020	Motor	Gas95->99MultecIEFI-6	DAEWOO-12	√	√	√	√	√
	Imobiliz	95->99GMIMOB. 1	DAEWOO-12	√	√	√	√	√
Omega2.2IMMO	Motor	Gas95->99MultecIEFI-6	DAEWOO-12	√	√	√	√	√
	Imobiliz	95->99GMIMOB. 1	DAEWOO-12	√	√	√	√	√
Omega3.0	Motor	Gas93-95MotronicM1.5.2	OPEL-10	√	√	√	√	√
Omega-3.8	Motor	Gas99->02Multec	GM-12	√	√	√	√	√
Omega4.1	Motor	Gas95->99MotronicM2.8	DAEWOO-12	√	√	√	√	√
	Imobiliz	95->99GMIMOB. 1	DAEWOO-12	√	√	√	√	√

Brazil GM V12.00 test table (Note:For reference only)

Car	system	model	conector	Functions				
				Read DTC	Clear DTC	Data Stream	Id Info	Action
	Transmis	95->99AR25/33	DAEW00-12	√	√	√	√	
Prince-2.0	Motor	Gas94-97Multec	GM-12	√	√	√	√	√
Prisma1.4	Motor	Flex06->MultechX14YFL	OBD-16	√	√	√	√	√
	Alarme	06->GMAlarme3	OBD-16	√	√	√	√	√
	Imobiliz	06->GMIMOB. 2	OBD-16	√	√	√	√	√
S102.2	Motor	Gas94-95MFI-1	GM-12	√	√	√	√	
		Gas97->00MotronicM1.5.4	OBD-16	√	√	√	√	√
		Gas95->97MultecIEFI-6	OBD-16	√	√	√	√	√
		Gas97->VPW	OBD-16	√	√	√		
S10-2.4	Motor	Gas00->MotronicM1.5.4	OBD-16	√	√	√	√	√
		Flex04->MotronicME7.9.6	OBD-16	√	√	√	√	√
	Imobiliz	00-05GMIMOB. 3	OBD-16	√	√	√	√	
		06->GMIMOB. 3/2	OBD-16	√	√	√	√	
S102.8	Motor	Dies05-BoschEDC-16C9	OBD-16	√	√	√	√	√
	AirBag	01->GMSRS-1	OBD-16	√	√	√	√	
	Alarme	02->GMAlarme2	OBD-16	√	√	√	√	√
	Imobiliz	00->02GMIMOB. 3	OBD-16	√	√	√	√	
		00->05GMIMOB. 3	OBD-16	√	√	√	√	
		06->GMIMOB. 3/2	OBD-16	√	√	√	√	
	Painel	00->Instrument. GM3	OBD-16	√	√	√	√	√
S104.3V6	Motor	Gas92->00CMFI	GM-12	√	√	√	√	
		Gas94-95MFI-1	GM-12	√	√	√	√	
		Gas97->00Rochester	OBD-16	√	√	√		
		Gas98->01Rochester-2	OBD-16	√	√	√	√	
		Gas01->01Rochester-2	OBD-16	√	√	√	√	
		Gas93-95TBIGov	GM-12	√	√	√	√	
Safari-4.3	Motor	Gas94-95CMFI	GM-12	√	√	√	√	
Seville-4.9	Motor	Gas92->93DFI	GM-12	√	√	√	√	
		Gas96->VPW	OBD-16	√	√	√		
Silverado4.1	Motor	Gas98->99MotronicM2.8	OBD-16	√	√	√	√	√
Silverado5.3	Motor	Gas97->VPW	OBD-16	√	√	√		
Silverado5.7	Motor	Gas97->VPW	OBD-16	√	√	√		
Spark/7:241.0	Motor	Gas05-07DelphiMR140	OBD-16	√	√	√	√	√
		Gas05-07GMDAT-2	OBD-16	√	√	√	√	

Brazil GM **V12.00** test table (Note:For reference only)

Car	system	model	conector	Functions				
				Read DTC	Clear DTC	Data Stream	Id Info	Action
SS104. 3V6	Motor	Gas95->Multec	OBD-16	√	√	√		
		Gas96->98Rochester-1	OBD-16	√	√	√		
Supersalon-2.0	Motor	Gas94-97Multec	GM-12	√	√	√	√	√
Suprema2.0	Motor	Gas93-95MotronicM1.5.2	OPEL-10	√	√	√	√	√
		Alc94-95MotronicM1.5.2	OPEL-10	√	√	√	√	√
Suprema2.2E020	Motor	Gas95->99MultecIEFI-6	DAEWOO-12	√	√	√	√	√
	Imobiliz	95->99GMIMOB.1	DAEWOO-12	√	√	√	√	√
Suprema2.2IMMO	Motor	Gas95->99MultecIEFI-6	DAEWOO-12	√	√	√	√	√
	Imobiliz	95->99GMIMOB.1	DAEWOO-12	√	√	√	√	√
Suprema3.0	Motor	Gas93-95MotronicM1.5.2	OPEL-10	√	√	√	√	√
Suprema4.1	Motor	Gas95->99MotronicM2.8	DAEWOO-12	√	√	√	√	√
	Imobiliz	95->99GMIMOB.1	DAEWOO-12	√	√	√	√	√
	Transmis	95->99AR25/33	DAEWOO-12	√	√	√	√	
Tigra1.616V	Motor	Gas97->99MultecMC16SEL	OBD-16	√	√	√	√	√
	ABS	97->99Bosch5/TC	OBD-16	√	√	√	√	
Tracker-2.0	Motor	Dies00->01BoschEDC-15C2	OBD-16	√	√	√	√	√
Vectra2.0	Motor	Gas94-96MotronicM1.5.2	OPEL-10	√	√	√	√	√
Vectra2.016V	Motor	Gas94-96MotronicM1.5.2	OPEL-10	√	√	√	√	√
VectraB2.0	Motor	Dies96->98EDC-15M	OBD-16	√	√	√	√	√
		Gas96->04MotronicM1.5.4	OBD-16	√	√	√	√	√
	ABS	96->99Bosch5/TC	OBD-16	√	√	√	√	
		97->Bosch5/TC	OBD-16	√	√	√	√	
	AirBag	96->98SDM-0	OBD-16	√	√	√	√	
	Alarme	96->98GMAalarm1	OBD-16	√	√	√	√	√
	Imobiliz	96->99GMIMOB.1	OBD-16	√	√	√	√	√
	Painel	02->Instrument.GM2	OBD-16	√	√	√	√	√
		96->98LCDMultiplo	OBD-16	√	√	√	√	
		96->98LCDMultiplo-2	OBD-16	√	√	√	√	
Transmis	96->98AF13/20/22	OBD-16	√	√	√	√		
VectraB2.016V	Motor	Gas96->04MotronicM1.5.4	OBD-16	√	√	√	√	√
	ABS	96->99Bosch5/TC	OBD-16	√	√	√	√	
		97->Bosch5/TC	OBD-16	√	√	√	√	
	AirBag	96->98SDM-0	OBD-16	√	√	√	√	
	Alarme	96->98GMAalarm1	OBD-16	√	√	√	√	√

Brazil GM V12.00 test table (Note:For reference only)

Car	system	model	conector	Functions				
				Read DTC	Clear DTC	Data Stream	Id Info	Action
	Imobiliz	97->GMIMOB. 1	OBD-16	√	√	√	√	√
	Painel	96->98LCDMultiplo	OBD-16	√	√	√	√	
		96->98LCDMultiplo-2	OBD-16	√	√	√	√	
	Transmis	96->98AF13/20/22	OBD-16	√	√	√	√	
VectraB2. 2	Motor	Gas97->04MotronicM1. 5. 4	OBD-16	√	√	√	√	√
	ABS	97->00Bosch5/TC	OBD-16	√	√	√	√	
	AirBag	97->00SDM-0	OBD-16	√	√	√	√	
	Alarme	97->00GMAalarme1	OBD-16	√	√	√	√	√
		02->GMAalarme2	OBD-16	√	√	√	√	√
	Imobiliz	97->GMIMOB. 1	OBD-16	√	√	√	√	√
	Painel	02->Instrument. GM2	OBD-16	√	√	√	√	√
		97->99LCDMultiplo	OBD-16	√	√	√	√	
	97->99LCDMultiplo-2	OBD-16	√	√	√	√		
	Transmis	97->98AF13/20/22	OBD-16	√	√	√	√	
VectraB2. 216V	Motor	Gas97->04MotronicM1. 5. 4	OBD-16	√	√	√	√	√
	ABS	97->00Bosch5/TC	OBD-16	√	√	√	√	
	AirBag	97->00SDM-0	OBD-16	√	√	√	√	
	Alarme	97->00GMAalarme1	OBD-16	√	√	√	√	√
		02->GMAalarme2	OBD-16	√	√	√	√	√
	Imobiliz	97->GMIMOB. 1	OBD-16	√	√	√	√	√
	Painel	02->Instrument. GM2	OBD-16	√	√	√	√	√
		97->99LCDMultiplo	OBD-16	√	√	√	√	
	97->99LCDMultiplo-2	OBD-16	√	√	√	√		
	Transmis	97->98AF13/20/22	OBD-16	√	√	√	√	
VectraC2. 0	Motor	Flex05-MotronicME7. 9. 6	OBD-16	√	√	√	√	√
	Alarme	05-GMAalarme2	OBD-16	√	√	√	√	√
	Imobiliz	05-GMIMOB. 2	OBD-16	√	√	√	√	√
VectraC2. 4	Motor	Flex05-MotronicME7. 9. 6	OBD-16	√	√	√	√	√
	Alarme	05-GMAalarme2	OBD-16	√	√	√	√	√
	Imobiliz	05-GMIMOB. 2	OBD-16	√	√	√	√	√
	Motor	Flex04->MotronicME7. 9. 6	OBD-16	√	√	√	√	√
		Gas01->MotronicM1. 5. 5	OBD-16	√	√	√	√	√
	ABS	01->ABS5. 3	OBD-16	√	√	√		
		01->04SAB6	OBD-16	√	√	√	√	

Brazil GM **V12.00** test table (Note:For reference only)

Car	system	model	conector	Functions				
				Read DTC	Clear DTC	Data Stream	Id Info	Action
Zafira-2.0	AirBag	01->02SAB6	OBD-16	√	√	√	√	
		04->SAB8	OBD-16	√	√	√	√	
	Alarme	01->ATWS+CDL	OBD-16	√	√	√	√	
		02->GMAlarme2	OBD-16	√	√	√	√	√
	Chassis	01->Contr. Veloc. GM-1	OBD-16	√	√	√	√	
		01->DirecaoGM-1	OBD-16	√	√	√	√	
	Clima	01->01GMA/C+Arref. 1	OBD-16	√	√	√	√	
Imobiliz	01->GMIMOB. 2	OBD-16	√	√	√	√	√	
Painel	01->03LCDTriplo-1	OBD-16	√	√	√	√	√	
Zafira-2.0-16V	Motor	Gas01->MotronicM1.5.5	OBD-16	√	√	√	√	√
	ABS	01->ABS5.3	OBD-16	√	√	√		
	AirBag	01->04SAB6	OBD-16	√	√	√	√	
		01->02SAB6	OBD-16	√	√	√	√	
		04->SAB8	OBD-16	√	√	√	√	
	Alarme	01->ATWS+CDL	OBD-16	√	√	√	√	
		02->GMAlarme2	OBD-16	√	√	√	√	√
	Chassis	01->Contr. Veloc. GM-1	OBD-16	√	√	√	√	
		01->DirecaoGM-1	OBD-16	√	√	√	√	
	Clima	01->01GMA/C+Arref. 1	OBD-16	√	√	√	√	
Imobiliz	01->GMIMOB. 2	OBD-16	√	√	√	√	√	
Painel	01->03LCDTriplo-1	OBD-16	√	√	√	√	√	

(*):Tested;

(?):Manual on website(www.x431.com)

Note:All description rights reserved by LAUNCH TECH.CO.,LTD