

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
106	Additional heating		√	√	√	√	√	
106REMOD ELAGE	Petrol engine	CDY BOSCH MA3.1	√	√	√			
		CDZ BOSCH MA3.1	√	√	√			
		HDY BOSCH MA3.1	√	√	√			
		HDZ BOSCH MA3.1	√	√	√			
		HFX BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		KFX MM1AP	√	√	√	√		
		KFW SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption
		NFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation
	Additional heating		√	√	√	√	√	
107	AT	controlled manual gearbox(MMT)				√		
		Power steering	√	√	√	√		
	Petrol engine	KFU MM6LPC	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFV J34P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration
	Diesel engine	8HX SID 806 DV4	√	√	√	√	√	1.Configuration
		8HZ SID 806 DV4	√	√	√	√	√	1.Configuration

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
1007 CAN	Diesel Engine	9HT BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
	ABS	ABS MK70.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60-O	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	Airbag ECU	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Vehicle protection/Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Rain/brightness sensor	√	√	√			
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		
		Power steering	√	√	√	√		1.Configuration
	Inform the driver/Audio/Communication	Multi-function display						
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
Instrument panel		√	√	√	√	√	1.Configuration	

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Telematics	√	√	√	√	√	1.Configuration
1007 VAN	Petrol engine	NFU ME744	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFV J34P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFV S2000PM2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFU MM6LP	√	√	√	√		
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6B BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	Diesel engine	8HZ SIEMENS SID 804	√	√	√	√	√	1.Configuration
		8HX SIEMENS SID804	√	√	√	√	√	1.Configuration
	ABS	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	A/T	Controlled manual gearbox(BVMP)	√	√	√	√	√	1.Configuration 2.Counters 3.Learning 4.Stalling
	Air bag	Airbag ECU	√	√	√	√		1.Configuration
	Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√			
		Steering wheel switching module	√	√	√	√		
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	
		Air conditioning	√	√	√	√	√	1.Configuration
		Power steering	√	√	√	√		
	Inform the driver/Audio/Communication	Telematics RT3	√	√	√	√	√	1.Configuration
		Multi-function display EMF	√	√	√	√		
		CD player	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		NFU BOSCH ME744	√	√	√	√	√	1.Marching 2.Initialization Adaption
		RFR MM48P	√	√	√	√	√	1.Initialization Adaption
		N6A BOSCH ME745	√	√	√	√	√	1.Marching 2.Initialization Adaption 3.Program design/Mtich
		NFU BOSCH ME745	√	√	√	√	√	1.Marching 2.Initialization Adaption 3.Program design/Mtich

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	N6A BOSCH ME744 FLEX FUEL	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		N6A BOSCH ME744	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapation
		KFX MM1AP	√	√	√	√		
		KFU MM6LP	√	√	√	√		1.Initialization Adapation
		HFZ MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Injection ECU initialisation
		HFY MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Injection ECU initialisation
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		K6C MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Injection ECU initialisation
		HFX MM4.8P	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		RFK MM6LP	√	√	√	√	√	1.Configuration

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
206		RFN MM6LP	√	√	√	√		1.Initialization Adapation
		7LZ MM5NP	√	√	√			
		KFW BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		NFZ BOSCH MP7.2	√	√	√	√	√	
		KFW J34P	√	√	√	√	√	1.Configuration
		K6D J34P	√	√	√	√	√	1.Configuration
		NFU J35	√	√	√	√	√	1.Configuration
	Diesel engine	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		WJZ LUCAS DCN2	√	√	√	√		
		8HX BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
		8HX/8HZ BOSCH EDC16C3 EURO3	√	√	√	√	√	1.Configuration
	ABS	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		Anti-lock brakes TEVES (ABS BOSCH 5.3)	√	√	√	√	√	1.air bleed
	A/T	AL4 automatic gearbox	√	√	√	√	√	1.Marchting 2.Initialization Adapation 3.Accelebration pedal 4.Oil wear counter
		ZF 4HP20 AT	√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
		Electric pump unit(power steering)	√	√	√	√		
	IP	Instrument panel	√	√	√	√	√	1.Marchting
		BSI	√	√	√	√	√	1.Initialization Adaption 2.key program
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
		Alarm	√	√	√	√	√	1.Configuration
	Visibility/Lighting	Driving school	√			√	√	
		Rain/brightness sensor	√	√	√			
	Driver information	Display/Telematics	√	√	√	√	√	1.Marchting
		on-board navigation system	√	√	√	√		
		Instrument panel	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD Player	√	√	√	√	√	
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Air bag and seat belt	√	√	√			1.Marchting
		Left side airbag	√	√	√			1.Marchting
		Right side airbag	√	√	√			1.Marchting
		HFX MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	HFY MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation
		HFZ MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation
		K6C MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation
		K6D SAGEM S2000	√	√	√	√		
		KFU MM6LP	√	√	√	√		
		KFW BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFW J34P	√	√	√	√	√	1.Configuration
		KFW SAGEM S2000	√	√	√	√		
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		KFX MM1AP	√	√	√	√		
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6A BOSCH ME7.4.4FLEX FUEL	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	NFU BOSCH ME7.4.4	√	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
206 MUX		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU J35	√	√	√	√	√	1.Configuration
		K6D J34P	√	√	√	√	√	1.Configuration
		NFZ BOSCH MP7.2	√	√	√	√	√	
		RFK MM6LP	√	√	√	√	√	1.Configuration
		RFN MM6LP	√	√	√	√		
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFR MM48P	√	√	√	√	√	1.Initialization Adaption
	Diesel engine	8HX/8HZ BOSCH EDC16C3 EURO3	√	√	√	√	√	1.Configuration
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		
		9HT BOSCH EDC16C3	√	√	√	√		
		9HY BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration	
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
AT	AL4 automatic gearbox	√	√	√	√			



## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
206 +	AT	AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption 3. Oil wear counter
	Active safety	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal 4.Initialization Adaption
		Air-bag	√			√		1.Configuration 2.lock and unlock
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
		Alarm	√	√	√	√	√	1.Configuration
		Rain/brightness sensor	√	√	√			
	Inform the driver/Audio/Communication	Display/Telematics	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
Instrument panel		√	√	√	√	√	1.Configuration	
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Programming 2.Initialization Adaption
		N6B BOSCH ME7.4.5	√	√	√	√	√	1.Programming 2.Initialization Adaption

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	NFU BOSCH ME7.4.5	√	√	√	√	√	1.Programming 2.Initialization Adaption
		KFU MM6LPC	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FW MEV17.4	√	√	√	√	√	1.Configuration
		5FX MED17.4	√	√	√	√		
		5FY MED17.4	√	√	√	√		
		8FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8FR MEV17.4	√	√	√	√		
		MEV17.4 EVO	√	√	√	√	√	1.Configuration
		KFV J34P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	Diesel engine	8HZ BOSCH EDC16C3 EURO4	√	√	√	√		
		9HX BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		
		9HV BOSCH EDC16C3	√	√	√	√	√	1.Configuration
		9HY BOSCH EDC16C3	√	√	√	√		
		9HT BOSCH EDC16C3	√	√	√	√		
8HZ BOSCH EDC16C3 EURO4		√	√	√				
9HL HDI SID807		√	√	√	√			
9HR HDI SID807		√	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
207CAN		9HY BOSCH EDC16C3 EUR04 (CAN)	√	√	√	√		
		Multiplexed additive adding pump ECU	√	√	√			
	AT ECU	AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		colltrolled manual gearbox(BVMP)	√	√	√	√	√	1.Configuration 2.Counters 3.Learning 4.Stalling
	ABS	ABS MK70.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60-O	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
		Built-in systems interface(BSI)	√	√	√			
	Air bag	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Power steering	√	√	√	√		
	Inform the driver/Audio/Communication	Muti-function display	√	√	√			
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√			
		Telamatics	√	√	√	√	√	1.Configuration
		Battery charge status unit	√	√	√	√		1.Configuration
		Warning light showing seat belt not fastened	√					
	Vehicle protection/Management of accesses	Alarm	√	√	√			
	Visibility/Lighting/Signalling	Rain/Brightness sensor	√	√	√			
		Driving school module	√	√			√	
Static AFS		√	√	√				
Petrol engine	KFW J34P	√	√	√	√	√	1.Configuration	
Diesel engine	8HZ BOSCH EDC16C3 EURO4	√	√	√	√			
	9HY BOSCH EDC16C3 EUR04	√	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
207 VAN	AT	AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adapation 3. Oil wear counter
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
	Inform the driver/Audio/Communication	Display/Telematics/AMF	√	√	√	√	√	1.Configuration
		Display/Telematics/RT3	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		Instrument panel	√	√	√	√	√	1.Configuration
		Alarm	√	√	√	√	√	1.Configuration
	Active and passive safety	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
		Air bags	√	√	√	√		1.Configuration 2.lock and unlock
		Rain/brightness sensor	√	√	√			
		NFU Or N6A ME749	√	√	√	√		
	N6A ME749 BIO FLEX	√	√	√	√			
	KFW ME749	√	√	√	√			
	KFW ME749 BIO FLEX	√	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
207i	Petrol engine	KFW J34P	✓	✓	✓	✓		
		HFX J34P	✓	✓	✓	✓		
		N6B Or N6A Or NFU ME745	✓	✓	✓	✓		
		HFV V34.3	✓	✓	✓	✓		
		KFT V34.3	✓	✓	✓	✓		
	Diesel engine	WJY DCN2	✓	✓	✓	✓		
		RHY EDC15C2	✓	✓	✓	✓		
		8HZ BOSCH EDC16C3 EURO4	✓	✓	✓	✓		
		9HY BOSCH EDC16C3 EURO4	✓	✓	✓	✓		
		8HR EDC17C10_BR2	✓	✓	✓	✓		
	AT	AL4 AT8 automatic gearbox	✓	✓	✓	✓		
	Driving assistance/Comfort	Heating/ventilation	✓	✓	✓	✓		
	Inform the driver/Audio/Communication	Display/Telematics	✓	✓	✓	✓		
		Steering wheel switching module	✓	✓	✓	✓		
		Radio	✓	✓	✓	✓		
		CD changer	✓	✓	✓	✓		
		Instrument panel	✓	✓	✓	✓		
		Stolen vehicle location control unit	✓	✓	✓	✓		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Vehicle protection/Management of accesses	Alarm	√	√	√			
	Active and passive safety	ABS MK70	√	√	√	√		
		ESP MK60	√	√	√	√		
		Air bags	√	√	√			
Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√				
3008	Diesel engine	5FX MED17.4	√	√	√	√		
		9HZ EDC16C3	√	√	√	√	√	1.Configuration
		9HL HDI SID807	√	√	√	√		
		9HR HDI SID807	√	√	√	√		
		RHE DCM3.5	√	√	√	√		
		RHH DCM3.5	√	√	√	√		
		DCM3.5	√	√	√	√	√	1.Configuration 2.Filter
	Petrol engine	5FV MED17.4	√	√	√	√		
		5FW MEV17.4	√	√	√	√		
	AT ECU	CFC300P gearbox	√	√	√	√	√	
		AM6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AT6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2.Oil wear counter
	Vehicle protection/Management of	Alarm	√	√	√	√	√	1.Configuration
Driver's door control panel		√	√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Inform the driver/Audio/Communication	Multifunction display (EMF)	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Battery charge status unit	√	√	√	√		1.Configuration
	Driving assistance/Comfort	Telematics	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Parking assistance	√	√	√	√	√	1.Configuration
	Visibility/Lighting/Signalling	Under inflation detection	√	√	√	√		
		Rain sensor	√	√	√			
		Headlamp height corrector	√	√	√	√	√	1.Configuration 2.Calibration
306	Petrol engine	HDY BOSCH MA3.1	√	√	√			
		KFX MM1AP	√	√	√	√		
		HDZ BOSCH MA3.1	√	√	√			
		RFS MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
	Air bag	Air bag and seat belt	√	√	√			1.Marching
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		NFZ BOSCH MP7.2	√	√	√	√	√	
		KFX MM1AP	√	√	√	√		
		KFX SAGEM SL96	√	√	√	√	√	1.Initialization Adaption

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
306REMOD ELAGE	Petrol engine	LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapation
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adapation
		NFT BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		NFV BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		RFS MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Ignition advance setting
	Diesel engine	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		WJZ LUCAS DCN2	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
	ABS	ABS BOSCH 5.3	√	√	√	√	√	
	A/T	AL4 Gearbox	√	√	√	√	√	1.Marchting 2.Initialization Adapation 3.Accelebration pedal 4.Oil wear counter
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting
		NFU BOSCH ME744	√	√	√	√	√	1.Marchting 2.Initialization Adapation

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1..Initialization Adapation
		RFN MM4MP2(Motorised butterfly)	√	√	√	√	√	
		KFU MM6LP	√	√	√	√		1.Initialization Adapation
		RFK MM6LP	√	√	√	√		1.Initialization Adapation
		RFN MM6LP	√	√	√	√		1.Initialization Adapation
	Diesel engine	RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		9HY BOSCH EDC16C3	√	√	√	√		
		RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
		RHY BOSCH EDC15C2	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function	
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation		
307 VAN		9HT BOSCH EDC16C3	√	√	√	√			
		8HZ BOSCH EDC16C3	√	√	√	√	√	1.Configuration	
		9HX BOSCH EDC16C3	√	√	√	√			
		9HY BOSCH EDC16C3 EUR04	√	√	√	√			
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration	
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration	
	ABS		TEVES MK60 ABS	√	√	√	√		
			ABS BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding
			ESP BOSCH 5.7	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
			ABS BOSCH 5.3	√	√	√	√	√	
			ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	A/T		BVA AL4	√	√	√	√	√	1.Marching 2.Oil wear counter
			ZF 4HP20 AT	√	√	√	√		
	Air bag		SAC CENTRAL	√	√	√	√		
			Air bags(SAC CENT SIEMENS)	√	√	√			1.Configuration

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Driver information	Display/Telematics/AMF	√	√	√	√	√	1.Configuration
		Display/Telematics/RT3	√	√	√	√	√	1.Configuration
		parking assistance	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	1.Configuration
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	1.Configuration
	Visibility/Lighting	Driving school	√			√	√	
	switch control	Driver's door module	√	√	√	√		
		Passenger door module	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√	√	1.Marching
		Electric pump unit(power steering)	√	√	√	√		
		Alarm	√	√	√	√	√	1.Configuration
		BSI	√	√	√	√	√	1.Marching 2.key program
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
		N6A BOSCH ME745	√	√	√	√	√	1.Programming 2.Initialization Adaption
		NFU BOSCH ME745	√	√	√	√	√	1.Programming 2.Initialization Adaption
		RFN MM6LP	√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	N6B BOSCH_ME745	√	√	√	√	√	1.Programming 2.Initialization Adaption
		KFU MM6LP	√	√	√	√		
		RFK MM6LP	√	√	√	√	√	1.Configuration
		RFJ MM6LPB	√	√	√			
		KFU MM6LPC	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU_Or_N6A_Or_N6B_ME749	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU_Or_N6A_ME749_FLEX_FUEL	√	√	√			
		RFJ MM6KP BIO Flex(EW10A FF)	√	√	√	√		
	Diesel engine	RHY_BOSCH_EDC15C2	√	√	√	√		
		RHZ_BOSCH_EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		9HV_BOSCH_EDC16C3	√	√	√	√	√	1.Configuration
		9HX_BOSCH_EDC16C3	√	√	√	√		
		9HY_BOSCH_EDC16C3_EURO	√	√	√			
		9HY_BOSCH_EDC16C3_EURO4	√	√	√			
		9HZ_BOSCH_EDC16C3	√	√	√			1.Configuration
		RHR_SIEMENS_SID_803	√	√	√	√		
		RHL_SIEMENS_SID_803	√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
307 CAN		RHL DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter
		RHR DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter
		9HT BOSCH EDC16C3	√	√	√	√		
	AT ECU	AM6L4 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		BSI	√	√	√	√		1.keys of programming
	Active and passive safety	ABS8 BOSCH	√	√	√	√	√	1.Configuration 2. Bleeding
		ABS 8.1	√	√	√	√	√	1.Configuration 2. Bleeding
		ESP 8.1	√	√	√	√	√	1.Configuration 2. Bleeding
		ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
		Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	
		Power steering	√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Under inflation detection	√	√	√	√		
	Inform the driver/Audio/Communication	Muti-function display	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√		
		Telamatics	√	√	√	√	√	1.Configuration
			Alarm	√	√	√		
	Vehicle protection/Management of accesses	Driver's door module	√	√	√	√	√	
		Passenger door module	√	√	√	√	√	
		Retractable roof	√	√	√			
		Sun roof	√	√	√			
			Rain/Brightness sensor	√	√	√		
	Visibility/Lighting/Signalling	Right headlamp beam corrector	√	√	√	√	√	1.Configuration 2.Calibration
		Left headlamp beam level corrector	√	√	√	√	√	1.Configuration 2.Calibration
		Driving school module	√	√			√	
		Steering wheel switching module	√	√	√	√		
			BSI	√	√	√		
		5FT MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adapatation

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	5FW MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FX MED17.4	√	√	√	√		
		5FV MED17.4	√	√	√	√		
		8FR MEV17.4	√	√	√	√		
		5FY MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6A ME745	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6B ME745	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU ME745	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU ME749 Bio Flex	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFJ MM6KP Bio Flex(EW10A FF)	√	√	√			
		RFJ MM6LPB	√	√	√			
		9HV EDC16C3	√	√	√	√	√	1.Configuration
		9HX EDC16C3	√	√	√	√		
	9HY EDC16C3	√	√	√	√			
	9HZ EDC16C3	√	√	√	√			
	9HL HDI SID807	√	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
308	Diesel engine	9HR HDI SID807	√	√	√	√		
		RHE DCM3.5	√	√	√	√		
		RHH DCM3.5	√	√	√	√		
		RHL DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter
		RHR DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter
		RHF DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter
	A/T	CFC300P gearbox	√	√	√	√	√	
		AM6C gearbox	√	√	√	√	√	1.Configuration 2.Oil wear counter
		AL4 gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		AM6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AT6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2.Oil wear counter
		Multiplexed additive adding pump	√	√	√			
	Vehicle protection / Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Driver's door module	√	√	√	√	√	
		ABS 8.1	√	√	√	√	√	1.Configuration 2.Bleeding

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Active and passive safety	ESP 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		Air-bag	√	√	√	√		1.Configuration 2.lock and unlock
	Driving assistance/comfort	Lane departure warning	√	√	√			
		Air conditioning	√	√	√	√	√	1.Configuration
		Electropump assembly	√	√	√			
		Drivers seat memory unit	√	√	√			
		Parking assistance	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		
	Inform the driver/Audio/Communication	Multifunction screen	√	√	√			
		Radio	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Not Fastened warning light(TNB)	√					
		Telematics	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√			
		CD player	√	√	√		√	
Audio amplifier		√	√	√				
Battery charge status unit		√	√	√	√		1.Configuration	
Services Module		√	√	√				
Rain sensor	√	√	√					

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Visibility/Lighting/Signalling	Discharge bulb with directional dipped headlamp	√	√	√			
		Driving school module	√	√			√	
	Diesel engine	RHE DCM3.5	√	√	√	√		
		RHH DCM3.5	√	√	√	√		
	Petrol engine	5FS MEV17.4	√	√	√	√		
		5FT MED17.4	√	√	√	√		
		5FU MEVD17.4.2	√	√	√	√		
		5FW MEV17.4	√	√	√	√		
		8FR MEV17.4	√	√	√	√		
		5FX MED17.4	√	√	√	√		
		5FY MED17.4	√	√	√	√		
		8FS MEV17.4	√	√	√	√		
		5FV MED17.4	√	√	√	√		
	Gearbox	AM6 Euro5 automatic gearbox	√	√	√	√		
		Multiplexed additive adding pump/Pompe mux TI	√	√	√	√		
		AT6 Euro5 automatic gearbox	√	√	√	√		
		Heating/ventilation	√	√	√	√		
Electropump assembly		√	√	√	√			
Parking assistance		√	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
RCZ	Driving assistance/Comfort	Pedestrian impact detection unit	√	√	√	√		
		Under inflation detection	√	√	√	√		
		Moving panel deflector	√	√	√	√		
		Drivers seat memory unit	√	√	√	√		
	Vehicle protection	Alarm	√	√	√	√		
		Driver's door control pad	√	√	√	√		
	Active and passive safety	Air-bag	√	√	√	√		
		ESP8.1	√	√	√	√		
	Inform the driver/Audio/Communication	Battery charge status unit	√	√	√	√		1.Configuration
		CD player	√	√	√			
		Radio	√	√	√	√		
		Portable unit	√	√	√	√		
		Instrument panel	√	√	√	√		
		Multifunction screen(EMF_A)	√	√	√	√		
		Multifunction screen(EMF_C)	√	√	√	√		
Not Fastened warning light(TNB)		√						
Control panel dot matrix display		√	√	√	√			
Steering wheel switching module		√	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		telematics/Radio navigation NG4	√	√	√	√		
		Radio	√	√	√	√		
		Audio amplifier	√	√	√			
	Visibility/Lighting/Signalling	Discharge bulbs vertical and horizontal adjustment	√	√	√	√		
		Windscreen wiper	√	√	√	√		
		Rain / brightness sensor	√	√	√			
405	Petrol engine	N6A ME7.4.4	√	√	√	√	√	1.Initialization Adapatation
		N6B ME7.4.4	√	√	√	√	√	1.Initialization Adapatation
		NFU ME7.4.4	√	√	√	√	√	1.Initialization Adapatation
		LFY BOSCH MP7.3	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		L6A SAGEM SL96	√	√	√	√		
		1600RD SL96	√	√	√	√		
		LFZ SAGEM S2000	√	√	√	√	√	1.Initialization Adapatation
		NFU J35	√	√	√	√	√	1.Configuration
	Petrol engine	KFX SAGEM SL96	√	√	√	√	√	1.Initialization Adapatation
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapatation
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√	√	1.Initialization Adapatation 2.Ignition advance setting
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adapatation

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
406	Diesel engine	RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
	Active safety	ABS BOSCH 5.3	√	√	√	√	√	
		Electronically managed suspension	√	√	√	√		
	A/T	AL4 autoadaptive automatic gearbox	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting
Petrol engine		XFX BOSCH ME 746	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adaption
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		3FZ MM4MP2	√	√	√	√	√	
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		R6F MM48P	√	√	√	√	√	1.Initialization Adaption
		RFR MM48P	√	√	√	√	√	1.Initialization Adaption
		6FZ SAGEM S2000	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RLZ SIEMENS IRIUS81	√	√	√	√	√	1.Initialization Adaption

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
406R	Diesel engine	RHY BOSCH EDC15C2	√	√	√	√		
		4HX BOSCH EDC15C2	√	√	√	√		
		RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP BOSCH 5.3	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√	
		Alarm	√	√	√	√	√	1.Configuration
		BSI	√	√	√	√		1.keys of programming
		Rain/brightness sensor	√	√	√			
	A/C	Air conditioning	√	√	√	√	√	
	Driver information	Multi-function display	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		On-board navigation system	√	√	√	√		
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	1.Configuration
A/T	AL4 autoadaptive automatic gearbox	√	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function	
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation		
	Air bag	Air bags(SAC-CENT-AUTOLIV-2)	√	√	√	√		1.Configuration 2.lock and unlock	
		Air bag and seat belt	√	√	√			1.Marchting	
		Left side airbag	√	√	√			1.Marchting	
		Right side airbag	√	√	√			1.Marchting	
	Petrol engine	XFX BOSCH ME 746	√	√	√	√	√	1.Configuration 2.Initialization Adapation	
		LFY BOSCH MP5.2	√	√	√	√			
		LFX MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Ignition advance setting	
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adapation	
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapation	
		3FZ MM4MP2	√	√	√	√	√		
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adapation	
		R6F MM48P	√	√	√	√	√	1.Initialization Adapation	
		RFR MM48P	√	√	√	√	√	1.Initialization Adapation	
		6FZ SAGEM S2000	√	√	√	√	√	1.Configuration 2.Initialization Adapation	
		RLZ SIEMENS IRIUS81	√	√	√	√	√	1.Initialization Adapation	
		Diesel engine	RHY BOSCH EDC15C2	√	√	√	√		
			4HX BOSCH EDC15C2	√	√	√	√		
			RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
RHS BOSCH EDC15C2	√		√	√	√	√	1.Configuration 2.Service		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
406R COUPE		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP BOSCH 5.3	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√	
		Alarm	√	√	√	√	√	1.Configuration
		BSI	√	√	√	√		1.key program
		Rain/brightness sensor	√	√	√			
	A/C	Air conditioning	√	√	√	√	√	
	Driver information	Multi-function display	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		On-board navigation system	√	√	√	√		
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	
	A/T	AL4 autoadaptive automatic gearbox	√	√	√	√		
	Air bag	Air bags(SAC-CENT-AUTOLIV-2)	√	√	√	√		1.Configuration 2.lock and unlock
		Air bag and seat belt	√	√	√			1.Marchting
		Left side airbag	√	√	√			1.Marchting
Right side airbag		√	√	√			1.Marchting	

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
406 COUPE	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting
	A/T	AL4 autoadaptive automatic Gearbox	√	√	√	√		
	ABS	BOSCH ABS5.3	√	√	√	√		
Diesel engine		RHR SIEMENS SID803	√	√	√	√	√	1.Configuration
		RHL DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter
		RHR DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter
		RHF DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter
		RHH DCM3.5	√	√	√	√		
		4HP BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter
		4HR BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter
		4HS BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter
		4HT BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter
		9HT BOSCH EDC16C3	√	√	√	√		
		9HY BOSCH EDC16C3 EUR03	√	√	√	√	√	1.Configuration

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
407		9HZ BOSCH EDC16C3	√	√	√	√		
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration
	Petrol engine	3FZ MM6LP	√	√	√	√	√	1.Configuration
		3FY MM6LPB	√	√	√	√	√	
		6FY MM6LPB	√	√	√	√	√	1.Configuration
		6FZ S2000PM2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFN MM6LP	√	√	√	√		
		RFJ MM6KP BIO Flex(EW10A FF)	√	√	√	√		
			Diesel fuel additive control unit	√	√	√	√	√
	ABS	ESP8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP EBC 440(KWP)	√	√	√	√		
	A/T	AL4 automatic gearbox	√	√	√	√	√	1.Marching 2.Oil wear counter
		4HP20 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		AM6 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AM6 Euro5 automatic gearbox	√	√	√	√		
		Built-in systems interface(BSI)	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Air bag	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Inform the driver Audio/Communication	Muti-function display	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	
		Telematics	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
	Vehicle protection Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Driver's door module	√	√	√	√	√	
		Passenger door module	√	√	√	√	√	
	Visibility Lighting/Signalling	Control unit windscreen wipers	√	√	√	√		
		Rain/Brightness sensor	√	√	√			
		Steering wheel switching module	√	√	√	√	√	
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	
		Additional heating	√	√	√	√	√	
		Power steering	√	√	√	√	√	
		Piloted suspension	√	√	√	√	√	1.Programming of the heights 2.Programming of the type of headlamp
		Battery charge status unit	√	√	√	√		1.Configuration

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Stop and Star battery charge status unit	√	√	√	√		1.Configuration
		Under inflation detection	√	√	√	√		
4007	Diesel engine	4HK EDC16CP39	√	√	√	√		
		4HN EDC16CP39	√	√	√	√		
	Petrol engine	AFZ 4B11 MIVEC EURO4	√	√	√	√		
		SFY 4B12 MIVEC EURO5	√	√	√	√		
		SFZ 4B12 MIVEC EURO4	√	√	√	√		
	A/T	CVT gearbox	√	√	√	√		
		DCT controlled gearbox	√	√	√	√		
	Engine/Automatic Gearbox/Transmission	4x4 transmission	√	√	√	√		
		LEVIER GETRAG	√	√	√	√		
		Built-in systems interface(BSI)	√	√	√	√		
	Inform the driver/Audio/Communication	Radio	√	√	√	√		
		Navigation	√	√	√			
		Instrument panel	√	√	√	√		
		Hands Free Kit	√	√	√	√		
	Vehicle protection/Management of accesses	Coded immobiliser	√	√	√	√		
		Driver's door control panel	√	√	√	√		
Passenger's door control panel		√	√	√	√			
Rear left door control pad		√	√	√	√			
Rear right door control pad		√	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Sun roof	√	√	√	√		
	Active and passive safety	Air bag	√	√	√	√		
		ABS or ESP ECU	√	√	√	√		
		Flywheel angle sensor	√	√	√			
	Visibility Lighting/Signalling	Static AFS	√	√	√	√		
		Rain and brightness sensor						
	Driving assistance/Comfort	Air conditioning	√	√	√	√		
	Petrol engine	3FZ MM4MP2	√	√	√	√	√	
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Initialization Adapatation
		RFN MM4MP2(Motorised butterfly)	√	√	√	√	√	
		R6F MM4.8P	√	√	√	√	√	1.Initialization Adapatation
		XFX BOSCH ME7.4.6	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
	Diesel engine	RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		4HX BOSCH EDC15C2	√	√	√	√		
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
	Active safety	ESP BOSCH 5.3	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√	
		Electronically managed suspension	√			√	√	1.Configuration
		BVA ZF	√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	
007 VAN	A/T	4HP20 gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption	
	Air bag	Air bag	√	√	√				
	Driver information	Multi-function display		√	√	√	√	√	
		Parking assistance		√	√	√	√	√	
		Instrument panel		√	√	√		√	1.Configuration
		CD player		√	√	√	√	√	
		Radio		√	√	√	√	√	1.Configuration
	switch control	Driver's door control panel		√	√	√	√		
		Passenger's door control panel		√	√	√	√		
	Visibility/Lighting	Headlamp height corrector		√	√	√	√	√	
		BSI		√	√	√	√	√	1.Initialization Adaption
		storing of the driving position		√	√	√	√		
		Diesel fuel additive control unit		√	√	√	√	√	1.Marchting
A/C	Air conditioning		√	√	√	√	√	1.Configuration	
Petrol engine	3FZ MM6LP		√	√	√	√	√	1.Configuration 2.Initialization Adaption	
			√	√	√	√	√		
	XFV ME747		√	√	√	√	√	1.Configuration 2.Initialization Adaption	
		4HP BOSCH EDC16CP39		√	√	√	√		
		4HR BOSCH EDC16CP39		√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
607 CAN	Diesel engine	4HS BOSCH EDC16CP39	√	√	√	√		
		4HT BOSCH EDC16CP39	√	√	√	√		
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
	AT ECU	AM6 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		4HP20 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	Air bag	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
		Built-in systems interface(BSI)	√	√	√			
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Drivers seat memory unit	√	√	√			
		Air conditioning	√	√	√	√	√	
		Under inflation detection	√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
		Piloted suspension	√	√	√	√	√	1.Programming of the heights
		Power steering	√	√	√	√	√	
	Inform the driver/Audio/Communication	Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Telamatics	√	√	√	√	√	1.Configuration
	Vehicle protection/Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Driver's door module	√	√	√	√	√	
		Passenger door module	√	√	√	√	√	
	Visibility/Lighting/Signalling	Rain/Brightness sensor	√	√	√			
806	Petrol engine	R6F MM4.8P	√	√	√	√	√	1.Initialization Adapatation
		RFN MM4.8P	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
	Diesel engine	RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
	ABS	BOSCH ABS5.3	√	√	√	√		
	AT	AL4 autoadaptive automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adapatation 3. Oil wear counter

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Additional heating		√	√	√	√	√	
807 VAN	Diesel engine	RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHM BOSCH EDC15C2	√	√	√	√		
		RHT BOSCH EDC15C2	√	√	√	√		
		4HW BOSCH EDC15C2	√	√	√	√		
	ABS	ABR BOSCH 5.7	√	√	√	√		
		ESP BOSCH 5.7	√	√	√	√	√	
	Driver information	Display/Telematics	√	√	√	√	√	
		Warning light and odometer ECU	√	√	√	√		
		Parking assistance	√	√	√	√		
		CD player	√	√	√	√		
		Instrument panel	√	√	√	√	√	
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		radio/telematic receive control	√	√	√	√	√	
	Visibility/Lighting	Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Right headlamp beam corrector	√	√	√	√		
		Left headlamp beam level corrector	√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	switch control	Driver's door module	√	√	√	√		
		Sliding side door	√	√	√	√		
		Passenger's door module	√	√	√	√		
	A/C	WEBASTO additional heating	√	√	√	√		
		Climate control	√	√	√	√		
	Air bag	Air bag	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√		
		Alarm	√	√	√	√	√	
		Storing of the driving position	√	√	√	√		
		BSI	√	√	√	√		
	Petrol engine	3FZ MM4MP2	√	√	√	√		
		3FZ MM6LP	√	√	√	√		
		R6F MM4.8P	√	√	√	√	√	1.Initialization Adapation
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		RFN MM4MP2(Motorised butterfly)	√	√	√	√		
RFN MM6LP		√	√	√	√		1.Initialization Adapation	
XFW BOSCH ME746		√	√	√	√			
	BSI	√	√	√	√		1.keys of programming	
Petrol engine	RFJ MM6LPB	√	√	√				

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	4HW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Configuration of part mileage
		4HP EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter
		4HR EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter
		4HS EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter
		4HT EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter
		RHK SIEMENS SID 803	√	√	√			
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration
		RHM BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHT BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHH DCM3.5	√	√	√	√		
		RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
	Diesel fuel additive control unit	√	√	√	√	√	1.Configuration	
	ESP 8.1	√	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
807 CAN	ABS	ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	Air bag	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	A/T	BVA AL4	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		BVA_AM6C	√	√	√	√	√	1.Configuration 2.Oil wear counter
	Driving assistance/Comfort	Additional heating	√	√	√	√	√	
		Air conditioning	√	√	√	√	√	
		Driver's door module	√	√	√	√	√	
		Drivers seat memory unit	√	√	√			
		Parking assistance	√	√	√	√	√	1.Configuration
		Power steering GEP	√	√	√	√	√	
		Under inflation detection	√	√	√	√		
	Inform the driver/Audio/Communication	CD player	√	√	√		√	
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	
		Multi-function display	√	√	√			
		Radio	√	√	√	√	√	1.Configuration
		Telematic receiver control	√					
Telematics		√	√	√	√	√	1.Configuration	

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Vehicle protection/Management of accesses	Warning lights/odometer unit	√	√	√			
		Alarm	√	√	√			
		Front sunroof	√	√	√			
		Middle sunroof	√	√	√			
		Rear sunroof	√	√	√			
		Passenger door module	√	√	√	√	√	
		Sliding side doors module	√	√	√			
	Visibility/Lighting/Signalling	Left headlamp beam level corrector	√	√	√	√	√	
		Rain/brightness sensor	√	√	√			
		Right headlamp beam corrector	√	√	√	√	√	
		Steering wheel switching module	√	√	√			
	Diesel engine	9HL HDI SID807	√	√	√	√		
9HR HDI SID807		√	√	√	√			
9HZ EDC16C3		√	√	√	√			
RHE DCM3.5		√	√	√	√			
RHH DCM3.5		√	√	√	√			
Petrol engine	5FS MEV17.4	√	√	√	√			
	5FV MED17.4	√	√	√	√			
	5FW MEV17.4	√	√	√	√			
	5FX MED17.4	√	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
5008	Gearbox	AM6 Euro5 automatic gearbox	√	√	√	√		
		CFC300P gearbox	√	√	√	√		
		AT6 Euro5 automatic gearbox	√	√	√	√		
		Multiplexed additive adding pump/Pompe mux MGI	√	√	√	√		
		Multiplexed additive adding pump/Pompe mux TI	√	√	√	√		
	Driving assistance/Comfort	Air conditioning ECU	√	√	√	√		
		Electric parking brake	√	√	√	√		
		Electropump assembly	√	√	√	√		
		High Head Vision	√	√	√	√		
		Lane departure warning system	√	√	√	√		
		Under inflation detection	√	√	√	√		
		Parking aid	√	√	√	√		
	Assistance in complying with the inter-vehicle time (ARTIV)	√	√	√	√			
	Visibility/Lighting/Signalling	Headlamp height corrector	√	√	√	√	√	1.Configuration 2.Calibration
		Windscreen wiper	√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Rain / brightness sensor	✓	✓	✓			
	Vehicle protection	Alarm	✓	✓	✓	✓		
		Driver's door control pad	✓	✓	✓	✓		
	Active and passive safety	Airbag ECU	✓	✓	✓	✓		
		Active and passive safety	✓	✓	✓	✓		
		Network isolation unit	✓	✓	✓	✓		
		Anti-slip mode selector	✓	✓	✓	✓		
	Inform the driver/Audio/Communication	Battery charge status unit	✓	✓	✓	✓		1.Configuration
		Control panel dot matrix display	✓	✓	✓	✓		
		Multifunction display(EMF_A)	✓	✓	✓	✓		
		Multifunction display(EMF_C)	✓	✓	✓	✓		
		Not Fastened warning light(TNB)	✓					
		Services module	✓	✓	✓	✓		
		Steering wheel switching module	✓	✓	✓	✓		
		Independent telematic unit	✓	✓	✓	✓		
		Control panel	✓	✓	✓	✓		
		telematics/RNEG radio navigation	✓	✓	✓	✓		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
		telematics/Radio navigation NG4	√	√	√	√		
		Radio	√	√	√	√		
		CD player	√	√	√			
		Audio amplifier	√	√	√			
	Petrol engine	HDY BOSCH MA3.1	√	√	√			
		HDZ BOSCH MA3.1	√	√	√			
		HFX BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		KFX MM1AP	√	√	√	√		
		KFX SGEAM SL96	√	√	√	√	√	1.Initialization Adaption
		LFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		NFU BOSCH ME7.4.4	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		RFN MM6LP	√	√	√	√		1.Initialization Adaption
		KFW SAGEM S2000PM1	√	√	√	√	√	1.Configuration 2.Initialization Adaption

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
PARTNER		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6B BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFW SAGEM S2000PM2	√	√	√	√		
		HFX MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFW J34P	√	√	√	√	√	1.Configuration
	Diesel engine	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
		RHY BOSCH EDC15C2	√	√	√	√		
		9HX BOSCH EDC16C3	√	√	√	√		
		9HW BOSCH EDC16C3	√	√	√	√	√	1.Configuration
		WJZ LUCAS DCN2	√	√	√	√		
	ABS	BOSCH ABS5.3	√	√	√	√		
		ABS BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP BOSCH 5.7						
		ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		ABS 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
	Inform the driver/Audio/Communication	Telematics	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		Radio PHILIPS	√	√	√	√	√	1.Configuration
		Radio CLARION	√	√	√	√	√	1.Configuration
		BSI	√	√	√	√		1.keys of programming
	A/C	WEBASTO additional heating	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marching
		Air bags(SAC CENT AUTOLIV)	√	√	√	√		1.Configuration 2.lock and unlock
	Additional heating	√	√	√	√	√		
	Petrol engine	N6A ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6B ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFR ME745	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		9HV EDC16C3	√	√	√	√	√	1.Configuration

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
PARTNER B9	Diesel engine	9HW EDC16C3	√	√	√	√	√	1.Configuration
		9HT EDC16C3	√	√	√	√	√	1.Configuration
		9HX EDC16C3	√	√	√	√	√	1.Configuration
		9HL HDI SID807	√	√	√	√		
		9HZ EDC16C3	√	√	√	√	√	1.Configuration
	Active and passive safety	ABS 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		Air bags	√	√	√	√		1.Configuration 2.lock and unlock
		Alarm	√	√	√	√	√	1.Configuration
	Visibility/Lighting/Signalling	Rain sensor	√	√	√			
	Inform the driver/Audio/Communication	Multifunction display (EMF)	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Battery charge status unit	√	√	√	√		1.Configuration
		Telematics	√	√	√	√	√	1.Configuration
	Driving assistance/Comfort	Parking assistance	√	√	√	√		1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Driving assistance/comfort	Power steering	√	√	√	√	√	
		Under inflation detection	√	√	√	√		
EXPERT	Petrol engine	R6F MM4.8P	√	√	√	√	√	1.Initialization Adaption
		RFN MM4.8P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
	Diesel engine	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHX BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
	AT	AL4 autoadaptive automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption 3. Oil wear counter
	ABS	BOSCH ABS5.3	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Additional heating		√	√	√	√	√	
	Petrol engine	RFH MM6KP(EW10A)	√	√	√	√	√	1.Configuration
	Diesel engine	9HT BOSCH EDC16C3	√	√	√	√		
		9HU BOSCH EDC16C3-EDC16C34	√	√	√	√	√	1.Configuration
		RHH DCM3.5	√	√	√	√		
		RHG SIEMENS SID 803	√	√	√	√	√	1.Configuration
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration



## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Inform the driver/Audio/Communication	Multi-function display	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Telematics	√	√	√	√	√	1.Configuration
Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√				
BOXER	Petrol engine	MM48p 2L essence plombee	√	√	√	√		
		MM48p 2L dual fuel(LPG)	√	√	√	√		
		MM48p 2L Omeeaded petrol	√	√	√	√		
	Diesel engine	2.0L HDI BOSCH EDC15C7		√	√	√	√	
BOXER 3	Active and passive safety	ABS 8.0	√	√	√	√	√	1.Bleeding
		ESP 8.0	√	√	√	√	√	1.Bleeding 2.Steering wheel angle sensor calibration
		ASR 8.0	√	√	√	√	√	1.Bleeding
		Power steering	√			√		
BOXER 3 minibus	Active and passive safety	ABS 8.0	√	√	√	√	√	1.Bleeding
		ESP 8.0	√	√	√	√	√	1.Bleeding 2.Steering wheel angle sensor calibration
		ASR 8.0	√	√	√	√	√	1.Bleeding

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
		Power steering	√			√		
HOGGAR	Petrol engine	NFU Or N6A ME749	√	√	√	√		
		N6A ME749 BIO FLEX	√	√	√	√		
		KFW ME749	√	√	√	√		
		KFW ME749 BIO FLEX	√	√	√	√		
		KFW J34P	√	√	√	√		
		HFX J34P	√	√	√	√		
		TU5JP4 ME745	√	√	√	√		
		HFV V34.3	√	√	√	√		
		KFT V34.3	√	√	√	√		
	Diesel engine	WJY DCN2	√	√	√	√		
		RHY EDC15C2	√	√	√	√		
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		
		8HR EDC17C10_BR2	√	√	√	√		
	AT	AL4 AT8 automatic gearbox	√	√	√	√		
	Driving assistance/Comfort	Heating/ventilation	√	√	√	√		
	Inform the driver/Audio/Communication	Display/Telematics	√	√	√	√		
		Steering wheel switching module	√	√	√	√		
		Radio	√	√	√	√		
		CD changer	√	√	√	√		

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Instrument panel	√	√	√	√		
		Stolen vehicle location control unit	√	√	√	√		
	Vehicle protection/Management of accesses	Alarm	√	√	√			
	Active and passive safety	ABS MK70	√	√	√	√		
		ESP MK60	√	√	√	√		
		Air bags	√	√	√			
	Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√			

## PEUGEOT V42.30 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions				
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation

CONNECTOR	X431		DIAGUN				
SMART OBD	For all the cars except 307/607 can model cars after 2006 cars.		N/A				
OBD 16C	For all the cars except 307/607 can model cars after 2006 cars.		N/A				
CANBUS II	Just test 307/607 can model cars after 2006 cars. And need to add PEUGEOT/CITROEN-16 Converter connector.		N/A				
diagun connector	N/A		For all the cars.				
SUPER 16	For all the cars.		N/A				