

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others
						Sys. Info.	Read code	Clear code	Data stream	Actuation			
ALTO		ENGINE	HA12S	F6A-NA	98.10 -- 00.12	√	√	√	√				
				F6A-TURBO	99.10 -- 00.12	√	√	√	√				
			HA12V	F6A-NA	98.10 -- 00.12	√	√	√	√				
				F6A-NA	99.10 -- 00.12	√	√	√	√				
			HA22S	K6A-TURBO	98.10 -- 00.12	√	√	√	√				
				K6A-NA-リターン	98.10 -- 01.04	√	√	√	√				
				K6A-TURBO-VVT	98.10 -- 99.10	√	√	lis	√				
				K6A-NA	98.10 -- 99.10	√	√	√	√				
				K6A-NA-VVT	K6A-NA-VVT	99.10 -- 00.12	√	√	√	√			
					K6A-NA-VVT	99.10 -- 00.12	√	√	√	√			
			HA23S	K6A-NA	00.12 --	√	√	√	√	√			
				K6A-NA-VVT	00.12 -- 02.04	√	√	√	√	√			
				K6A-NA-リターン	01.04 --	√	√	√	√	√			
				K6A-NA-VVT U-LEV	K6A-NA-VVT U-LEV	02.04 -- 03.06	√	√	√	√			
			K6A-NA-VVT U-LEV		02.04 -- 03.06	√	√	√	√	√			
			HA23V	K6A-NA	00.12 --	√	√	√	√	√			
				K6A-NA-VVT U-LEV	K6A-NA-VVT U-LEV	02.04 -- 03.06	√	√	√	√	√		
			K6A-NA-VVT U-LEV		K6A-NA-VVT U-LEV	02.04 -- 03.06	√	√	√	√	√		
				A/T	HA22S(Only 2WD)		99.10 -- 00.12	√	√	√	√		
			HA12V			98.10 -- 99.10	√	√	√	√			
			HA22S			99.05 -- 01.04	√	√	√	√			
			HA23S			01.04 -- 01.06	√	√	√	√			
			HA12V			98.10 -- 00.12	√	√	√	√			
			HA12S		98.10 -- 01.04	√	√	√	√				

## Suzuki V33.00 Diagnostics List (Note: For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
		ABS	HA22S		98.10 -- 01.04	√	√	√	√			
			HA23V		00.12 --	√	√	√	√	√		
			HA23S		00.12 --	√	√	√	√	√		
		SRS	HA12V		98.10 -- 00.12	√	√	√	√			
			HA12S		98.10 -- 01.04	√	√	√	√			
			HA22S		98.10 -- 01.04	√	√	√	√			
			HA23V		00.12 --	√	√	√	√			
			HA23S		00.12 --	√	√	√	√			
		JIMNY	ENGINE	JB23W	K6A-TURBO	98.10 -- 99.10	√	√	√	√		
						99.10 -- 02.01	√	√	√	√		
						02.01 --	√	√	√	√	√	
			A/T	JB23W		98.10 --	√	√	√	√		
			ABS	JB23W		98.10 -- 00.04	√	√	√	√		
						00.04 --	√	√	√	√	√	
SRS	JB23W		98.10 --	√	√	√	√					
JIMNY WIDE	ENGINE	JB33W	G13B	98.01 -- 00.04	√	√	√	√				
		JB43W	M13A-NA-VVT	00.04 --	√	√	√	√	√			
	A/T	JB33W		98.01 -- 00.04	√	√	√	√				
		JB43W		00.04 --	√	√	√	√				
	ABS	JB33W		98.01 -- 00.04	√	√	√	√				
		JB43W		00.04 --	√	√	√	√	√			
	SRS	JB33W		98.10 -- 00.04	√	√	√	√				
		JB43W		00.04 --	√	√	√	√				
JIMNY 1300 SIERRA	ABS	JB32W		96.09 -- 98.01	√	√	√	√				

## Suzuki V33.00 Diagnostics List (Note: For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others
						Sys. Info.	Read code	Clear code	Data stream	Actuation			
	JIMNY 660	ABS			96.09 -- 98.10	√	√	√	√				
			HN21S	K6A-TURBO	98.10 -- 01.04	√	√	√	√				
				K6A-TURBO	98.10 -- 01.04(4WD)	√	√	√	√				
				K6A-TURBO	98.10 -- 99.10(2WD)	√	√	√	√				
				K6A-NA	98.10 -- 99.03	√	√	√	√				
				K6A-NA-VVT	00.10 -- 01.04	√	√	√	√	√			
				K6A-TURBO-NS control	99.10 -- 01.04(2WD)	√	√	√	√				
				K6A-NA-VVT	00.10 -- 01.04	√	√	√	√				
			HN11S	F6A-TURBO	98.10 -- 01.04	√	√	√	√				
				F6A-TURBO	98.10 -- 99.10	√	√	√	√				
				F6A-TURBO	99.10 -- 01.04	√	√	√	√				
			HN12S	F6A-TURBO	01.04 -- 01.11	√	√	√	√				
				F6A-TURBO	01.04 -- 01.11	√	√	√	√	√			
			ENGINE	K6A-NA-VVT	01.04 -- 01.11	√	√	√	√	√			
				K6A-NA-VVT	01.04 -- 01.11	√	√	√	√	√			
				K6A-TURBO	01.04 -- 01.11	√	√	√	√	√			
				K6A-TURBO	01.04 -- 01.11(4WD)	√	√	√	√	√			
				K6A-TURBO-NS control	01.04 -- 01.11(2WD)	√	√	√	√	√			
				K6A-NA-VVT	01.11 -- 02.11	√	√	√	√	√			
				K6A-NA-VVT	01.11 -- 02.04	√	√	√	√	√			

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
Kei	HN22S		K6A-M TURBO	01.11 --	√	√	√	√	√			
			K6A-TURBO	01.11 --	√	√	√	√	√			
			K6A-M TURBO	01.11 -- 03.05	√	√	√	√	√			
			K6A-TURBO	01.11 -- 03.05	√	√	√	√	√			
			K6A-TURBO anti-alip control(2WD)	01.11 -- 03.05	√	√	√	√	√			
			K6A-NA-VVT U-LEV	02.04 -- 03.06(2WD)	√	√	√	√	√			
			K6A-NA-VVT U-LEV	02.11 -- (2WD)	√	√	√	√	√			
			K6A-M TURBO	03.05 --	√	√	√	√	√			
			K6A-TURBO	03.05 --	√	√	√	√	√			
			K6A-TURBO anti-alip control(2WD)	03.05 --	√	√	√	√	√			
			K6A-NA-VVT U-LEV	03.06 -- (2WD)	√	√	√	√	√			
	A/T	HN11S		99.03 -- 99.10	√	√	√	√				
	ABS	HN11S			00.10 -- 01.04	√	√	√	√	√		
		HN21S			00.10 -- 01.04	√	√	√	√	√		
		HN12S			01.04 --	√	√	√	√	√		
		HN22S			01.04 --	√	√	√	√	√		
		HN11S			98.10 -- 00.10	√	√	√	√			
		HN21S			98.10 -- 00.10	√	√	√	√			
		HN22S			01.04 --	√	√	√	√	√		

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions							
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others	
		SRS	HN11S		98.10 -- 01.04	√	√	√	√				
			HN21S		98.10 -- 01.04	√	√	√	√				
			HN12S		01.04 --	√	√	√	√				
			HN22S		01.04 --	√	√	√	√				
		EMCD	HN22S		02.11 -- 03.03	√	√	√	√				
			MC11S	F6A-NA		98.10 -- 99.10	√	√	√	√			
				F6A-TURBO		98.10 -- 00.12	√	√	√	√			
				F6A-TURBO		98.10 -- 00.12	√	√	√	√			
				F6A-TURBO		99.10 -- 00.12	√	√	√	√			
			MC21S	K6A-NA		98.10 -- 99.10	√	√	√	√			
				K6A-NA-VVT		98.10 -- 00.12	√	√	√	√			
				K6A-TURBO		98.10 -- 00.12	√	√	√	√			
				K6A-TURBO-NS control		98.10 -- 99.10	√	√	√	√			
				K6A-NA-VVT		99.04 -- 00.12	√	√	√	√			
				K6A-TURBO		99.10 -- 00.12	√	√	√	√			
				K6A-TURBO-NS control		99.10 -- 00.12	√	√	√	√			
			MC11S repit	F6A-NA-CNG		99.07 -- 01.03	√	√	√	√			
			MC12S	F6A-TURBO		00.12 -- 01.11	√	√	√	√			
				F6A-TURBO		00.12 -- 01.11	√	√	√	√	√		
						K6A-NA-VVT		00.12 -- 01.11	√	√	√	√	√
K6A-NA-VVT		00.12 -- 01.11				√	√	√	√	√			
K6A-TURBO		00.12 -- 01.11				√	√	√	√	√			
K6A-TURBO		00.12 -- 01.11(4WD)				√	√	√	√	√			

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others
						Sys. Info.	Read code	Clear code	Data stream	Actuation			
WAGON R	ENGINE	MC22S		K6A-TURBO-NS control	00.12 -- 01.11(2WD)	√	√	√	√	√			
				K6A-NA-VVT	01.11 -- (4WD)	√	√	√	√	√			
				K6A-NA-VVT	01.11 -- 02.09(2WD)	√	√	√	√	√			
				K6A-NA-VVT	01.11 -- 03.06(4WD)	√	√	√	√	√			
				K6A-NA-VVT	01.11 -- 02.04(2WD)	√	√	√	√	√			
				K6A-M TURBO	01.11 -- 03.05	√	√	√	√	√			
				K6A-TURBO	01.11 -- 03.05	√	√	√	√	√			
				K6A-TURBO anti-alip control(2WD)	01.11 -- 03.05	√	√	√	√	√			
				K6A-NA-VVT U-LEV	02.04 -- (2WD)	√	√	√	√	√			
				K6A-NA-VVT U-LEV	02.04 -- 03.06(2WD)	√	√	√	√	√			
				K6A-NA-VVT U-LEV	02.09 -- (2WD)	√	√	√	√	√			
				K6A-NA(无VVT) U-LEV	02.09 -- (2WD)	√	√	√	√	√			
	K6A-HEVanti-alip control additional locking function	02.09 -- (2WD)	√	√	√	√	√						

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions							
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others	
				K6A-M TURBO	03.05 --	√	√	√	√	√			
				K6A-TURBO	03.05 --	√	√	√	√	√			
				K6A-TURBO anti-alip control(2WD)	03.05 --	√	√	√	√	√			
				K6A-NA-VVT	03.06 -- (4WD)	√	√	√	√	√			
				K6A-NA-VVT U-LEV	03.06 -- (2WD)	√	√	√	√	√			
				MC22S repit	K6A-NA-VVT-CNG	01.03 -- 03.05	√	√	√	√	√		
					K6A-NA-VVT-CNG	03.06 --	√	√	√	√	√		
				A/T	MC21S		98.10 -- 99.10	√	√	√	√		
							98.10 -- 01.06	√	√	√	√		
				ABS	MC11S		98.10 -- 00.12	√	√	√	√		
		MC21S			98.10 -- 00.12	√	√	√	√				
		MC12S			00.12 --	√	√	√	√	√			
		MC22S			00.12 --	√	√	√	√	√			
		SRS	MC11S		98.10 -- 00.12	√	√	√	√				
			MC21S		98.10 -- 00.12	√	√	√	√				
			MC12S		00.12 --	√	√	√	√				
			MC22S		00.12 --	√	√	√	√				
				01.05 --	√	√	√	√					
					DA52V	F6A-NA	99.01 -- 01.09	√	√	√	√		
						F6A-TURBO	99.01 -- 01.09	√	√	√	√		
F6A-TURBO	99.01 -- 01.09					√	√	√	√				
F6A-NA	99.01 -- 01.09					√	√	√	√				

## Suzuki V33.00 Diagnostics List (Note: For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others	
						Sys. Info.	Read code	Clear code	Data stream	Actuation				
EVERY		ENGINE	DB52V	F6A-TURBO	99.01 -- 01.09	√	√	√	√					
				F6A-TURBO	99.01 -- 01.09	√	√	√	√					
			DA52V repit	F6A-NA-CNG	99.12 -- 01.11	√	√	√	√					
			DA62V	K6A-NA	01.09 --	√	√	√	√	√				
				K6A-TURBO	01.09 -- (MT)	√	√	√	√	√				
				K6A-TURBO	01.09 -- 03.06(AT)	√	√	√	√	√				
			DA62V repit	K6A-TURBO	03.06 -- (AT)	√	√	√	√	√				
				K6A-NA-CNG	01.11 --	√	√	√	√	√				
				A/T	DA62V repit	K6A-NA-CNG	01.11 --	√	√	√	√	√		
						K6A-NA-CNG	01.11 --	√	√	√	√	√		
		A/T			DA52V		99.11 -- 01.09	√	√	√	√			
					DB52V		99.11 -- 01.09	√	√	√	√			
					DA62V		01.09 --	√	√	√	√			
		ABS			DA52V		99.11 -- 01.09	√	√	√	√			
					DB52V		99.11 -- 01.09	√	√	√	√			
					DA62V		01.09 --	√	√	√	√	√		
		SRS			DA52V	two seats airbag	00.05 -- 01.09	√	√	√	√			
					DB52V	and two seats	00.05 -- 01.09	√	√	√	√			
					DA62V	pretensioner	01.09 --	√	√	√	√			
					DA52V	driver seat airbag	99.01 -- 00.05	√	√	√	√			
					DB52V	or two seats airbag	99.01 -- 00.05	√	√	√	√			
		ENGINE			DA52T	F6A-NA	99.01 -- 01.09	√	√	√	√			
						F6A-TURBO	99.01 -- 01.09	√	√	√	√			
					DB52T	F6A-NA	99.01 -- 01.09	√	√	√	√			
						F6A-TURBO	99.01 -- 01.09	√	√	√	√			



## Suzuki V33.00 Diagnostics List (Note: For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
						√	√	√	√			
	CARRY		DA62T	K6A-NA	01.09 -- 02.04	√	√	√	√	√		
				K6A-TURBO	01.09 -- 02.05	√	√	√	√	√		
			DA63T	K6A-NA	02.05 --	√	√	√	√	√		
		ABS	DA52T		00.05 -- 01.09	√	√	√	√	√		
			DB52T		00.05 -- 01.09	√	√	√	√	√		
		SRS	DA52T	two seats airbag and two seats pretensioner	00.05 -- 01.09	√	√	√	√			
			DB52T		00.05 -- 01.09	√	√	√	√			
			DA62T		01.09 -- 02.04	√	√	√	√			
			DA63T		02.05 --	√	√	√	√			
			DA52T	driver seat airbag	99.01 -- 00.05	√	√	√	√			
	DB52T		or two seats airbag	99.01 -- 00.05	√	√	√	√				
	EVERY WAGON	ENGINE	DA52W	F6A-TURBO	99.06 -- 01.09(MT)	√	√	√	√			
				F6A-TURBO	99.06 -- 01.09(3AT)	√	√	√	√			
			DA62W	K6A-NA	01.09 --	√	√	√	√	√		
				K6A-TURBO	01.09 -- (MT)	√	√	√	√	√		
				K6A-TURBO	01.09 -- 03.06(AT)	√	√	√	√	√		
			K6A-TURBO	03.06 -- (AT)	√	√	√	√	√			
		A/T	DA52W		99.11 -- 01.09	√	√	√	√			
			DA62W		01.09 --	√	√	√	√	√		
		ABS	DA52W		99.11 -- 01.09	√	√	√	√			
			DA62W		01.09 --	√	√	√	√	√		

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
JAPAN	MR WAGON	ENGINE	MF21S	K6A-NA-VVT	01.12 -- 03.06(4WD)	√	√	√	√	√		
				K6A-NA-VVT	01.12 -- 02.04(2WD)	√	√	√	√	√		
				K6A-M TURBO	01.12 -- 03.05	√	√	√	√	√		
				K6A-TURBO	02.06 -- 03.05	√	√	√	√	√		
				K6A-TURBO anti-alip control(2WD)	02.06 -- 03.05	√	√	√	√	√		
				K6A-NA-VVT U-LEV	02.04 -- (2WD)	√	√	√	√	√		
				K6A-NA-VVT U-LEV	02.04 -- 03.06(2WD)	√	√	√	√	√		
				K6A-M TURBO	03.05 --	√	√	√	√	√		
				K6A-TURBO		√	√	√	√	√		
				K6A-TURBO anti-alip control(2WD)	03.05 --	√	√	√	√	√		
				K6A-NA-VVT	03.06 -- (4WD)	√	√	√	√	√		
				K6A-NA-VVT U-LEV	03.06 -- (2WD)	√	√	√	√	√		
		ABS	MF21S			01.12 --	√	√	√	√	√	
				two seats airbag and two seats pretensioner	01.12 --	√	√	√	√			

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others
						Sys. Info.	Read code	Clear code	Data stream	Actuation			
		SRS	MF21S	two seats airbag and two seats pretensioner and driver seat CRD	01.07 --	√	√	√	√				
LAPIN		ENGINE	HE21S	K6A-NA-VVT	02.01 -- 03.06(4WD)	√	√	√	√	√			
				K6A-NA-VVT	02.01 -- 02.04(2WD)	√	√	√	√	√			
				K6A-M TURBO	02.10 -- 03.05	√	√	√	√	√			
				K6A-NA-VVT U-LEV	02.04 -- (2WD)	√	√	√	√	√			
				K6A-NA-VVT U-LEV	02.04 -- 03.06(2WD)	√	√	√	√	√			
				K6A-M TURBO	03.05 --	√	√	√	√	√			
				K6A-TURBO	03.05 --	√	√	√	√	√			
				K6A-NA-VVT	03.06 -- (4WD)	√	√	√	√	√			
		K6A-NA-VVT U-LEV	03.06 -- (2WD)	√	√	√	√	√					
				ABS	HE21S		02.01 --	√	√	√	√	√	
		SRS	HE21S		02.01 --	√	√	√	√				
			FC22C	K6A-NA-VVT U-LEV	03.01 --	√	√	√	√	√			
		K6A-NA(no VVT) U-LEV		03.01 --	√	√	√	√	√				

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions							
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others	
TWIN	ENGINE	EC22S	K6A-HEV anti-alip control additional locking function	03.01 --	√	√	√	√	√				
				EC22S改装	K6A-NA-VVT U-LEV	03.01 --	√	√	√	√	√		
					K6A-NA(no VVT) U-LEV	03.01 --	√	√	√	√	√		
					K6A-HEV anti-alip control additional locking function	03.01 --	√	√	√	√	√		
		ABS	EC22S		03.01 --	√	√	√	√	√			
	SRS	EC22S		03.01 --	√	√	√	√					
				TA01W	G16A	96.02 -- 96.10	√	√	√	√			
						96.10 -- 97.11(OnlyMT)	√	√	√	√			
						96.10 -- 97.11(OnlyAT)	√	√	√	√			
				TA01R	G16A	96.02 -- 96.10	√	√	√	√			
96.10 -- 97.11(OnlyMT)						√	√	√	√				
96.10 -- 97.11(OnlyAT)						√	√	√	√				
TD01W				G16A	96.02 -- 96.10	√	√	√	√				
					96.10 -- 97.11(OnlyMT)	√	√	√	√				
					96.10 -- 97.11(OnlyAT)	√	√	√	√				

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others
						Sys. Info.	Read code	Clear code	Data stream	Actuation			
ESCUDO	ENGINE	TA11W	H20A	96.02 -- 96.10(OnlyAT)	√	√	√	√					
				96.02 -- 96.10(OnlyAT)	√	√	√	√					
		TD11W	H20A	96.02 -- 96.10(OnlyAT)	√	√	√	√					
				96.02 -- 96.10(OnlyAT)	√	√	√	√					
		TA51W	J20A	96.10 -- 97.11(OnlyAT)	√	√	√	√					
				96.10 -- 97.11(OnlyAT)	√	√	√	√					
				97.11 -- 00.04	√	√	√	√					
		TD51W	J20A	96.10 -- 97.11(OnlyAT)	√	√	√	√					
				96.10 -- 97.11(OnlyAT)	√	√	√	√					
				97.11 -- 00.04	√	√	√	√					
		TD61W	H25A	96.10 -- 98.03	√	√	√	√					
				98.02 -- 00.04	√	√	√	√					
		TD62W	H25A	98.02 -- 00.04	√	√	√	√					
				00.04 --	√	√	√	√	√				
		TA02W	G16A	97.11 -- 00.04	√	√	√	√					
				00.04 -- 00.12	√	√	√	√	√				
		TD02W	G16A	97.11 -- 00.04	√	√	√	√					
		TD52W	J20A	97.11 -- 00.04	√	√	√	√					

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others
						Sys. Info.	Read code	Clear code	Data stream	Actuation			
			TA52W	J20A	00.12 -- 02.11	√	√	√	√	√			
			TL52W	J20A	00.04 --	√	√	√	√	√			
		A/T	TA01W		96.02 -- 96.10	√	√	√	√				
			TA01R		96.02 -- 96.10	√	√	√	√				
			TD01W		96.02 -- 96.10	√	√	√	√				
			TA02W		00.04 -- 00.12	√	√	√	√				
			TA52W		00.12 -- 02.11	√	√	√	√				
			TL52W		00.04 --	√	√	√	√				
		ABS	TA02W		00.04 -- 00.12	√	√	√	√	√			
			TA52W		00.12 -- 02.11	√	√	√	√	√			
			TL52W		00.04 --	√	√	√	√	√			
			TD62W		00.04 --	√	√	√	√	√			
		SRS	all vehicles		97.11 -- 02.11	√	√	√	√				
			TL52W		02.11 --	√	√	√	√				
			TD62W		02.11 --	√	√	√	√				
		A/C	TL52W		02.11 --	√	√	√	√				
			TD62W		02.11 --	√	√	√	√				
		BCM	TL52W		02.11 -- 03.06	√	√	√	√	√			
			TD62W		02.11 -- 03.06	√	√	√	√	√			
			TL52W		03.06 --	√	√	√	√	√			
			TD62W		03.06 --	√	√	√	√	√			
		X-90	ENGINE	LB11S	G16A	95.10 -- 97.11	√	√	√	√			
						96.02 -- 97.05	√	√	√	√			
				GA11S	G13B	97.05 -- 98.05( Only MT,CVT)	√	√	√	√			

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others
						Sys. Info.	Read code	Clear code	Data stream	Actuation			
CULTUS CRECENT		ENGINE			97.05 -- 98.05(3AT)	√	√	√	√				
			GC21S	G15A	96.02 -- 97.05	√	√	√	√				
			GC21W	G15A	96.02 -- 97.05	√	√	√	√				
			GD31S	G16A	96.02 -- 97.05	√	√	√	√				
			GD31W	G16A	96.02 -- 97.05	√	√	√	√				
			GB31S	G16A	96.02 -- 97.05	√	√	√	√				
			GC41W	J18A	96.02 -- 02.07	√	√	√	√				
			GA21S	G15A	97.05 -- 98.05	√	√	√	√				
			GB21S	G15A	97.05 -- 98.05	√	√	√	√				
			GC21S	G16A	97.05 -- 98.05	√	√	√	√				
		GD21S	G16A	97.05 -- 98.05	√	√	√	√					
		A/T	GB31S		96.02 -- 98.05	√	√	√	√				
			GC21S		96.02 -- 98.05	√	√	√	√				
			GD31S		96.02 -- 98.05	√	√	√	√				
			GC21W		96.02 -- 98.05	√	√	√	√				
			GD31W		96.02 -- 98.05	√	√	√	√				
			GC41W		96.02 -- 02.07	√	√	√	√				
			GA11S		96.10 -- 99.06 98.05 -- 99.06	√ √	√ √	√ √	√ √				
		ABS			96.02 -- 97.05 97.05 -- 00.04	√ √	√ √	√ √	√ √				
			EPS	GA11S		97.05 -- 00.04	√	√	√	√			
		SRS	all vehicles		97.05 -- 02.07	√	√	√	√				
			GA11S	G13B	98.05 -- 00.04( only MT,CVT)	√	√	√	√				

## Suzuki V33.00 Diagnostics List (Note: For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions							
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others	
CULTUS	ENGINE				98.05 -- 00.04	√	√	√	√				
		GC21S	G15A		98.05 -- 01.10	√	√	√	√				
		GC21W	G15A		98.05 -- 02.07	√	√	√	√				
		GD31S	G16A		98.05 -- 01.10	√	√	√	√				
		GB31S	G16A		98.05 -- 01.10	√	√	√	√				
		GD31W	G16A		98.05 -- 02.07	√	√	√	√				
		A/T	GC21S			98.05 -- 01.10	√	√	√	√			
			GD31S			98.05 -- 01.10	√	√	√	√			
			GB31S			98.05 -- 01.10	√	√	√	√			
			GC21W			98.05 -- 02.07	√	√	√	√			
			GD31W			98.05 -- 02.07	√	√	√	√			
		ABS	GC21S			00.04 -- 01.10	√	√	√	√	√		
	GC21W				00.04 -- 02.07	√	√	√	√	√			
	GC41W				00.04 -- 02.07	√	√	√	√	√			
	GD31S				00.04 -- 01.10	√	√	√	√	√			
	GD31W				00.04 -- 02.07	√	√	√	√	√			
	WAGON R WIDE	ENGINE	MA61S	K10A-NA TURBO		97.02 -- 99.05	√	√	√	√			
			MB61S	K10A-NA TURBO		97.02 -- 99.05	√	√	√	√			
		A/T	MA61S			97.02 -- 99.05	√	√	√	√			
					98.08 -- 99.05	√	√	√	√				
MB61S					97.02 -- 99.05	√	√	√	√				
					98.08 -- 99.05	√	√	√	√				
ABS		MA61S			97.02 -- 99.05	√	√	√	√				
		MB61S			97.02 -- 99.05	√	√	√	√				
SRS	MA61S			97.02 -- 99.06	√	√	√	√					
	MB61S			97.02 -- 99.06	√	√	√	√					



## Suzuki V33.00 Diagnostics List (Note: For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others
EVERY <sup>+</sup>		ENGINE	DA32W	G13B	99.06 -- 01.05	√	√	√	√			
		A/T	DA32W		99.06 -- 01.05	√	√	√	√			
		ABS	DA32W`		99.06 -- 01.05	√	√	√	√			
		EPS	DA32W		99.06 -- 01.05	√	√	√	√			
		SRS	DA32W		99.06 -- 01.05	√	√	√	√			
SWIFT	ENGINE	HT51S	M13A-NA-VVT	00.01 -- 03.06	√	√	√	√	√			
				00.01 -- (4WD AT)	√	√	√	√	√			
		M13A-NA-VVT U-LEV	03.06 --(4WD,AT)	√	√	√	√	√				
	HT81S	M15A-NA-VVT	03.06 --	√	√	√	√	√				
	A/T	HT51S		00.01 -- 01.04	√	√	√	√				
				01.04 --	√	√	√	√				
	ABS	HT51S		00.01 --	√	√	√	√	√			
	EPS	HT51S		00.01 --	√	√	√	√				
SRS	HT51S		00.01 --	√	√	√	√					
WAGON R SOLIO	ENGINE	MA34S	M13A-NA-VVT	00.11 --	√	√	√	√	√			
		MA64S	K10A-NA-VVT	00.11 -- 02.10	√	√	√	√	√			
	A/T	MA64S		00.11 -- 02.10	√	√	√	√				
		MA34S		00.11 --	√	√	√	√				
	ABS	MA34S		00.11 --	√	√	√	√	√			
		MA64S		00.11 -- 02.10	√	√	√	√	√			
	EPS	MA34S		00.11 --	√	√	√	√				
		MA64S		00.11 -- 02.10	√	√	√	√				
SRS	MA34S		00.11 --	√	√	√	√					
	MA64S		00.11 -- 02.10	√	√	√	√					
		ENGINE	TY92W	H27A	00.12 -- 03.06	√	√	√	√	√		

## Suzuki V33.00 Diagnostics List (Note: For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions							
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others	
GRAND ESCUDO	ENGINE		TX92W	H27A U-LEV	03.06 --	√	√	√	√	√			
		A/T	TX92W		03.06 --	√	√	√	√				
		ABS	TX92W		00.12 --	√	√	√	√	√			
		SRS	TX92W		00.12 --	√	√	√	√				
		A/C	TX92W		02.11 --	√	√	√	√				
		BCM	TX92W		02.11 -- 03.06	√	√	√	√	√			
					03.06 --	√	√	√	√				
	4WD	TX92W		03.06 --	√	√	√	√					
	AERIO	ENGINE		RB21S	M15A-NA-VVT	01.01 --	√	√	√	√	√		
				RA21S	M15A-NA-VVT	01.11 --	√	√	√	√	√		
				RC51S	M18A-NA-VVT	03.01 --	√	√	√	√	√		
				RD51S	M18A-NA-VVT	03.01 --	√	√	√	√	√		
A/T			RA21S		01.11 --	√	√	√	√				
		RB21S		01.11 --	√	√	√	√					
				01.01 -- 01.11	√	√	√	√					
		RC51S		03.01 --	√	√	√	√					
RD51S			03.01 --	√	√	√	√						
ABS			RB21S		01.01 --	√	√	√	√	√			
			RA21S		01.11 --	√	√	√	√	√			
			RC51S		03.01 --	√	√	√	√	√			
			RD51S		03.01 --	√	√	√	√	√			
SRS			RB21S		01.01 --	√	√	√	√				
			RA21S		01.11 --	√	√	√	√				
			RC51S		03.01 --	√	√	√	√				
			RD51S		03.01 --	√	√	√	√				
			RB21S		02.10 --	√	√	√	√				

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others
						Sys. Info.	Read code	Clear code	Data stream	Actuation			
		A/C	RA21S		02.10 --	√	√	√	√				
			RC51S		03.01 --	√	√	√	√				
			RD51S		03.01 --	√	√	√	√				
EVERY LANDY	ENGINE	DA32W	G13B		01.05 --	√	√	√	√	√			
		A/T	DA32W		01.05 --	√	√	√	√				
		ABS	DA32W		01.05 --	√	√	√	√	√			
		EPS	DA32W		01.05 --	√	√	√	√				
		SRS	DA32W		01.05 --	√	√	√	√				
CHEVROLET CRUZE	ENGINE	HR51S	M13A-NA-VVT		01.11 --	√	√	√	√	√			
		HR81S	M15A-NA-VVT		02.12 --	√	√	√	√	√			
	A/T	HR51S			01.11 --	√	√	√	√				
		HR81S			02.12 --	√	√	√	√				
	ABS	HR51S			01.11 --	√	√	√	√	√			
		HR81S			02.12 --	√	√	√	√	√			
	EPS	HR51S			01.11 --	√	√	√	√				
		HR81S			02.12 --	√	√	√	√				
	SRS	HR51S			01.11 --	√	√	√	√				
		HR81S			02.12 --	√	√	√	√				
EMCD	HR51S			01.11 --	√	√	√	√					
WAGON R <sup>+</sup>	ENGINE	MA63S	K10A-NA-VVT		99.05 -- 00.11	√	√	√	√				
			K10A-TURBO-VVT		99.05 -- 00.11	√	√	√	√				
	A/T	MA63S		99.05 -- 00.11	√	√	√	√					
	ABS	MA63S		99.05 -- 00.11	√	√	√	√					
	EPS	MA63S		99.05 -- 00.11	√	√	√	√					
SRS	MA63S		99.05 -- 00.11	√	√	√	√						

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others
						Sys. Info.	Read code	Clear code	Data stream	Actuation			
	ESCUDO 2.0,2.5, Diesel	ABS			96.02 -- 00.04	√	√	√	√				
	ESCUDO 1.6	ABS			96.11 -- 00.04	√	√	√	√				
	EVERY EV	EV	DA52V repit	EV MOTOR	99.08 --	√	√	√	√				
				EV A/C	99.08 --	√	√	√	√				
	IGNIS	ENGINE					√	√	√	√			
		AT						√	√	√			
		ABS							√	√	√		
		SRS							√	√	√		
		EPS							√	√	√		
	WAGON R+	ENGINE							√	√	√	√	
		AT							√	√	√		
		ABS							√	√	√	√	
		EPS							√	√	√		
		SRS							√	√	√		
	SWIFT	ENGINE							√	√	√		
		AT							√	√	√		
		ABS							√	√	√		
		SRS							√	√	√		
		BCM							√	√	√		
	(D)APV/CARRY	ENGINE							√	√	√		
		AT											
		SRS							√	√	√		
	ALTO	ENGINE						√	√	√	√		

## Suzuki V33.00 Diagnostics List (Note: For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others
						Sys. Info.	Read code	Clear code	Data stream	Actuation			
OTHER THAN NORTH AMERICA	ALTO	SRS					√	√	√				
	JIMNY	ENGINE					√	√	√	√	ECM Setting		
		AT						√	√	√			
		ABS						√	√	√	√		
	MR WAGON	ENGINE									√		
		ABS						√	√	√	√		
		SRS						√	√	√			
	EVERY+/LANDY	ENGINE						√	√	√			
		AT						√	√	√			
		ABS						√	√	√			
	CARRY	ENGINE						√	√	√			
		AT						√	√	√			
		ABS						√	√	√			
	SX4	ENGINE						√	√	√	√	1 ECM Setting 2 Reset oil pressure light 3 Regeneration	
		AT						√	√	√			
		ABS						√	√	√	√		
		SRS						√	√	√			
		esp						√	√	√	√	1 Sensor calibration 2 ESP Function	
		ENGINE						√	√	√	√	1 Readiness Test 2 Keyless start registration	
		AT						√	√	√	√		
		SRS						√	√	√			

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions							
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others	
	GRAND VITARA(JB Series)	BCM					√	√		√			
		HVAC						√	√				
		ABS						√	√	√	√		
		4WD							√	√			
		ESP							√	√		√	1 Sensor calibration 2 ESP Function setting
	SAMURAI	ENGINE						√	√	√			
		ABS							√	√	√		
	LIANA(AERIO)	ENGINE						√	√	√			
		AT							√	√	√		
		ABS							√	√	√		
		SRS							√	√	√		
	GRAND VITARA/XL-7	HVAC							√	√	√		
		ENGINE							√	√	√	√	Readiness Test
		AT							√	√	√		
		SRS							√	√	√		
		BCM							√	√	√	√	
		HVAC							√	√	√		
		ABS							√	√	√	√	
			Immobilizer						√	√			
ENGINE						2004-2006		√	√	√			
AT								√	√	√			
		ABS				2004-2006		√	√	√			

## Suzuki V33.00 Diagnostics List (Note: For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions							
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others	
	VERONA	SRS					√	√	√				
		ISU					√	√	√				
		SSPS						√	√				
		TPMS						√	√	√			
	SWIFT	ENGINE				1996-2001		√	√				
	ESTEEM	ENGINE					1996-2002		√	√			
		AT							√	√			
		AIR BAG							√	√			
		ABS					1996-2002		√	√			
	FORENZA/ RENO	ENGINE					2004-2007		√	√	√	1 TEC Learn of CKP sensor(2004-2005) 2 TEC Learn of CKP sensor(2006-2007) 3 MEC Clear(2007)	
		AT							√	√	√		
		ABS					2004-2007		√	√			
		SRS							√	√			
		TPMS							√	√	√	√	TPMS ID registration with LF tool
		SSPS							√	√			
	X-90	ENGINE					1996-1998		√	√			
	AERIO	ENGINE					2002-2007		√	√			
		AT					2002-2007		√	√			
		SRS					2002-2007		√	√	√	√	System Rezero setting

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions								
						Sys. Info.	Read code	Clear code	Data stream	Actuation	Special functions	Others		
NORTH AMERICA		HVAC			2003-2007		√	√						
		ABS			2002-2007		√	√						
	SWIFT+	ENGINE			2004-2007			√	√		√	1 TEC Learn of CKP sensor(2004-2005) 2 TEC Learn of CKP sensor(2006-2007) 3 MEC Clear(2007)		
		AT			2004-2007			√	√		√	AT learned initialize		
		ABS			2004-2007			√	√		√			
		SRS			2004-2007			√	√					
	SX4	ENGINE						√	√	√				
		SRS						√	√	√				
		BCM						√	√	√	√			
		HVAC						√	√	√				
		ABS						√	√					
		4WD						√	√	√				
		ESP						√	√	√				
	GRAND VITARA(JB Series)	ENGINE				2006-2007			√	√	√	√	1 Readiness Test 2 Keyless start registration	
		AT							√	√		√	AT learned initialize	
		SRS							√	√				
		BCM							√	√		√		
		HVAC							√	√				
		ABS							√	√		√		
4WD								√	√					



## Suzuki V33.00 Diagnostics List (Note: For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others
						Sys. Info.	Read code	Clear code	Data stream	Actuation			
		ESP					√	√		√	1 Sensor calibration 2 ESP Function setting		
	XL-7/GRAND VITARA/VITARA	ENGINE			1999-2006		√	√	√	√	1 Readiness Test 2 Keyless start registration		
		AT			2007-2009	√	√	√	√	√	1. Fast Learn Adapt Process		
		SRS			1999-2006		√	√	√	√	System Rezero setting		
		BCM			2003-2007-2009		√	√	√	√			
		HVAC					√	√	√				
		TPMS					√	√	√	√	TPMS ID registration with LF tool		
		ABS			1999-2006		√	√	√				
		4WD					√	√	√	√			
		DRR			2007-2009		√	√	√	√			
		HSM			2007-2009		√	√	√	√			
		IPC			2007-2009		√	√	√	√	1. IPC Setup		
		PPS			2007-2009		√	√	√	√			
		TDM			2007-2009	√	√	√	√				
		EBCM			2007-2009		√	√	√	√			
		RFA			2009				√	√	1. Automated Bleed 2. Program Key Fobs		
	SIR			2007-2009	√	√	√	√		1. Setup New ROS			

## Suzuki V33.00 Diagnostics List (Note:For reference only)

Areas	Vehicle	System	Type	Engine model	Year	Functions						Special functions	Others
						Sys. Info.	Read code	Clear code	Data stream	Actuation			
		RCDLR			2007-2008	√	√	√	√	√	1.Program Key Fobs 2.Tire Type/Pressure Selection 3.TPM Learn Mode		
		RS			2007-2009	√	√	√	√	√	1. Setup New ROS		
		VCS			2008	√	√	√					
	SIDE KICK/SIDE KICK	ENGINE			1996-1998		√	√					
		ABS					√	√					
GST mode		ENGINE		V6 Engine			√	√	√				
				Inline Engine				√	√	√			
					Diesel Engine (Z13DT)				√	√	√		
					Diesel Engine (K9K)				√	√	√		
					Diesel Engine (DV4)				√	√	√		
					Diesel Engine (RHZ/RHW)				√	√	√		

(\*):Tested;

(?):Manual on website([www.x431.com](http://www.x431.com))

Note:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.

<b>CONNECTOR</b>	<b>X431</b>	<b>DIAGUN</b>
SMART OBD II -16	ALL SYSTEM	N/A
CANBUS II	ALL SYSTEM	N/A
Diagun connector	N/A	ALL SYSTEM
SUPER -16	ALL SYSTEM	N/A