

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	
106	Additional heating		√	√	√	√	√		
106REMOD ELAGE	Petrol engine	CDY BOSCH MA3.1	√	√	√				
		CDZ BOSCH MA3.1	√	√	√				
		HDY BOSCH MA3.1	√	√	√				
		HDZ BOSCH MA3.1	√	√	√				
		HFX BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption	
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption	
		KFX MM1AP	√	√	√	√			
		KFW SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption	
		NFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation	
	Additional heating		√	√	√	√	√		
107	Petrol engine	CFA BOSCH ME7.9.5		√	√	√			
	Diesel engine	8HT SIEMENS SID805	√	√	√	√			
	AT	controlled manual gearbox(MMT)		√	√	√			
	Active and passive safety	ABS BOSCH 8.0 C1			√	√	√		
		ESP BOSCH 8.0 C1			√	√	√		
	Airbag ECU			√	√	√	√		
	Coded anti-star				√	√	√		
Power steering			√	√	√	√			

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
1007 CAN	Petrol engine	KFU MM6LPC	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFV J34P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
	Diesel engine	8HX SID 806 DV4	√	√	√	√	√	1.Configuration
		8HZ SID 806 DV4	√	√	√	√	√	1.Configuration
		9HT BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		1.DPF
	ABS	ABS MK70.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60-O	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	Airbag ECU	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Vehicle protection/Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Rain/brightness sensor	√	√	√			
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
Air conditioning		√	√	√	√	√	1.Configuration	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Driving assistance/comfort	Under inflation detection	√	√	√	√		
		Power steering	√	√	√	√		1.Configuration
	Inform the driver/Audio/Communication	Multi-function display						
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	1.Configuration
		Telematics	√	√	√	√	√	1.Configuration
Petrol engine	NFU ME744	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives	
	KFV J34P	√	√	√	√	√	1.Configuration 2.Initialization Adaption	
	KFV S2000PM2	√	√	√	√	√	1.Configuration 2.Initialization Adaption	
	KFU MM6LP	√	√	√	√			
	N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption	
	N6B BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialization Adaption	
	NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
1007 VAN	Diesel engine	8HZ SIEMENS SID 804	√	√	√	√	√	1.Configuration
		8HX SIEMENS SID804	√	√	√	√	√	1.Configuration
	ABS	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	A/T	Controlled manual gearbox(BVMP)	√	√	√	√	√	1.Configuration 2.Counters 3.Learning 4.Stalling
	Air bag	Airbag ECU	√	√	√	√		1.Configuration
	Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√			
		Steering wheel switching module	√	√	√	√		
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	
		Air conditioning	√	√	√	√	√	1.Configuration
		Power steering	√	√	√	√		
	Inform the driver/Audio/Communication	Telematics RT3	√	√	√	√	√	1.Configuration
		Multi-function display EMF	√	√	√	√		
		CD player	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		NFU BOSCH ME744	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		RFR MM48P	√	√	√	√	√	1.Initialization Adaption
		N6A BOSCH ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU BOSCH ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		N6A BOSCH ME744 FLEX FUEL	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		N6A BOSCH ME744	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU Or N6A Or N6B ME749 BIO FIEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	KFW ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749 BIOFLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		KFX MM1AP	√	√	√	√		
		KFU MM6LP	√	√	√	√		1.Initialization Adaption
		HFZ MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation
		HFY MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation
		KFW SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption
		K6D SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
206		K6C MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Injection ECU initialisation
		HFX MM4.8P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFK MM6LP	√	√	√	√	√	1.Configuration
		RFN MM6LP	√	√	√	√		1.Initialization Adaption
		7LZ MM5NP	√	√	√			
		KFW BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFZ BOSCH MP7.2	√	√	√	√	√	
		KFW J34P	√	√	√	√	√	1.Configuration
		K6D J34P	√	√	√	√	√	1.Configuration
		NFU J35	√	√	√	√	√	1.Configuration
	Diesel engine	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		WJZ LUCAS DCN2	√	√	√	√		
		8HX BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		1.DPF
		RHY BOSCH EDC15C2	√	√	√	√		1.DPF
		8HX/8HZ BOSCH EDC16C3 EURO3	√	√	√	√	√	1.Configuration
		ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	ABS	Anti-lock brakes TEVES (ABS BOSCH 5.3)	√	√	√	√	√	1.air bleed
	A/T	AL4 automatic gearbox	√	√	√	√	√	1.Marchting 2.Initialization Adaption 3.Accelebration pedal 4.Oil wear counter
		ZF 4HP20 AT	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
		Electric pump unit(power steering)	√	√	√	√		
	IP	Instrument panel	√	√	√	√	√	1.Marchting
		BSI	√	√	√	√	√	1.Initialization Adaption 2.key program
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
		Alarm	√	√	√	√	√	1.Configuration
	Visibility/Lighting	Driving school	√			√	√	
		Rain/brightness sensor	√	√	√			
	Driver information	Display/Telematics	√	√	√	√	√	1.Marchting
		on-board navigation system	√	√	√	√		
		Instrument panel	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD Player	√	√	√	√	√	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Air bag and seat belt	√	√	√			1.Marchting
		Left side airbag	√	√	√			1.Marchting
		Right side airbag	√	√	√			1.Marchting
		HFX MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		HFY MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Injection ECU initialisation
		HFZ MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Injection ECU initialisation
		K6C MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Injection ECU initialisation
		K6D SAGEM S2000	√	√	√	√		
		KFU MM6LP	√	√	√	√		
		KFW BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		KFW J34P	√	√	√	√	√	1.Configuration
		KFW SAGEM S2000	√	√	√	√		
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapation
		KFX MM1AP	√	√	√	√		

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	N6A BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		N6A BOSCH ME7.4.4FLEX FUEL	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU Or N6A Or N6B ME749 BIO FIEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		KFW ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
206 MUX		KFW ME749 BIOFLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		NFU J35	√	√	√	√	√	1.Configuration
		K6D J34P	√	√	√	√	√	1.Configuration
		NFZ BOSCH MP7.2	√	√	√	√	√	
		RFK MM6LP	√	√	√	√	√	1.Configuration
		RFN MM6LP	√	√	√	√		
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFR MM48P	√	√	√	√	√	1.Initialization Adaption
	Diesel engine	8HX/8HZ BOSCH EDC16C3 EURO3	√	√	√	√	√	1.Configuration
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		
		9HT BOSCH EDC16C3	√	√	√	√		
		9HY BOSCH EDC16C3	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		1.DPF
		RHY BOSCH EDC15C2	√	√	√	√		1.DPF
WJY LUCAS DCN2		√	√	√	√	√	1.Configuration	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		Electric pump unit(power steering)	√	√	√	√		
	Petrol engine	KFW J34P	√	√	√	√	√	1.Configuration
		TU5JP4 ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU Or N6A ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		N6A ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
206 +		KFW ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
	AT	AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption 3. Oil wear counter
	Active safety	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal 4.Initialization Adaption
		Air-bag	√			√		1.Configuration 2.lock and unlock
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
		Alarm	√	√	√	√	√	1.Configuration
		Rain/brightness sensor	√	√	√			
	Inform the driver/Audio/Communication	Display/Telematics	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
		Instrument panel	√	√	√	√	√	1.Configuration
Petrol engine		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		N6B BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		KFU MM6LPC	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FW MEV17.4	√	√	√	√	√	1.Configuration
		5FX MED17.4	√	√	√	√		
		5FY MED17.4	√	√	√	√		
		8FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8FR MEV17.4	√	√	√	√		
		MEV17.4 EVO	√	√	√	√	√	1.Configuration
		KFV J34P	√	√	√	√	√	1.Configuration 2.Initialization Adaption

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function	
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation		
207CAN	Diesel engine	8HZ BOSCH EDC16C3 EURO4	√	√	√	√			
		9HX BOSCH EDC16C3	√	√	√	√			
		9HZ BOSCH EDC16C3	√	√	√	√		1.DPF	
		9HV BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.DPF	
		9HY BOSCH EDC16C3	√	√	√	√			
		9HT BOSCH EDC16C3	√	√	√	√			
		8HZ BOSCH EDC16C3 EURO4	√	√	√				
		9HL HDI SID807	√	√	√	√			
		9HR HDI SID807	√	√	√	√			
		9HY BOSCH EDC16C3 EURO4 (CAN)	√	√	√	√			
		Multiplexed additive adding pump ECU	√	√	√				
		AT ECU	AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
			colltrolled manual gearbox(BVMP)	√	√	√	√	√	1.Configuration 2.Counters 3.Learning 4.Stalling
			ABS MK70.1	√	√	√	√	√	1.Configuration 2.Bleeding

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	ABS	ESP MK60-O	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
		Built-in systems interface(BSI)	√	√	√			
	Air bag	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		
		Power steering	√	√	√	√		
	Inform the driver/Audio/Communication	Muti-function display	√	√	√			
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√			
		Telamatics	√	√	√	√	√	1.Configuration
		Battery charge status unit	√	√	√	√		1.Configuration
		Warning light showing seat belt not fastened	√					

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Vehicle protection/Management of accesses	Alarm	√	√	√			
	Visibility/Lighting/Signalling	Rain/Brightness sensor	√	√	√			
		Driving school module	√	√			√	
		Static AFS	√	√	√			
Petrol engine		KFW J34P	√	√	√	√	√	1.Configuration
		HFX J34P	√	√	√	√		
		HFV V34.3	√	√	√	√		
		KFT V34.3	√	√	√	√		
		TU5JP4 ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU Or N6A ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		N6A ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
207 VAN		KFW ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
	Diesel engine	WJY DCN2	√	√	√	√		
		RHY EDC15C2	√	√	√	√		
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		
		8HR EDC17C10_BR2	√	√	√	√		
	AT	AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adapation 3. Oil wear counter
	A/C	Air conditioning	√	√	√	√	√	1.Configuration
		Display/Telematics/AMF	√	√	√	√	√	1.Configuration
		Display/Telematics/RT3	√	√	√	√	√	1.Configuration

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Inform the driver/Audio/Communication	Steering wheel switching module	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		Instrument panel	√	√	√	√	√	1.Configuration
		Alarm	√	√	√	√	√	1.Configuration
	Active and passive safety	ABS MK70	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP MK60	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
		Air bags	√	√	√	√		1.Configuration 2.lock and unlock
			Rain/brightness sensor	√	√	√		
			NFU Or N6A ME749	√	√	√	√	√
		N6A ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
207i	Petrol engine	KFW ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW J34P	√	√	√	√		
		HFX J34P	√	√	√	√		
		N6B Or N6A Or NFU ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		HFV V34.3	√	√	√	√		
		KFT V34.3	√	√	√	√		
	Diesel engine	WJY DCN2	√	√	√	√		
		RHY EDC15C2	√	√	√	√		
		8HZ BOSCH EDC16C3 EURO4	√	√	√	√		
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		
		8HR EDC17C10_BR2	√	√	√	√		

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	AT	AL4 AT8 automatic gearbox	√	√	√	√		
	Driving assistance/Comfort	Heating/ventilation	√	√	√	√		
	Inform the driver/Audio/Communication	Display/Telematics	√	√	√	√		
		Steering wheel switching module	√	√	√	√		
		Radio	√	√	√	√		
		CD changer	√	√	√	√		
		Instrument panel	√	√	√	√		
		Stolen vehicle location control unit	√	√	√	√		
	Vehicle protection/Management of accesses	Alarm	√	√	√			
	Active and passive safety	ABS MK70	√	√	√	√		
		ESP MK60	√	√	√	√		
		Air bags	√	√	√			
	Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√			
Diesel engine	5FX MED17.4	√	√	√	√			
	9HZ EDC16C3	√	√	√	√	√	1.Configuration 2.DPF	
	9HL HDI SID807	√	√	√	√			
	9HR HDI SID807	√	√	√	√			
	RHE DCM3.5	√	√	√	√			
	RHH DCM3.5	√	√	√	√			

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
3008		DCM3.5	√	√	√	√	√	1.Configuration 2.Filter
	Petrol engine	5FV MED17.4	√	√	√	√		
		5FW MEV17.4	√	√	√	√		
	AT ECU	CFC300P gearbox	√	√	√	√	√	
		AM6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AT6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2.Oil wear counter
	Vehicle protection/Management of	Alarm	√	√	√	√	√	1.Configuration
		Driver's door control panel	√	√	√	√	√	
	Inform the driver/Audio/Communication	Multifunction display (EMF)	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Battery charge status unit	√	√	√	√		1.Configuration
	Driving assistance/Comfort	Telematics	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Parking assistance	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		
		Rain sensor	√	√	√			

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Visibility/Lighting/Signalling	Headlamp height corrector	√	√	√	√	√	1.Configuration 2.Calibration
306	Petrol engine	HDY BOSCH MA3.1	√	√	√			
		KFX MM1AP	√	√	√	√		
		HDZ BOSCH MA3.1	√	√	√			
		RFS MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Ignition advance setting
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
306REMOD ELAGE	Petrol engine	KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapation
		NFZ BOSCH MP7.2	√	√	√	√	√	
		KFX MM1AP	√	√	√	√		
		KFX SAGEM SL96	√	√	√	√	√	1.Initialization Adapation
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapation
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adapation
		NFT BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation
		NFV BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		RFS MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Ignition advance setting
		WJY LUCAS DCN2	√	√	√	√	√	1.Configuration

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	WJZ LUCAS DCN2	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
	ABS	ABS BOSCH 5.3	√	√	√	√	√	
	A/T	AL4 Gearbox	√	√	√	√	√	1.Marching 2.Initialization Adaption 3.Accelebration pedal 4.Oil wear counter
	Air bag	Air bag and seat belt	√	√	√			1.Marching
	Left Air bag	Left side airbag	√	√	√			1.Marching
	Right Air bag	Right side airbag	√	√	√			1.Marching
	Petrol engine	NFU BOSCH ME744	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		KFW SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption
		K6D SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1..Initialization Adaption
		RFN MM4MP2(Motorised butterfly)	√	√	√	√	√	
		KFU MM6LP	√	√	√	√		1.Initialization Adaption
		RFK MM6LP	√	√	√	√		1.Initialization Adaption
		RFN MM6LP	√	√	√	√		1.Initialization Adaption
	Diesel engine	RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		9HY BOSCH EDC16C3	√	√	√	√		
		RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
		RHY BOSCH EDC15C2	√	√	√	√		
		9HZ BOSCH EDC16C3	√	√	√	√		1.DPF
		9HT BOSCH EDC16C3	√	√	√	√		
		8HZ BOSCH EDC16C3	√	√	√	√	√	1.Configuration
		9HX BOSCH EDC16C3	√	√	√	√		
		9HY BOSCH EDC16C3 EUR04	√	√	√	√		

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	
307 VAN		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF	
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF	
		TEVES MK60 ABS	√	√	√	√			
		ABS BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding	
		ESP BOSCH 5.7	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal	
		ABS BOSCH 5.3	√	√	√	√	√		
		ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal	
		A/T	BVA AL4	√	√	√	√	√	1.Marching 2.Oil wear counter
			ZF 4HP20 AT	√	√	√	√		
		Air bag	SAC CENTRAL	√	√	√	√		
			Air bags(SAC CENT SIEMENS)	√	√	√			1.Configuration
			Display/Telematics/AMF	√	√	√	√	√	1.Configuration
			Display/Telematics/RT3	√	√	√	√	√	1.Configuration
			parking assistance	√	√	√	√	√	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Driver information	Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	1.Configuration
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	1.Configuration
	Visibility/Lighting	Driving school	√			√	√	
	switch control	Driver's door module	√	√	√	√		
		Passenger door module	√	√	√	√		
		Diesel fuel additive control unit	√	√	√	√	√	1.Marchting
		Electric pump unit(power steering)	√	√	√	√		
		Alarm	√	√	√	√	√	1.Configuration
		BSI	√	√	√	√	√	1.Marchting 2.key program
		A/C	Air conditioning	√	√	√	√	√
		N6A BOSCH ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU BOSCH ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		RFN MM6LP	√	√	√	√		

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	N6B BOSCH_ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		KFU MM6LP	√	√	√	√		
		RFK MM6LP	√	√	√	√	√	1.Configuration
		RFJ MM6LPB	√	√	√			
		KFU MM6LPC	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		NFU_Or_N6A_Or_N6B_ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		NFU_Or_N6A_ME749_FLEX_FUEL	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		RFJ MM6KP BIO Flex(EW10A FF)	√	√	√	√		
		RHY BOSCH EDC15C2	√	√	√	√		
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
307 CAN	Diesel engine	9HV BOSCH EDC16C3	√	√	√	√	√	1.Configuration 2.DPF
		9HX BOSCH EDC16C3	√	√	√	√		
		9HY BOSCH EDC16C3 EURO	√	√	√			
		9HY BOSCH EDC16C3 EURO4	√	√	√			
		9HZ BOSCH EDC16C3	√	√	√			1.Configuration 2.DPF
		RHR SIEMENS SID 803	√	√	√	√		1.DPF
		RHL SIEMENS SID 803	√	√	√	√		1.DPF
		RHL DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter 3.DPF
		RHR DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter 3.DPF
		9HT BOSCH EDC16C3	√	√	√	√		
	AT ECU	AM6L4 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AL4 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		BSI	√	√	√	√		1.keys of programming
		ABS8 BOSCH	√	√	√	√	√	1.Configuration 2. Bleeding

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Active and passive safety	ABS 8.1	√	√	√	√	√	1.Configuration 2. Bleeding
		ESP 8.1	√	√	√	√	√	1.Configuration 2. Bleeding
		ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
		Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	
		Power steering	√	√	√	√		
		Under inflation detection	√	√	√	√		
	Inform the driver/Audio/Communication	Muti-function display	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√		
	Vehicle protection/Management of	Telamatics	√	√	√	√	√	1.Configuration
		Alarm	√	√	√			
Driver's door module		√	√	√	√	√		
	Passenger door module	√	√	√	√	√		

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	accesses	Retractable roof	√	√	√			
		Sun roof	√	√	√			
	Visibility/Lighting/Signalling	Rain/Brightness sensor	√	√	√			
		Right headlamp beam corrector	√	√	√	√	√	1.Configuration 2.Calibration
		Left headlamp beam level corrector	√	√	√	√	√	1.Configuration 2.Calibration
		Driving school module	√	√			√	
		Steering wheel switching module	√	√	√	√		
	BSI	√	√	√				
Petrol engine		5FT MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FW MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		5FX MED17.4	√	√	√	√		
		5FV MED17.4	√	√	√	√		
		8FR MEV17.4	√	√	√	√		
		5FY MED17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		8FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6A ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Petrol engine	N6B ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU ME749 Bio Flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		RFJ MM6KP Bio Flex(EW10A FF)	√	√	√			
		RFJ MM6LPB	√	√	√			
		9HV EDC16C3	√	√	√	√	√	1.Configuration
	Diesel engine	9HX EDC16C3	√	√	√	√		
		9HY EDC16C3	√	√	√	√		
		9HZ EDC16C3	√	√	√	√		
		9HL HDI SID807	√	√	√	√		
		9HR HDI SID807	√	√	√	√		
		RHE DCM3.5	√	√	√	√		
		RHH DCM3.5	√	√	√	√		
		RHL DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter 3.DPF

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
308		RHR DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter 3.DPF
		RHF DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter 3.DPF
	A/T	CFC300P gearbox	√	√	√	√	√	
		AM6C gearbox	√	√	√	√	√	1.Configuration 2.Oil wear counter
		AL4 gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		AM6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AT6 Euro5 automatic gearbox	√	√	√	√	√	1.Configuration 2.Oil wear counter
		Multiplexed additive adding pump	√	√	√			
	Vehicle protection / Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Driver's door module	√	√	√	√	√	
	Active and passive safety	ABS 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		Air-bag	√	√	√	√		1.Configuration 2.lock and unlock

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Driving assistance/comfort	Lane departure warning	√	√	√			
		Air conditioning	√	√	√	√	√	1.Configuration
		Electropump assembly	√	√	√			
		Drivers seat memory unit	√	√	√			
		Parking assistance	√	√	√	√	√	1.Configuration
		Under inflation detection	√	√	√	√		
	Inform the driver/Audio/Communication	Multifunction screen	√	√	√			
		Radio	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Not Fastened warning light(TNB)	√					
		Telematics	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√			
		CD player	√	√	√		√	
		Audio amplifier	√	√	√			
		Battery charge status unit	√	√	√	√		1.Configuration
		Services Module	√	√	√			
	Visibility/Lighting/Signalling	Rain sensor	√	√	√			
		Discharge bulb with directional dipped headlamp	√	√	√			
		Driving school module	√	√			√	
		Diesel engine	RHE DCM3.5	√	√	√	√	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Diesel engine	RHH DCM3.5	√	√	√	√		
	Petrol engine	5FS MEV17.4	√	√	√	√		
		5FT MED17.4	√	√	√	√		
		5FU MEVD17.4.2	√	√	√	√		
		5FW MEV17.4	√	√	√	√		
		8FR MEV17.4	√	√	√	√		
		5FX MED17.4	√	√	√	√		
		5FY MED17.4	√	√	√	√		
		8FS MEV17.4	√	√	√	√		
		5FV MED17.4	√	√	√	√		
		Gearbox	AM6 Euro5 automatic gearbox	√	√	√	√	
	Multiplexed additive adding pump/Pompe mux TI		√	√	√	√		
	AT6 Euro5 automatic gearbox		√	√	√	√		
	Driving assistance/Comfort	Heating/ventilation	√	√	√	√		
		Electropump assembly	√	√	√	√		
		Parking assistance	√	√	√	√		
		Pedestrian impact detection unit	√	√	√	√		
		Under inflation detection	√	√	√	√		
		Moving panel deflector	√	√	√	√		
		Drivers seat memory unit	√	√	√	√		

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
RCZ	Vehicle protection	Alarm	√	√	√	√		
		Driver's door control pad	√	√	√	√		
	Active and passive safety	Air-bag	√	√	√	√		
		ESP8.1	√	√	√	√		
	Inform the driver/Audio/Communication	Battery charge status unit	√	√	√	√		1.Configuration
		CD player	√	√	√			
		Radio	√	√	√	√		
		Portable unit	√	√	√	√		
		Instrument panel	√	√	√	√		
		Multifunction screen(EMF_A)	√	√	√	√		
		Multifunction screen(EMF_C)	√	√	√	√		
		Not Fastened warning light(TNB)	√					
		Control panel dot matrix display	√	√	√	√		
		Steering wheel switching module	√	√	√	√		
		telematics/Radio navigation NG4	√	√	√	√		
Radio		√	√	√	√			
Audio amplifier	√	√	√					

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Visibility/Lighting/Signalling	Discharge bulbs vertical and horizontal adjustment	√	√	√	√		
		Windscreen wiper	√	√	√	√		
		Rain / brightness sensor	√	√	√			
405	Petrol engine	N6A ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		N6B ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		LFY BOSCH MP7.3	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		L6A SAGEM SL96	√	√	√	√		
		1600RD SL96	√	√	√	√		
		LFZ SAGEM S2000	√	√	√	√	√	1.Initialization Adaption
		NFU J35	√	√	√	√	√	1.Configuration
	Petrol engine	KFX SAGEM SL96	√	√	√	√	√	1.Initialization Adaption
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adaption

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
406	Diesel engine	RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
	Active safety	ABS BOSCH 5.3	√	√	√	√	√	
		Electronically managed suspension	√	√	√	√		
	A/T	AL4 autoadaptive automatic gearbox	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
Right Air bag	Right side airbag	√	√	√			1.Marchting	
	Petrol engine	XFX BOSCH ME 746	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adaption
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		3FZ MM4MP2	√	√	√	√	√	
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		R6F MM48P	√	√	√	√	√	1.Initialization Adaption
		RFR MM48P	√	√	√	√	√	1.Initialization Adaption
		6FZ SAGEM S2000	√	√	√	√	√	1.Configuration 2.Initialization Adaption

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
406R		RLZ SIEMENS IRIUS81	√	√	√	√	√	1.Initialization Adapation
	Diesel engine	RHY BOSCH EDC15C2	√	√	√	√		1.DPF
		4HX BOSCH EDC15C2	√	√	√	√		
		RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP BOSCH 5.3	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√	
		Alarm	√	√	√	√	√	1.Configuration
		BSI	√	√	√	√		1.keys of programming
		Rain/brightness sensor	√	√	√			
	A/C	Air conditioning	√	√	√	√	√	
	Driver information	Multi-function display	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		On-board navigation system	√	√	√	√		
Switch unit under steering wheel(COM 2000)		√	√	√	√			
Instrument panel		√	√	√	√	√	1.Configuration	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	A/T	AL4 autoadaptive automatic gearbox	√	√	√	√		
	Air bag	Air bags(SAC-CENT-AUTOLIV-2)	√	√	√	√		1.Configuration 2.lock and unlock
		Air bag and seat belt	√	√	√			1.Marchting
		Left side airbag	√	√	√			1.Marchting
		Right side airbag	√	√	√			1.Marchting
Petrol engine		XFX BOSCH ME 746	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		LFY BOSCH MP5.2	√	√	√	√		
		LFX MM1AP	√	√	√	√	√	1.Initialization Adapation 2.Ignition advance setting
		LFY SAGEM SL96	√	√	√	√	√	1.Initialization Adapation
		LFY BOSCH MP7.3	√	√	√	√	√	1.Initialization Adapation
		3FZ MM4MP2	√	√	√	√	√	
		RFN MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		R6F MM48P	√	√	√	√	√	1.Initialization Adapation
		RFR MM48P	√	√	√	√	√	1.Initialization Adapation
		6FZ SAGEM S2000	√	√	√	√	√	1.Configuration 2.Initialization Adapation
		RLZ SIEMENS IRIUS81	√	√	√	√	√	1.Initialization Adapation
		RHY BOSCH EDC15C2	√	√	√	√		1.DPF
		4HX BOSCH EDC15C2	√	√	√	√		
		RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
406R COUPE	Diesel engine	RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP BOSCH 5.3	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√	
		Alarm	√	√	√	√	√	1.Configuration
		BSI	√	√	√	√		1.key program
		Rain/brightness sensor	√	√	√			
	A/C	Air conditioning	√	√	√	√	√	
	Driver information	Multi-function display	√	√	√	√	√	1.Configuration
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		On-board navigation system	√	√	√	√		
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		Instrument panel	√	√	√	√	√	
A/T	AL4 autoadaptive automatic gearbox	√	√	√	√			

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Air bag	Air bags(SAC-CENT-AUTOLIV-2)	√	√	√	√		1.Configuration 2.lock and unlock
		Air bag and seat belt	√	√	√			1.Marchting
		Left side airbag	√	√	√			1.Marchting
		Right side airbag	√	√	√			1.Marchting
406 COUPE	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Left Air bag	Left side airbag	√	√	√			1.Marchting
	Right Air bag	Right side airbag	√	√	√			1.Marchting
	A/T	AL4 autoadaptive automatic Gearbox	√	√	√	√		
	ABS	BOSCH ABS5.3	√	√	√	√		
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
		RHL DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter 3.DPF
		RHR DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter 3.DPF
		RHF DCM3.4	√	√	√	√	√	1.Configuration 2.particle emission filter 3.DPF
		RHH DCM3.5	√	√	√	√		

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Diesel engine	4HP BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		4HR BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		4HS BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter
		4HT BOSCH EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		9HT BOSCH EDC16C3	√	√	√	√		
		9HY BOSCH EDC16C3 EUR03	√	√	√	√	√	1.Configuration
		9HZ BOSCH EDC16C3	√	√	√	√		1.DPF
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
	Petrol engine	3FZ MM6LP	√	√	√	√	√	1.Configuration
		3FY MM6LPB	√	√	√	√	√	
		6FY MM6LPB	√	√	√	√	√	1.Configuration
		6FZ S2000PM2	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		RFN MM6LP	√	√	√	√		
		RFJ MM6KP BIO Flex(EW10A FF)	√	√	√	√		

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
407		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP EBC 440(KWP)	√	√	√	√		
	A/T	AL4 automatic gearbox	√	√	√	√	√	1.Marching 2.Oil wear counter
		4HP20 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		AM6 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		AM6 Euro5 automatic gearbox	√	√	√	√		
		Built-in systems interface(BSI)	√	√	√			
	Air bag	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Inform the driver Audio/Communication	Muti-function display	√	√	√	√		
		Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	
		Telematics	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
Vehicle protection Management of accesces	Alarm	√	√	√	√	√	1.Configuration	
	Driver's door module	√	√	√	√	√		

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Management of accesses	Passenger door module	√	√	√	√	√	
	Visibility Lighting/Signalling	Control unit windscreen wipers	√	√	√	√		
		Rain/Brightness sensor	√	√	√			
		Steering wheel switching module	√	√	√	√	√	
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	
		Additional heating	√	√	√	√	√	
		Power steering	√	√	√	√	√	
		Piloted suspension	√	√	√	√	√	1.Programming of the heights 2.Programming of the type of headlamp
		Battery charge status unit	√	√	√	√		1.Configuration
		Stop and Star battery charge status unit	√	√	√	√		1.Configuration
	Under inflation detection	√	√	√	√			
	Diesel engine	4HK EDC16CP39	√	√	√	√		1.DPF
		4HN EDC16CP39	√	√	√	√		1.DPF
Petrol engine	AFZ 4B11 MIVEC EURO4	√	√	√	√			
	SFY 4B12 MIVEC EURO5	√	√	√	√			
	SFZ 4B12 MIVEC EURO4	√	√	√	√			
Δ / T	CVT gearbox	√	√	√	√			

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
4007		DCT controlled gearbox	√	√	√	√		
	Engine/Automatic Gearbox/Transmission	4x4 transmission	√	√	√	√		
		LEVIER GETRAG	√	√	√	√		
		Built-in systems interface(BSI)	√	√	√	√		
	Inform the driver/Audio/Communication	Radio	√	√	√	√		
		Navigation	√	√	√			
		Instrument panel	√	√	√	√		
		Hands Free Kit	√	√	√	√		
	Vehicle protection/Management of accesses	Coded immobiliser	√	√	√	√		
		Driver's door control panel	√	√	√	√		
		Passenger's door control panel	√	√	√	√		
		Rear left door control pad	√	√	√	√		
		Rear right door control pad	√	√	√	√		
		Sun roof	√	√	√	√		
	Active and passive safety	Air bag	√	√	√	√		
		ABS or ESP ECU	√	√	√	√		
		Flywheel angle sensor	√	√	√			
	Visibility Lighting/Signalling	Static AFS	√	√	√	√		
		Rain and brightness sensor						
	Driving assistance/Comfort	Air conditioning	√	√	√	√		
		NFU ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
408	Petrol engine	NFU ME749 Bio Flex	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
607 VAN	Petrol engine	3FZ MM4MP2	√	√	√	√	√	
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Initialization Adapation
		RFN MM4MP2(Motorised butterfly)	√	√	√	√	√	
		R6F MM4.8P	√	√	√	√	√	1.Initialization Adapation
		XFX BOSCH ME7.4.6	√	√	√	√	√	1.Configuration 2.Initialization Adapation
	Diesel engine	RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
		4HX BOSCH EDC15C2	√	√	√	√		
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
	Active safety	ESP BOSCH 5.3	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√	
		Electronically managed suspension	√			√	√	1.Configuration
			BVA ZF	√	√	√	√	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	
	A/T	4HP20 gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption	
	Air bag	Air bag	√	√	√				
	Driver information	Multi-function display		√	√	√	√	√	
		Parking assistance		√	√	√	√	√	
		Instrument panel		√	√	√		√	1.Configuration
		CD player		√	√	√	√	√	
		Radio		√	√	√	√	√	1.Configuration
	switch control	Driver's door control panel		√	√	√	√		
		Passenger's door control panel		√	√	√	√		
	Visibility/Lighting	Headlamp height corrector		√	√	√	√	√	
		BSI		√	√	√	√	√	1.Initialization Adaption
		storing of the driving position		√	√	√	√		
		Diesel fuel additive control unit		√	√	√	√	√	1.Marchting
A/C	Air conditioning		√	√	√	√	√	1.Configuration	
Petrol engine	3FZ MM6LP		√	√	√	√	√	1.Configuration 2.Initialization Adaption	
			√	√	√	√	√		
	XFV ME747		√	√	√	√	√	1.Configuration 2.Initialization Adaption	
		4HP BOSCH EDC16CP39		√	√	√	√		1.DPF
		4HR BOSCH EDC16CP39		√	√	√	√		1.DPF

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
607 CAN	Diesel engine	4HS BOSCH EDC16CP39	√	√	√	√		1.DPF
		4HT BOSCH EDC16CP39	√	√	√	√		1.DPF
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
		RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service
	AT ECU	AM6 automatic gearbox	√	√	√	√	√	1.Configuration 2. Oil wear counter
		4HP20 automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	Air bag	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
		Built-in systems interface(BSI)	√	√	√			
		Parking assistance	√	√	√	√	√	1.Configuration
		Drivers seat memory unit	√	√	√			
		Air conditioning	√	√	√	√	√	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Driving assistance/Comfort	Under inflation detection	√	√	√	√		
		Piloted suspension	√	√	√	√	√	1.Programming of the heights
		Power steering	√	√	√	√	√	
	Inform the driver/Audio/Communication	Radio	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Instrument panel	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Telamatics	√	√	√	√	√	1.Configuration
	Vehicle protection/Management of accesses	Alarm	√	√	√	√	√	1.Configuration
		Driver's door module	√	√	√	√	√	
		Passenger door module	√	√	√	√	√	
	Visibility/Lighting/Signalling	Rain/Brightness sensor	√	√	√			
806	Petrol engine	R6F MM4.8P	√	√	√	√	√	1.Initialization Adapation
		RFN MM4.8P	√	√	√	√	√	1.Configuration 2.Initialization Adapation
	Diesel engine	RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF
	ABS	BOSCH ABS5.3	√	√	√	√		

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	AT	AL4 autoadaptive automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption 3. Oil wear counter
	Air bag	Air bag and seat belt	√	√	√			1.Marching
	Additional heating		√	√	√	√	√	
	Diesel engine	RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		RHM BOSCH EDC15C2	√	√	√	√		
		RHT BOSCH EDC15C2	√	√	√	√		
		4HW BOSCH EDC15C2	√	√	√	√		
	ABS	ABR BOSCH 5.7	√	√	√	√		
		ESP BOSCH 5.7	√	√	√	√	√	
	Driver information	Display/Telematics	√	√	√	√	√	
		Warning light and odometer ECU	√	√	√	√		
		Parking assistance	√	√	√	√		
		CD player	√	√	√	√		
		Instrument panel	√	√	√	√	√	
		Switch unit under steering wheel(COM 2000)	√	√	√	√		
		radio/telematic receive control	√	√	√	√	√	
	Switch unit under steering wheel(COM 2000)	√	√	√	√			

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function	
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation		
807 VAN	Visibility/Lighting	Right headlamp beam corrector	√	√	√	√			
		Left headlamp beam level corrector	√	√	√	√			
	switch control	Driver's door module	√	√	√	√			
		Sliding side door	√	√	√	√			
		Passenger's door module	√	√	√	√			
	A/C	WEBASTO additional heating	√	√	√	√			
		Climate control	√	√	√	√			
	Air bag	Air bag	√	√	√	√			
		Diesel fuel additive control unit	√	√	√	√			
		Alarm	√	√	√	√	√		
		Storing of the driving position	√	√	√	√			
		BSI	√	√	√	√			
	Petrol engine		3FZ MM4MP2	√	√	√	√		
			3FZ MM6LP	√	√	√	√		
			R6F MM4.8P	√	√	√	√	√	1.Initialization Adaption
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Configuration 2.Initialization Adaption	
		RFN MM4MP2(Motorised butterfly)	√	√	√	√			
		RFN MM6LP	√	√	√	√		1.Initialization Adaption	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		XFW BOSCH ME746	√	√	√	√		
		BSI	√	√	√	√		1.keys of programming
	Petrol engine	RFJ MM6LPB	√	√	√			
	Diesel engine	4HW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Configuration of part mileage
		4HP EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		4HR EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		4HS EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		4HT EDC16CP39	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		RHK SIEMENS SID 803	√	√	√			
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
807 CAN		RHM BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		RHT BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		RHH DCM3.5	√	√	√	√		
		RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter
		Diesel fuel additive control unit	√	√	√	√	√	1.Configuration
	ABS	ESP 8.1	√	√	√	√		
		ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
	Air bag	Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	A/T	BVA AL4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		BVA_AM6C	√	√	√	√	√	1.Configuration 2.Oil wear counter
		Additional heating	√	√	√	√	√	
		Air conditioning	√	√	√	√	√	
		Driver's door module	√	√	√	√	√	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Driving assistance/Comfort	Drivers seat memory unit	√	√	√			
		Parking assistance	√	√	√	√	√	1.Configuration
		Power steering GEP	√	√	√	√	√	
		Under inflation detection	√	√	√	√		
	Inform the driver/Audio/Communication	CD player	√	√	√		√	
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	
		Multi-function display	√	√	√			
		Radio	√	√	√	√	√	1.Configuration
		Telematic receiver control	√					
		Telematics	√	√	√	√	√	1.Configuration
	Warning lights/odometer unit	√	√	√				
	Vehicle protection/Management of accesses	Alarm	√	√	√			
		Front sunroof	√	√	√			
		Middle sunroof	√	√	√			
		Rear sunroof	√	√	√			
		Passenger door module	√	√	√	√	√	
		Sliding side doors module	√	√	√			
	Visibility/Lighting/Signalling	Left headlamp beam level corrector	√	√	√	√	√	
		Rain/brightness sensor	√	√	√			
		Right headlamp beam corrector	√	√	√	√	√	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
		Steering wheel switching module	√	√	√			
	Diesel engine	9HL HDI SID807	√	√	√	√		
		9HR HDI SID807	√	√	√	√		
		9HZ EDC16C3	√	√	√	√		
		RHE DCM3.5	√	√	√	√		
		RHH DCM3.5	√	√	√	√		
	Petrol engine	5FS MEV17.4	√	√	√	√		
		5FV MED17.4	√	√	√	√		
		5FW MEV17.4	√	√	√	√		
		5FX MED17.4	√	√	√	√		
	Gearbox	AM6 Euro5 automatic gearbox	√	√	√	√		
		CFC300P gearbox	√	√	√	√		
		AT6 Euro5 automatic gearbox	√	√	√	√		
		Multiplexed additive adding pump/Pompe mux MGI	√	√	√	√		
		Multiplexed additive adding pump/Pompe mux TI	√	√	√	√		
		Air conditioning ECU	√	√	√	√		
Electric parking brake		√	√	√	√			
Electropump assembly		√	√	√	√			

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
5008	Driving assistance/Comfort	High Head Vision	√	√	√	√		
		Lane departure warning system	√	√	√	√		
		Under inflation detection	√	√	√	√		
		Parking aid	√	√	√	√		
		Assistance in complying with the inter-vehicle time (ARTIV)	√	√	√	√		
	Visibility/Lighting/Signalling	Headlamp height corrector	√	√	√	√	√	1.Configuration 2.Calibration
		Windscreen wiper	√	√	√	√		
		Rain / brightness sensor	√	√	√			
	Vehicle protection	Alarm	√	√	√	√		
		Driver's door control pad	√	√	√	√		
	Active and passive safety	Airbag ECU	√	√	√	√		
		Active and passive safety	√	√	√	√		
		Network isolation unit	√	√	√	√		
		Anti-slip mode selector	√	√	√	√		
		Battery charge status unit	√	√	√	√		1.Configuration
		Control panel dot matrix display	√	√	√	√		
		Multifunction display(EMF_A)	√	√	√	√		
		Multifunction display(EMF_C)	√	√	√	√		

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
Inform the driver/Audio/Communication		Not Fastened warning light(TNB)	√					
		Services module	√	√	√	√		
		Steering wheel switching module	√	√	√	√		
		Independent telematic unit	√	√	√	√		
		Control panel	√	√	√	√		
		telematics/RNEG radio navigation	√	√	√	√		
		telematics/Radio navigation NG4	√	√	√	√		
		Radio	√	√	√	√		
		CD player	√	√	√			
		Audio amplifier	√	√	√			
BIPPER	Petrol engine	KFT V34.2	√	√	√	√		
		KFV V34P	√	√	√	√		
	Diesel engine	8HS EDC16C34	√	√	√	√		
		HDI_8DF2	√	√	√	√		
	AT	BVMP	√	√	√	√		
		Controlled manual gearbox MTA	√	√	√	√		
		HDY BOSCH MA3.1	√	√	√			
		HDZ BOSCH MA3.1	√	√	√			

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		HFX BOSCH M7.4.4	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		KFX BOSCH MP7.3	√	√	√	√	√	1.Initialization Adaption
		KFX MM1AP	√	√	√	√		
		KFX SGEAM SL96	√	√	√	√	√	1.Initialization Adaption
		LFX MM1AP	√	√	√	√	√	1.Initialization Adaption 2.Ignition advance setting
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption
		NFU BOSCH ME7.4.4	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		RFN MM6LP	√	√	√	√		1.Initialization Adaption
		KFW SAGEM S2000PM1	√	√	√	√	√	1.Configuration 2.Initialization Adaption
		N6A BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
PARTNER	Petrol engine	N6B BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Programming/Pairing
		NFU Or N6A BOSCH ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		N6A BOSCH ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW BOSCH ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
		KFW BOSCH ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW SAGEM S2000PM2	√	√	√	√		
		HFX MM48P	√	√	√	√	√	1.Configuration 2.Initialization Adapatation
		KFW J34P	√	√	√	√	√	1.Configuration
	Diesel engine	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		RHY SIEMENS SID 801	√	√	√	√	√	1.Configuration
		RHY BOSCH EDC15C2	√	√	√	√		1.DPF
		9HX BOSCH EDC16C3	√	√	√	√		
		9HW BOSCH EDC16C3	√	√	√	√	√	1.Configuration
		WJZ LUCAS DCN2	√	√	√	√		
	ABS	BOSCH ABS5.3	√	√	√	√		
		ABS BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP BOSCH 5.7						
		ESP BOSCH 8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
		ABS 8.1	√	√	√	√	√	1.Configuration 2.Bleeding

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
		ESP 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
	Inform the driver/Audio/Communication	Telematics	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		CD player	√	√	√	√	√	
		Radio PHILIPS	√	√	√	√	√	1.Configuration
		Radio CLARION	√	√	√	√	√	1.Configuration
		BSI	√	√	√	√		1.keys of programming
	A/C	WEBASTO additional heating	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
		Air bags(SAC CENT AUTOLIV)	√	√	√	√		1.Configuration 2.lock and unlock
	Additional heating		√	√	√	√	√	
	Petrol engine	N6A ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		N6B ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		NFU ME7.4.5	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
PARTNER B9		NFR ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
	Diesel engine	9HV EDC16C3	√	√	√	√	√	1.Configuration 2.DPF
		9HW EDC16C3	√	√	√	√	√	1.Configuration 2.DPF
		9HT EDC16C3	√	√	√	√	√	1.Configuration 2.DPF
		9HX EDC16C3	√	√	√	√	√	1.Configuration
		9HL HDI SID807	√	√	√	√		
		9HZ EDC16C3	√	√	√	√	√	1.Configuration 2.DPF
	Active and passive safety	ABS 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP 8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		Air bags	√	√	√	√		1.Configuration 2.lock and unlock
		Alarm	√	√	√	√	√	1.Configuration
	Visibility/Lighting/Signalling	Rain sensor	√	√	√			
		Multifunction display (EMF)	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	Inform the driver/Audio/Communication	Radio	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		CD player	√	√	√		√	
		Battery charge status unit	√	√	√	√		1.Configuration
		Telematics	√	√	√	√	√	1.Configuration
	Driving assistance/Comfort	Parking assistance	√	√	√	√		1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Power steering	√	√	√	√	√	
		Under inflation detection	√	√	√	√		
EXPERT	Petrol engine	R6F MM4.8P	√	√	√	√	√	1.Initialization Adapation
		RFN MM4.8P	√	√	√	√	√	1.Configuration 2.Initialization Adapation
	Diesel engine	WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
		RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		RHX BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Filter 3.DPF
		RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.Service 3.DPF

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
	AT	AL4 autoadaptive automatic gearbox	√	√	√	√	√	1.Configuration 2.Initialization Adaption 3. Oil wear counter
	ABS	BOSCH ABS5.3	√	√	√	√		
	Air bag	Air bag and seat belt	√	√	√			1.Marchting
	Additional heating		√	√	√	√	√	
	Petrol engine	RFH MM6KP(EW10A)	√	√	√	√	√	1.Configuration
	Diesel engine	9HT BOSCH EDC16C3	√	√	√	√		
		9HU BOSCH EDC16C3-EDC16C34	√	√	√	√	√	1.Configuration
		RHH DCM3.5	√	√	√	√		
		RHG SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
		RHK SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
		RHL SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
		RHR SIEMENS SID 803	√	√	√	√	√	1.Configuration 2.DPF
	ABS8_BOSCH		√	√	√	√	√	1.Configuration 2. Bleeding 3.Calibration of the steering wheel angle sensor

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
EXPERT 2	Active and passive safety	ESP_BOSCH8	√	√	√	√	√	1.Configuration 2.Bleeding 3.Steering wheel angle sensor cal
		ABS8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		ESP8.1	√	√	√	√	√	1.Configuration 2.Bleeding
		Airbag ECU	√	√	√	√		1.Configuration 2.lock and unlock
	Driving assistance/Comfort	Parking assistance	√	√	√	√	√	1.Configuration
		Air conditioning	√	√	√	√	√	1.Configuration
		Power steering	√	√	√	√	√	
		Pneumatic suspension	√	√	√	√	√	1.Configuration 2.Programming of the heights 3.Depressurisation 4.Pressurisation
		Additional heating	√	√	√	√	√	
	Inform the driver/Audio/Communication	Multi-function display	√	√	√	√	√	1.Configuration
		Steering wheel switching module	√	√	√	√	√	
		Radio	√	√	√	√	√	1.Configuration
		Instrument panel	√	√	√	√	√	1.Configuration
		Hands Free Kit	√	√	√	√	√	1.Configuration

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
		CD player	√	√	√		√	
		Telematics	√	√	√	√	√	1.Configuration
	Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√			
BOXER	Petrol engine	MM48p 2L essence plombee	√	√	√	√		
		MM48p 2L dual fuel(LPG)	√	√	√	√		
		MM48p 2L Unleaded petrol	√	√	√	√		
	Diesel engine	2.0L HDI BOSCH EDC15C7		√	√	√	√	
BOXER 3	Active and passive safety	ABS 8.0	√	√	√	√	√	1.Bleeding
		ESP 8.0	√	√	√	√	√	1.Bleeding 2.Steering wheel angle sensor calibration
		ASR 8.0	√	√	√	√	√	1.Bleeding
		Power steering	√			√		
BOXER 3 minibus	Active and passive safety	ABS 8.0	√	√	√	√	√	1.Bleeding
		ESP 8.0	√	√	√	√	√	1.Bleeding 2.Steering wheel angle sensor calibration
		ASR 8.0	√	√	√	√	√	1.Bleeding
		Power steering	√			√		
		NFU Or N6A ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					Special Function
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	
HOGGAR	Petrol engine	N6A ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW ME749 BIO FLEX	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives 3.Writing of the alcohol content
		KFW J34P	√	√	√	√		
		HFX J34P	√	√	√	√		
		TU5JP4 ME745	√	√	√	√	√	1.Configuration 2.Initialising the autoadaptives
		HFV V34.3	√	√	√	√		
		KFT V34.3	√	√	√	√		
		WJY DCN2	√	√	√	√		
		RHY EDC15C2	√	√	√	√		

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions					
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function
	Diesel engine	8HZ BOSCH EDC16C3 EURO4	√	√	√	√		
		9HY BOSCH EDC16C3 EURO4	√	√	√	√		
		8HR EDC17C10_BR2	√	√	√	√		
	AT	AL4 AT8 automatic gearbox	√	√	√	√		
	Driving assistance/Comfort	Heating/ventilation	√	√	√	√		
	Inform the driver/Audio/Communication	Display/Telematics	√	√	√	√		
		Steering wheel switching module	√	√	√	√		
		Radio	√	√	√	√		
		CD changer	√	√	√	√		
		Instrument panel	√	√	√	√		
		Stolen vehicle location control unit	√	√	√	√		
	Vehicle protection/Management of accesses	Alarm	√	√	√			
	Active and passive safety	ABS MK70	√	√	√	√		
		ESP MK60	√	√	√	√		
Air bags		√	√	√				
Visibility/Lighting/Signalling	Rain/brightness sensor	√	√	√				

PEUGEOT V42.40 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions				
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation

CONNECTOR	X431	DIAGUN
SMART OBD	For all the cars except 307/607 can model cars after 2006 cars.	N/A
OBD 16C	For all the cars except 307/607 can model cars after 2006 cars.	N/A
CANBUS II	Just test 307/607 can model cars after 2006 cars. And need to add PEUGEOT/CITROEN-16 Converter connector.	N/A
diagun connector	N/A	For all the cars.
SUPER 16	For all the cars.	N/A