

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
ZX-16	1.4L KFX BOSCH MP5.2	√	√	√	√	√	
	1.6L NFZ BOSCH MP5.2	√	√	√	√	√	
	1.6L NFV BOSCH M7.4.4	√	√	√	√	√	1.mutomatic regulator
	1.6L N6A BOSCH ME7.4.4	√	√	√	√	√	1.mutomatic regulator
	1.4L KFX MM1AP	√	√	√	√		
	2.0L RFS MM1AP	√	√	√	√		
	ABS	√	√	√	√	√	1.air bleed
	AL4 TA2000 A/T	√	√	√	√	√	1.mutomatic regulator 2.Oil gauge 3.Ecu set
	AL4 TA96 A/T	√	√	√	√	√	1.mutomatic regulator 2.Oil gauge 3.Ecu set 4.padal programing
ZX-2	1.4L KFX BOSCH MP5.2	√	√	√	√	√	
	1.6L NFZ BOSCH MP5.2	√	√	√	√	√	
	1.6L NFV BOSCH M7.4.4	√	√	√	√	√	1.mutomatic regulator
	1.6L N6A BOSCH ME7.4.4	√	√	√	√	√	1.mutomatic regulator
	1.4L KFX MM1AP	√	√	√	√		
	2.0L RFS MM1AP	√	√	√	√		
	1.6L NFZ BOSCH MP5.2	√	√	√	√	√	
	1.4L KFX BOSCH MP5.2	√	√	√	√	√	

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
ELYSEE	1.6L NFU BOSCH ME744	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	ABS 5.3	√	√	√	√	√	1.air bleed
	ABS8.1 BOSCH	√	√	√	√		
	Auto gearbox AL4 TA2000	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	AL4 TA96 A/T	√	√	√	√	√	1.mutomatic regulator 2.Oil gauge 3.Ecu set 4.padal programing
	Simens center airbag	√	√	√	√		
	AUTOLIV center airbag	√	√	√			1.Ecu set
electron key	√	√	√	√	√	1.Program set	
C1	DV4 injection	√	√	√	√		
	384 F injection		√	√	√		
	Sequential manual gearbox (MMT)		√	√	√	√	1.Specific operations
	Immobiliser control module(Immobiliser)		√	√	√		
	Airbag/SAC_TRW	√	√	√	√		
	ABS anti-lock braking system		√	√	√	√	1.Specific operations
	ESP S2000 ABS		√	√	√	√	1.Configuration 2.Specific operations
Electric power steering	√	√	√	√		1.configuration	

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	1.6L NFV BOSCH M7.4.4	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME7.4.5	√	√	√	√	√	1.mutomatic regulator 2.Ecu set
	2.0L RFN MAGNETI MARELLI MM48P	√	√	√	√	√	1.mutomatic regulator
	2.0L RFN MAGNETI MARELLI MM6LP	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFS BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFU BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	N6A BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	6FZ SAGEM S2000PM1	√	√	√	√	√	1.Configuration
	6FZ SAGEM S2000PM2	√	√	√	√	√	1.Configuration
	2.0L BOSCH EDC15C2	√	√	√	√	√	1.Configuration

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
XSARA PICASSO	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	9HY BOSCH EDC16C3 DV6TED4	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	9HZ(FAP) BOSCH HDI EDC16C34	√	√	√	√		
	BSI	√	√	√	√	√	1.Programming of keys 2.Reset maintenance indicator
	AUTOLIV center airbag	√	√	√			1.manual add 2.Ecu unlocked
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	ABS BOSCH 5.3	√	√	√	√	√	1.air bleed
	ESP BOSCH 5.7	√	√	√	√	√	1.air bleed 2.Ecu set
	ABS 8.0 Without esp8.0	√	√	√	√	√	1.air bleed 2.manual add
	ABR 5.3	√	√	√	√		
	ABS8.1 BOSCH	√	√	√	√	√	1.configuration

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	ESP8.1 BOSCH	√	√	√	√	√	1.configuration
	ESP8.0 BOSCH	√	√	√	√	√	1.configuration 2.Calibration
	alarm	√	√	√	√	√	1.manual add
	IP	√	√	√	√	√	1.manual add 2.Configuration
	radio	√	√	√	√	√	1.manual add 2.Configuration
	Rain sensor/brightness	√	√	√	√		
	conversion module below steering wheel	√	√	√	√		
	CD player	√	√	√	√	√	
	Parking aid	√	√	√	√	√	
	Diesel additive function(ADDGO2)	√	√	√	√	√	1.Configuration
	A/C	√	√	√	√	√	1.Ecu set 2.Configuration
	Multifunction display VDO B	√	√	√	√	√	1.manual add 2.Configuration
	Multifunction display VDO C	√	√	√	√	√	1.Configuration
	PTS	√	√	√	√	√	
	2.0L BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration 2.DPF
	N6A BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFU BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
XSARA PICASSO CHINE	9HY BOSCH EDC16C3 DV6TED4	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	6FZ SAGEM S2000PM2	√	√	√	√	√	1.Configuration
	6FZ SAGEM S2000PM1	√	√	√	√	√	1.Configuration
	NFS BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFV BOSCH M744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RFN MM6LP	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	Diesel additive function(ADDGO2)	√	√	√	√	√	1.Configuration
	ABS8.1 BOSCH	√	√	√	√	√	1.configuration
	ABS8 BOSCH	√	√	√	√	√	1.configuration
	ABR5.3	√	√	√	√		
	ESP8.1 BOSCH	√	√	√	√	√	1.configuration
	ESP8 BOSCH	√	√	√	√	√	1.configuration 2.Calibration
	Rain sensor/brightness	√	√	√	√		
	CD player	√	√	√	√	√	
	Parking aid	√	√	√	√	√	
	radio	√	√	√	√	√	1.Configuration
	Control panel	√	√	√	√	√	1.Configuration
	Switch module at the steering wheel	√	√	√	√		
	Airbag/SAC AUTOLIV	√	√	√			1.configuration
	AC	√	√	√	√	√	1.Configuration
	Multifunction display SAGEM B	√	√	√	√	√	1.Configuration
	Multifunction display SIEMENS C	√	√	√	√	√	1.Configuration
	ESP BOSCH5.7	√	√	√	√	√	1.Configuration 2.Calibration
	2.0L RFN MAGNETI MARELLI MM6LP	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	2.0L RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	2.0L RHZ BOSCH EDC15C2	√	√	√	√		1.DPF
	8HZ BOSCH EDC16C3(DV4)	√	√	√	√	√	1.Configuration

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
XSARA2	2.0L RFS MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	RHY SIEMENS SID801	√	√	√	√	√	1.Configuration
	RFN MM4MP2	√	√	√	√	√	
	1.4L KFW SAGEM S2000P	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.9L WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
	1.6L NFU BOSCH ME744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	2.0L RFN MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	AUTOLIV center airbag	√	√	√			1.manual add 2.Ecu unlocked
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	ABS BOSCH 5.3	√	√	√	√	√	1.air bleed
	ESP BOSCH 5.7	√	√	√	√	√	1.air bleed 2.Ecu set
	BSI_VAR_C	√	√	√		√	
	IP	√	√	√	√	√	1.manual add 2.Configuration
	display	√	√	√	√	√	1.manual add
	radio	√	√	√	√	√	1.manual add 2.Configuration
Rain sensor/brightness	√	√	√	√			

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	CD player	√	√	√	√	√	
	Parking aid	√	√	√	√	√	
	A/C	√	√	√	√	√	1.Ecu set 2.Configuration
	Multifunction display A	√	√	√	√	√	1.Configuration
	Multifunction display B	√	√	√	√	√	1.Configuration
	Multifunction display C	√	√	√	√	√	1.Configuration
	Multifunction display ATUOPC	√	√	√	√	√	1.Configuration
	PTS	√	√	√	√	√	
conversion module below steering wheel	√	√	√	√			
C2 CHINA	1.4L KFV SAGEM J34P	√	√	√	√	√	1.manual add
	1.6L NFU BOSCH ME7.4.5	√	√	√	√	√	1.mutomatic regulator 2.Ecu set
	BSI	√	√	√	√	√	1.Programming of keys 2.Reset maintenance indicator
	ABS MK70	√	√	√	√	√	1.air bleed 2.manual add
	A/C	√	√	√	√	√	1.manual add 2.Configuration
	AUTOLIV center airbag	√	√	√			1.manual add 2.Ecu unlocked
	Auto gearbox AL4 TA2000	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	IP	√	√	√	√	√	1.manual add 2.Configuration
	Switch module at the steering wheel	√	√	√	√		
	conversion module below steering wheel	√	√	√	√		
XSARA	2.0L RFV BOSCH MP5.2	√	√	√	√	√	
	2.0L RFS MM1AP	√	√	√	√		
	1.8L LFX MM1AP	√	√	√	√		
	1.6L NFZ BOSCH MP5.2	√	√	√	√	√	
	1.4L KFX BOSCH MP5.2	√	√	√	√	√	
	1.6L NFZ BOSCH MP7.2	√	√	√	√		
	1.4L KFX BOSCH MP7.3	√	√	√	√	√	1.Configuration
	1.4L KFX SAGEM SL96	√	√	√	√	√	
	1.8L LFY SAGEM SL96	√	√	√	√	√	
	2.0L RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	1.9L DHV BOSCH AS3-VP20	√	√	√	√		
	Auto gearbox AL4 TA96	√	√	√	√	√	1.Configuration
	ABS mechanical distribution	√	√	√	√		
	ABS electronic distribution	√	√	√	√		
	Airbag/SAC AFK	√	√	√			
	Air Conditioning	√	√	√	√		
	BSI	√	√	√		√	
	CONTROL PANEL	√	√	√	√	√	1.Configuration
	RADIO	√	√	√	√	√	1.Configuration
	CD PLAYER	√	√	√	√	√	
display SAGEM B	√	√	√	√	√		
ALARM	√	√	√	√	√		
	3.0L XFX BOSCH ME7.4.6	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C5	2.0L RLZ SIEMENS SIRIUS81	√	√	√	√	√	1.Initialise auto-adaptives
	2.0L RFN MAGNETI MARELLI MM6LP	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives
	2.0L RFN MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	1.8L 6FZ SAGEM S2000P	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives
	6FZ SAGEM S2000PM1	√	√	√	√	√	1.Configuration
	2.2L 4HX BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	2.0L RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	2.0L RHS BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	RHY SIEMENS SID801	√	√	√	√	√	1.Configuration
	2.0L RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	ABS TEVES MK60	√	√	√	√	√	
	ESP TEVES MK60	√	√	√	√	√	1.Configuration 2.Calibration 3.Initialisation
	Auto gearbox 4HP20	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	Airbag/SAC TEMIC	√	√	√	√		1.Configuration
	BSI	√	√	√	√	√	
	RADIO	√	√	√	√	√	1.Configuration
	Diesel additive function(ADDITIF FAP)	√	√	√	√	√	1.Configuration
	Diesel additive function(ADDGO2)	√	√	√	√	√	1.Configuration
	Rain sensor/brightness	√	√	√	√		
	Parking aid	√	√	√	√	√	
	Switch module at the steering wheel	√	√	√	√		
	CONTROL PANEL	√	√	√	√	√	1.Configuration
	Display or autoPC telematics	√	√	√	√	√	
	Driver's door module/MDP CONDUCT	√	√	√	√		
	Passenger's door module/MDP PASSAG	√	√	√	√		
	AC	√	√	√	√	√	1.Configuration
	ECOTECH SUSPENSION	√	√	√	√	√	1.Configuration
	Suspension	√	√	√	√	√	1.Configuration
	Multifunction display SAGEM A	√	√	√	√	√	1.Configuration
	Multifunction display SAGEM B	√	√	√	√	√	1.Configuration
	Multifunction display SIEMENS C	√	√	√	√	√	1.Configuration
	Multifunction display ATUOPC	√	√	√	√	√	1.Configuration
	Multifunction display VDO D	√	√	√	√	√	1.Configuration
	ALARM	√	√	√	√	√	
	4HP BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	9HY BOSCH EDC16C34 DV6TED4	√	√	√	√		1.DPF 2.Injector classification
	9HZ(FAP)BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	6FZ SAGEM S2000PM2	√	√	√	√	√	1.Configuration
	XFU BOSCH ME747	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	XFV BOSCH ME747	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	6FY MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RHL SIEMENS SID803	√	√	√	√	√	1.Configuration 2.DPF
	RHL SIEMENS SID803A	√	√	√	√	√	1.Configuration 2.DPF
	4HR BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	4HS BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	2.2L 4HX BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	4HT BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
NEW C5	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration 2.Injector classification
	RHR SIEMENS SID803	√	√	√	√	√	1.Configuration 2.DPF
	RHR SIEMENS SID803A	√	√	√	√	√	1.Configuration 2.DPF
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	Auto gearbox AM6	√	√	√	√	√	1.Configuration
	Alarm	√	√	√			
	BSI	√	√	√			1.Reset maintenance indicator
	CD player	√	√	√	√	√	
	Electric power steering	√	√	√	√	√	
	Parking aid	√	√	√	√	√	1.configuration
	control panel	√	√	√	√	√	1.configuration
	Telematic RT3	√	√	√	√	√	
	Telematic RT4	√	√	√	√	√	
	Diesel additive function(ADDGO3)	√	√	√	√	√	1.Configuration
ERU_BSM	√	√	√	√	√		

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Auto gearbox 4HP20	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	ESP	√	√	√	√	√	1.configuration 2.calibration of the steering wheel sensor 3.Initialise ESP sensors
	ECOTECH SUSPENSION	√	√	√	√	√	1.configuration
	Multifunction screen SAGEM A	√	√	√	√	√	1.configuration
	Multifunction screen SAGEM C	√	√	√	√	√	1.configuration
	Power Steering	√	√	√			
	Radio	√	√	√	√	√	1.configuration
	Deflation detection	√	√	√	√		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
	rain sensor/brightness	√	√	√			
	Hands Free Kit	√	√	√	√	√	1.configuration
	Driver's door module/MDP CONDUCT	√	√	√	√	√	
	Passenger's door module/MDP PASSAG	√	√	√	√	√	
	Airbag/SAC AUTOLIV	√	√	√	√		1.Configuration
	steering wheel with fixed central control	√	√	√	√	√	

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Directional headlamps(PROJECTEURS)	√	√	√	√	√	1.configuration 2.Vehicle height sensor programming
	AC	√	√	√	√	√	
	BSI	√	√	√			1.Reset maintenance indicator
	6FY MM6KP(EW7A)	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	9HZ(FAP) BOSCH EDC16C34 DV6TED4-110CV	√	√	√	√	√	1.configuration 2.DPF 3.Injector classification
	RFJ MM6KP(EW10A)	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives 3.matching
	RFJ MM6KP BIO Flex(EW10A FF)	√	√	√	√	√	1.Configuration
	RHR DELPHI DCM3.4	√	√	√	√	√	1.Configuration 2.DPF
	RHF DELPHI DCM3.4	√	√	√	√	√	1.Configuration 2.DPF
	UHZ SIEMENS SID201	√	√	√	√	√	1.configuration 2.matching 3.DPF
	X8Z-DT20C EDC17CP11	√	√	√	√		1.DPF
	RHH DCM3.5	√	√	√	√	√	1.Configuration 2.DPF

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C5(X7)	RHE DCM3.5	√	√	√	√	√	1.Configuration 2.DPF
	XFU BOSCH ME747	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	XFV BOSCH ME747	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	4HP BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	4HR BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	4HS BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	4HT BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	Auto gearbox AM6	√	√	√	√	√	1.Configuration
	CFC300P	√	√	√	√	√	
	BVA AT6 Euro5	√	√	√	√	√	1.configuration
	BVA AM6 Euro5	√	√	√	√	√	1.configuration 2.Oil wear counter
	Rain sensor/brightness	√	√	√			
	Hands Free Kit	√	√	√	√	√	
Driver's door module/MDP CONDUCT	√	√	√	√	√		
CD player	√	√	√	√	√		

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Electric power steering	√	√	√	√	√	
	Control panel	√	√	√	√	√	1.configuration
	Telematic NG4 navigation radio	√	√	√	√	√	1.configuration
	Telematic RNEG navigation radio	√	√	√	√	√	1.configuration
	Telematic RT3	√	√	√	√	√	
	Telematic RT4	√	√	√	√	√	
	Telematic RT5	√	√	√	√	√	
	AC	√	√	√	√	√	1.configuration
	Multifunction screen C	√	√	√	√	√	1.configuration
	Parking aid	√	√	√	√	√	1.configuration
	Airbag/SAC AUTOLIV	√	√	√	√		1.Configuration
	Radio	√	√	√	√	√	1.configuration
	Engine relay unit	√	√	√	√	√	
	Suspension System Control ECU	√	√	√	√		
	ECOTECH SUSPENSION	√	√	√	√	√	1.configuration
	Switch module at the steering wheel	√	√	√	√	√	
	Stop and Start battery charge status unit	√	√	√	√		1.configuration
	Battery charge status unit	√	√	√	√		1.configuration
	Deflation detection	√	√	√	√		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
	Directional headlamps(PROJECTEURS)	√	√	√	√	√	1.configuration
	ESP8.1 BOSCH	√	√	√	√	√	1.configuration

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	UHZ SIEMENS SID201	√	√	√	√	√	1.configuration 2.matching 3.DPF
	XFU BOSCH ME747	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	XFV BOSCH ME747	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	4HP BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	4HR BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	4HS BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	4HT BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	Auto gearbox AM6	√	√	√	√	√	1.Configuration
	BVA AM6 Euro5	√	√	√	√	√	1.configuration 2.Oil wear counter
	ESP8.1 BOSCH	√	√	√	√	√	1.Configuration
	Rain sensor/brightness	√	√	√			
	CD player	√	√	√	√	√	
	Electric power steering	√	√	√	√	√	
	Parking aid	√	√	√	√	√	1.configuration
	Hands Free Kit	√	√	√	√	√	
	Driver's door module/MDP CONDUCT	√	√	√	√	√	

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	BSI	√	√	√			1.Reset maintenance indicator
	AC	√	√	√	√	√	
	Colour Multifunction display	√	√	√	√	√	1.configuration
	Passenger's door module/MDP PASSAG	√	√	√	√	√	
	Airbag/SAC AUTOLIV	√	√	√	√		1.Configuration
	Control panel	√	√	√	√	√	1.configuration
	Telematic RT3	√	√	√	√	√	
	Telematic RT4	√	√	√	√	√	
	Radio	√	√	√	√	√	1.configuration
	Stop and Start battery charge status unit	√	√	√	√		1.configuration
	ECOTECH SUSPENSION	√	√	√	√	√	1.configuration
	Battery charge status unit	√	√	√	√		
	Deflation detection	√	√	√	√		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
	Engine relay unit	√	√	√	√	√	
	Switch module at the steering wheel	√	√	√	√	√	
	ESP VSC440	√	√	√	√	√	1.Configuration 2.Calibration
	1.1L HFX MM48P	√	√	√	√	√	1.mutomatic regulator

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	1.6L NFU BOSCH ME7.4.4	√	√	√	√	√	1.mutomatic regulator
	1.4L KFV SAGEM S2000 PM1	√	√	√	√	√	1.mutomatic regulator
	N6A BOSCH ME744	√	√	√	√	√	1.mutomatic regulator 2.configuration 3.Initialise auto-adaptives
	NFS BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	KFU MM6LP	√	√	√	√	√	1.Configuration
	KFV BOSCH ME744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	KFV SAGEM S2000PM2	√	√	√	√	√	
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	9HX BOSCH EDC16C34 DV6ATED4	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	8HZ BOSCH EDC16C34 DV4TD	√	√	√	√	√	1.Configuration 2.Injector classification

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C3	8HX BOSCH EDC16C34 DV4TD	√	√	√	√	√	1.Configuration 2.Injector classification
	8HX SIEMENS SID802	√	√	√	√	√	1.Configuration
	8HX SIEMENS SID804	√	√	√	√	√	1.Configuration
	8HZ SIEMENS SID804	√	√	√	√	√	1.Configuration
	8HY DELPHI C6	√	√	√	√	√	1.Configuration
	ABS TEVES MK60	√	√	√	√	√	
	ABS TEVES MK70	√	√	√	√	√	
	ESP TEVES MK60	√	√	√	√	√	1.Configuration 2.Calibration 3.Initialisation
	Controlled manual gearbox ECU	√	√	√	√	√	1.Specific operations
	Airbag/SAC TEMIC	√	√	√	√		1.Configuration
	Air Conditioning	√	√	√	√	√	1.Configuration
	Multifunction display SAGEM A	√	√	√	√	√	1.Configuration
	Multifunction display SAGEM B	√	√	√	√	√	1.Configuration
	Multifunction display SIEMENS C	√	√	√	√	√	1.Configuration
	BSI	√	√	√	√		
	RADIO	√	√	√	√	√	1.Configuration
	Rain sensor/brightness	√	√	√	√		
	CD player	√	√	√	√	√	
	Electric power steering	√	√	√	√		
	Parking aid	√	√	√	√	√	
	Switch module at the steering wheel	√	√	√	√		
	ALARM	√	√	√	√	√	
	CONTROL PANEL	√	√	√	√	√	1.Configuration
Diesel additive function(ADDGO2)	√	√	√	√	√	1.Configuration	
DISPLAY	√	√	√	√	√		

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration
	9HX BOSCH EDC16C34 DV6ATED4	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	9HV BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	9HY BOSCH EDC16C34 DV6TED4	√	√	√	√		1.DPF 2.Injector classification

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	9HZ(FAP)BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Forced particle filter regeneration 4.Configuration of the amount of additive in the particle filter 5.Particulate filter replacement 6.Additive system replacement
	RHR DELPHI DCM3.4	√	√	√	√	√	1.Configuration 2.DPF
	N6A BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFU BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RFK MM6LP	√	√	√	√	√	1.Configuration
	KFU MM6LP	√	√	√	√	√	1.Configuration

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C4	RFN MM6LP	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	6FY MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RHF DELPHI DCM3.4	√	√	√	√	√	1.configuration 2.DPF
	5FX MED17.4	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	5FW MEV17.4	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	5FT MED17.4	√	√	√	√	√	1.configuration
	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration 2.Injector classification
	RHR SIEMENS SID803	√	√	√	√	√	1.Configuration 2.DPF
	RHR SIEMENS SID803A	√	√	√	√	√	1.Configuration 2.DPF
	ABS8 BOSCH	√	√	√	√	√	1.configuration

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	ESP8 BOSCH	√	√	√	√	√	1.configuration 2.Calibration
	ESP8.1 BOSCH	√	√	√	√	√	1.Configuration
	ABS8.1 BOSCH	√	√	√	√	√	1.Configuration
	AC	√	√	√	√	√	1.Configuration
	Auto gearbox AM6	√	√	√	√	√	1.Configuration
	CFC300P	√	√	√	√	√	
	BVA AM6 Euro5	√	√	√	√	√	1.configuration 2.Oil wear counter
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	Alarm	√	√	√	√		
	BSI	√	√	√			1.Reset maintenance indicator
	CD player	√	√	√	√	√	
	Electric power steering	√	√	√	√		
	control panel	√	√	√	√	√	1.Configuration
	Telematic NG4 navigation radio	√	√	√	√	√	1.Configuration
	Telematic RT3	√	√	√	√	√	
	Telematic RT4	√	√	√	√	√	
	Telematic RT5	√	√	√	√	√	
	engine relay unit	√	√	√	√	√	
	Multifunction screen SAGEM A	√	√	√	√	√	1.Configuration
	Multifunction screen SAGEM C	√	√	√	√	√	1.Configuration
	passenger door module	√	√	√	√		
	Radio	√	√	√	√	√	1.Configuration

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	rain sensor/brightness	√	√	√			
	SRS/SAC AUTOLIV	√	√	√	√		1.Configuration
	steering wheel with fixed central control	√	√	√	√	√	
	Deflation detection	√	√	√	√		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
	unit rev counter	√	√	√	√		
	Hands Free Kit	√	√	√	√	√	
	Driver's door module/MDP CONDUCT	√	√	√	√	√	
	Passenger's door module/MDP PASSAG	√	√	√	√	√	
	Directional headlamps(PROJECTEURS)	√	√	√	√	√	1.configuration 2.Vehicle height sensor programming
	Diesel additive function(ADDGO3)	√	√	√	√	√	1.Configuration
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	6FY MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C4 PICASSO	5FX MED17.4	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	5FW MEV17.4	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	5FT MED17.4	√	√	√	√	√	1.configuration
	RHE DCM3.5	√	√	√	√	√	1.Configuration 2.DPF
	RHH DCM3.5	√	√	√	√	√	1.Configuration 2.DPF
	RHD DCM3.5	√	√	√	√	√	1.configuration 2.DPF
	RHJ SIEMENS SID803A	√	√	√	√	√	1.configuration 2.DPF
	RHR SIEMENS SID803A	√	√	√	√	√	1.Configuration 2.DPF
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	Auto gearbox AM6	√	√	√	√	√	1.Configuration
	BVA AM6 Euro5	√	√	√	√	√	1.configuration 2.Oil wear counter
	CFC300P	√	√	√	√	√	
	ESP8.1 BOSCH	√	√	√	√	√	1.Configuration
Rain sensor/brightness	√	√	√				

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	BSI	√	√	√			1.Reset maintenance indicator
	AC	√	√	√	√	√	1.configuration
	CD player	√	√	√	√	√	
	Electric power steering	√	√	√	√	√	
	Parking aid	√	√	√	√	√	1.configuration
	Hands Free Kit	√	√	√	√	√	
	Driver's door module/MDP CONDUCT	√	√	√	√	√	
	Radio	√	√	√	√	√	1.Configuration
	Engine relay unit	√	√	√	√	√	
	Control panel	√	√	√	√	√	1.Configuration
	Suspension	√	√	√	√	√	1.Configuration
	Telematic RNEG navigation radio	√	√	√	√	√	1.Configuration
	Telematic RT3	√	√	√	√	√	
	Telematic RT4	√	√	√	√	√	
	Telematic RT5	√	√	√	√	√	
	Switch module at the steering wheel	√	√	√	√	√	
	Deflation detection	√	√	√	√		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
	Battery charge status unit	√	√	√	√		1.Configuration
	Passenger's door module/MDP PASSAG	√	√	√	√	√	

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Directional headlamps(PROJECTEURS)	√	√	√	√	√	1.configuration 2.Vehicle height sensor programming
	Airbag/SAC AUTOLIV	√	√	√	√		1.Configuration
	N6A BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	9HZ(FAP) BOSCH EDC16C34 DV6TED4-110CV	√	√	√	√	√	1.configuration 2.DPF 3.Injector classification
	9HX BOSCH EDC16C34 DV6ATED4-90CV	√	√	√	√	√	1.configuration 2.DPF 3.Injector classification
	RFJ MM6KP (EW10A FF)	√	√	√	√	√	1.configuration
	RFJ MM6KP BIO Flex(EW10A FF)	√	√	√	√	√	1.configuration
	RHM BOSCH EDC15C2 DW10A	√	√	√	√	√	1.configuration
	RHS BOSCH EDC15C2 DW10A	√	√	√	√	√	1.configuration
	RHT BOSCH EDC15C2 DW10A	√	√	√	√	√	1.configuration
	RHW BOSCH EDC15C2 DW10A	√	√	√	√	√	1.configuration
	RHZ BOSCH EDC15C2 DW10A	√	√	√	√	√	1.configuration
	NFU BOSCH ME749	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C4 SEDAN	1.6L NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	ABS8.1 BOSCH	√	√	√	√	√	1.configuration
	ABS8 BOSCH	√	√	√	√	√	1.configuration
	ESP8.1 BOSCH	√	√	√	√	√	1.configuration
	ESP8. BOSCH	√	√	√	√	√	1.configuration 2.Calibration
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	Rain sensor/brightness	√	√	√			
	CD player	√	√	√	√	√	
	BSI	√	√	√			1.Reset
	AC	√	√	√	√	√	1.configuration
	Multifunction screen A	√	√	√	√	√	1.configuration
	Multifunction screen C	√	√	√	√	√	1.configuration
Electric power steering	√	√	√	√			
Parking aid	√	√	√	√	√	1.configuration	

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Hands Free Kit	√	√	√	√	√	1.configuration
	Radio	√	√	√	√	√	1.Configuration
	Control panel	√	√	√	√	√	1.Configuration
	Telematic RT3	√	√	√	√	√	
	Telematic RT4	√	√	√	√	√	
	Telematic RT5	√	√	√	√	√	
	Engine relay unit	√	√	√	√	√	
	Switch module at the steering wheel	√	√	√	√	√	
	Driver's door module/MDP CONDUCT	√	√	√	√	√	
	Directional headlamps(PROJECTEURS)	√	√	√	√	√	1.configuration 2.Vehicle height sensor programming
	Passenger's door module/MDP PASSAG	√	√	√	√	√	
	Airbag/SAC AUTOLIV	√	√	√	√		1.Configuration
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME7.4.5	√	√	√	√	√	1.Configuration
	8HZ BOSCH EDC16C34 DV4TD	√	√	√	√	√	1.Configuration 2.Injector classification
	TU3A J34P	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	TU1A J34P	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	KFU MM6LPC	√	√	√	√	√	1.Configuration
	8HZ SIEMENS SID806	√	√	√	√	√	1.Configuration

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
NEW C3	1.6L NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	KFV SAGEM S2000PM2	√	√	√	√	√	
	9HX BOSCH EDC16C34 DV6ATED4	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	9HZ(FAP)BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	ABS MK70.1	√	√	√	√	√	1.Configuration
	ESP MK60	√	√	√	√	√	1.Configuration 2.Calibration 3.Initialisation
	ESP MK60-O	√	√	√	√	√	1.Configuration 2.Calibration
	ABS MK70	√	√	√	√	√	1.Configuration
	AC	√	√	√	√	√	1.Configuration
	Controlled manual gearbox ECU	√	√	√	√	√	1.Specific operations

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	Alarm	√	√	√	√		
	BSI	√	√	√	√		1.Reset maintenance indicator
	CD player	√	√	√	√	√	
	control panel	√	√	√	√	√	1.configuration
	Telematic RT3	√	√	√	√	√	
	Telematic RT4	√	√	√	√	√	
	Telematic RT5	√	√	√	√	√	
	electric power steering	√	√	√	√		
	Parking aid	√	√	√	√	√	1.configuration
	engine relay unit	√	√	√	√		
	multifunction screen A	√	√	√	√	√	1.Configuration
	multifunction screen C	√	√	√	√	√	1.Configuration
	Radio	√	√	√	√	√	1.Configuration
	rain sensor/brightness	√	√	√			
	Hands Free Kit	√	√	√	√	√	1.Configuration
	SRS/SAC TEMIC	√	√	√	√		1.Configuration
	switch module at the steering wheel	√	√	√	√	√	
	8HZ BOSCH EDC16C34 DV4TD	√	√	√	√	√	1.Configuration 2.Injector classification
	8HZ SIEMENS SID806	√	√	√	√		

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C3 PLURIEL	TU3A J34P	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	TU1A J34P	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Controlled manual gearbox ECU	√	√	√	√	√	1.Specific operations
	ABS MK70	√	√	√	√	√	1.Configuration
	ABS MK70.1	√	√	√	√	√	1.Configuration
	ESP MK60-O	√	√	√	√	√	1.Configuration 2.Calibration
	ESP MK60	√	√	√	√	√	1.Configuration 2.Calibration 3.Initialisation
	CD player	√	√	√	√	√	
	electric power steering	√	√	√	√		

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	BSI	√	√	√			1.Reset maintenance indicator
	AC	√	√	√	√	√	1.configuration
	Multifunction screen A	√	√	√	√	√	1.configuration
	multifunction screen C	√	√	√	√	√	1.Configuration
	Parking aid	√	√	√	√	√	1.configuration
	rain sensor/brightness	√	√	√			
	control panel	√	√	√	√	√	1.configuration
	Telematic RT3	√	√	√	√	√	
	Telematic RT5	√	√	√	√	√	
	Hands Free Kit	√	√	√	√	√	1.configuration
	Radio	√	√	√	√	√	1.Configuration
	Engine relay unit	√	√	√	√	√	
	switch module at the steering wheel	√	√	√	√	√	
	SRS/SAC TEMIC	√	√	√	√		
	8FS MEV17.4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives
	9HZ(FAP) BOSCH EDC16C34 DV6TED4-110CV	√	√	√	√	√	1.configuration 2.DPF 3.Injector classification
	9HX BOSCH EDC16C34 DV6ATED4-90CV	√	√	√	√	√	1.configuration 2.DPF 3.Injector classification

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C3 PICASSO	5FW MEV17.4	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	ABS MK70.2	√	√	√	√	√	1.Configuration
	ESP MK60	√	√	√	√	√	1.Configuration 2.Calibration 3.Initialisation
	Airbag/SAC AUTOLIV	√	√	√	√		1.Configuration 2.locking 3.unlocking
	rain sensor/brightness	√	√	√			
	electric power steering	√	√	√	√		
	BSI	√	√	√			1.Reset maintenance indicator
	AC	√	√	√	√	√	1.configuration
	Type"A"(segments)	√	√	√	√	√	1.configuration
	Type"C"(dot matrix)	√	√	√	√	√	1.configuration
	Parking aid	√	√	√	√	√	1.configuration
	Radio	√	√	√	√	√	1.Configuration
	Hands Free Kit	√	√	√	√	√	
	Control panel	√	√	√	√	√	
	Battery charge status unit	√	√	√	√		1.Configuration
	Teleamtic RNEG navigation radio	√	√	√	√	√	1.Configuration
	Engine relay unit	√	√	√	√	√	
	switch module at the steering wheel	√	√	√	√		
	Driver's door module/MDP CONDUCT	√	√	√	√		
	N6A-N6B-NFU BOSCH ME749	√	√	√	√		
N6A-N6B-NFU BOSCH ME749 BIOFLEX	√	√	√	√			

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C3 AIRCROSS	ABS MK70.2	√	√	√	√		
	Air condition System	√	√	√	√		
	BSI	√	√	√			1.Reset maintenance indicator
	Alarm	√	√	√	√		
	AT/Auto gearbox AL4	√	√	√	√		
	Instrument panel	√	√	√	√		
	Parking assistance	√	√	√	√		
	Radio	√	√	√	√		
	Rain sensor	√	√	√			
	Services module	√	√	√	√		
	Airbag/sac_autoliv	√	√	√	√		
	Switch module at the steering wheel	√	√	√	√		
	Telematic	√	√	√	√		
	Trailer relay unit	√	√	√	√		
	5FR MED17.4	√	√	√	√		
	5FS MEV17.4	√	√	√	√		
	8FP MEV17.4	√	√	√	√		
	8FR MEV17.4	√	√	√	√		
	HFV V34.1	√	√	√	√		
	KFT V34.1	√	√	√	√		
	TU1A J34P	√	√	√	√		
	TU3A J34P	√	√	√	√		
	8HR BOSCH EDC17C10 DV4CTED -70 CV	√	√	√	√		1.DPF
	8HZ EDC16C34 DV4TD	√	√	√	√		1.Injector classification
	9HP BOSCH EDC17C10 DV6DTED - 90 CV	√	√	√	√		1.DPF
	9HP EDC 17 C10_BR2 - DV6DTED - 92 CV	√	√	√	√		1.DPF

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C3 A51	9HR HDI SID807	√	√	√	√		1.DPF
	9HX BOSCH EDC16C34 DV6ATED4 - 90CV	√	√	√	√		1.DPF 2.Injector classification
	ABS MK70.2	√	√	√	√		
	ESP MK60	√	√	√	√		
	BSI	√	√	√			1.Reset maintenance indicator
	Air condition System	√	√	√	√		
	Alarm	√	√	√	√		
	Auto gearbox AL4	√	√	√	√		
	Battery charge	√	√	√	√		
	Driver's door module	√	√	√	√		
	Engine relay unit	√	√	√	√		
	Hands Free Kit	√	√	√	√		
	High frequency receiver	√	√	√	√		
	Instrument panel	√	√	√	√		
	Type"A"(segments) /EMF_A	√	√	√	√		
	Type "C" (dot matrix)/EMF_C	√	√	√	√		
	Multiplexed diesel additive pump	√	√	√	√		
	Parking assistance	√	√	√	√		
	Battery charge status unit	√	√	√	√		1.Configuration
	Power steering	√	√	√	√		
	Radio	√	√	√			
	Rain sensor	√	√	√	√		
	Services module	√	√	√	√		
sac_autoliv	√	√	√	√			
Switch module at the steering wheel	√	√	√	√			

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Trailer relay unit	√	√	√	√		
	Telematic	√	√	√	√		
C-CROSSER	ABS anti-lock braking system CAN.xls	√	√	√	√		
	Electronic stability program CAN.xls	√	√	√	√		
	Air conditioning	√	√	√	√		
	Driver's door control panel	√	√	√	√		
	4HK BOSCH EDC16CP39	√	√	√	√		1.DPF
	4HN BOSCH EDC16CP39	√	√	√	√		1.DPF
	AFZ 4B11 MIVEC EURO4	√	√	√	√		
	SFY 4B12 MIVEC EURO5	√	√	√	√		
	SFZ 4B12 MIVEC EURO4	√	√	√	√		
	Gear level (DCT)	√	√	√	√		
	BOITE_GETRAG CAN.xls	√	√	√	√		
	Gearbox CVT CAN.xls	√	√	√	√		
	Hands Free Kit	√	√	√	√		
	Headlamp beam corrector	√	√	√	√		
	Instrument panel	√	√	√	√		
	Locking and immobiliser control module	√	√	√	√		
	Navigation	√	√	√	√		
	Passenger's door switch panel	√	√	√	√		
	Radio	√	√	√	√		
	Rain and light sensor	√	√	√	√		
	Rear final drive piloted clutch	√	√	√	√		
	Rear LH door switch panel	√	√	√	√		
	Rear RH door switch panel	√	√	√	√		
sac_trw	√	√	√	√			
Steering wheel angle sensor	√	√	√	√			
Sun roof	√	√	√	√			

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C2 VAN	1.1L HFX MM48P	√	√	√	√	√	1.mutomatic regulator
	1.6L NFU BOSCH ME7.4.4	√	√	√	√	√	1.mutomatic regulator
	1.4L KFV SAGEM S2000 PM1	√	√	√	√	√	1.mutomatic regulator
	KFV SAGEM S2000PM2	√	√	√	√	√	
	NFS BOSCH ME744	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	8HZ SIEMENS SID804	√	√	√	√	√	1.Configuration
	8HX SIEMENS SID804	√	√	√	√	√	1.Configuration
	8HX SIEMENS SID802	√	√	√	√	√	1.Configuration
	8HZ BOSCH EDC16C34 DV4TD	√	√	√	√	√	1.Configuration 2.Injector classification
	8HX BOSCH EDC16C34 DV4TD	√	√	√	√	√	1.Configuration 2.Injector classification
	ABS TEVES MK70	√	√	√	√	√	
	ESP TEVES MK60	√	√	√	√		
	Controlled manual gearbox ECU	√	√	√	√	√	1.Specific operations
	Hands Free Kit	√	√	√	√	√	1.Configuration
	Airbag/SAC TEMIC	√	√	√	√		1.Configuration
	Air Conditioning	√	√	√	√	√	1.Configuration
	Multifunction screen A	√	√	√	√	√	1.Configuration
Multifunction screen C	√	√	√	√	√	1.Configuration	

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	BSI	√	√	√	√		1.Programming of keys 2.Reset maintenance indicator
	Radio	√	√	√	√	√	1.Configuration
	CD player	√	√	√	√	√	
	Electric power steering	√	√	√	√		
	Parking aid	√	√	√	√	√	
	Rain sensor/brightness	√	√	√	√		
	Switch module at the steering wheel	√	√	√	√		
	ALARM	√	√	√	√	√	
	CONTROL PANEL	√	√	√	√	√	1.Configuration
	Telematic	√	√	√	√	√	1.Configuration
	DISPLAY	√	√	√	√	√	
	Auto gearbox AL4	√	√	√	√		
XANTIA	1.8L LFY SAGEM SL96	√	√	√	√	√	
	2.0L RFT BOSCH MP3.2	√	√	√	√		
	2.0L RFY BOSCH MP3.2	√	√	√	√		
	1.9L DHX BOSCH AS3-VP20	√	√	√	√		
	2.1L P8C LUCAS EPIC	√	√	√	√	√	
	2.0L RFV BOSCH MP5.1.1	√	√	√			
	1.8L LFY BOSCH MP5.1.1	√	√	√			
	2.0L RGX BOSCH MP3.2	√	√	√	√	√	
	2.0L RFV BOSCH MP5.2	√	√	√	√	√	
	2.0L R6E BOSCH MP5.2	√	√	√	√	√	
	1.8L LFX MM1AP	√	√	√	√		
	3.0L XFZ BOSCH MP7.0	√	√	√	√	√	
	2.0L RFV BOSCH MP5.2	√	√	√	√	√	

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
XANTIA2	2.0L RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	2.0L RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	2.0L RGX BOSCH MP3.2	√	√	√	√	√	
	2.0L R6E BOSCH MP5.2	√	√	√	√	√	
	2.1L P8C LUCAS EPIC	√	√	√	√		
	1.9L DHX BOSCH AS3-VP20	√	√	√	√		
	1.8L LFY SAGEM SL96	√	√	√	√	√	
	1.8L LFX MM1AP	√	√	√	√		
	1.8L LFY BOSCH MP7.3	√	√	√	√	√	1.Configuration
	1.6L BFZ MM48P	√	√	√	√	√	
	3.0L XFZ BOSCH MP7.0	√	√	√	√	√	
	AIRBAG AND SEATBELT(SAC_AKF)	√	√	√			1.Program set
	LEFT SIDE AIRBAG	√	√	√		√	
	RIGHT SIDE AIRBAG	√	√	√		√	
	CPH(CPH_TEXTON)	√	√	√	√	√	1.Program set
	ABS(TEVES_MK20E)	√	√	√	√	√	1.air bleed
	1.4L KFX MM1AP	√	√	√	√		
	1.6L NFX MM1AP	√	√	√	√		
	1.6L NFT BOSCH M7.4.4	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	1.6L NFZ BOSCH MP7.2	√	√	√	√	√	1.Configuration
	1.6L NFZ BOSCH MP5.2	√	√	√	√	√	
	1.6L NFZ BOSCH MP5.1	√	√	√			
	1.6L NFX MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	1.4L KFX BOSCH MP7.3	√	√	√	√	√	1.Configuration

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
SAXO	1.4L KFW SAGEM S2000	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	1.0L CDY/CDZ BOSCH MA3.1	√	√	√			
	1.1L HDY/HDZ BOSCH MA3.1	√	√	√			
	1.1L HFX BOSCH ME7.4.4	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	AT	√	√	√	√		
	ABS	√	√	√	√	√	1.air bleed
	AUTOLIV CENTRAL airbag	√	√	√			1.Ecu set
	Electric key	√	√	√	√	√	
	2.0L RFN MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	3FZ MM4MP2	√	√	√	√	√	1.Initialise auto-adaptives
	RFN MM4MP2	√	√	√	√	√	
	RFN MM6LP	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	3FZ MM6LP	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	3.0L XFW BOSCH ME746	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	2.2L 4HW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C8 VAN	2.0L RHT BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	2.0L RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	2.0L RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	2.0L RHM BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	Switch module at the steering wheel	√	√	√	√		
	Radio	√	√	√	√	√	1.Configuration
	Telematic receiver command	√	√	√	√		
	Driver's door module/MDP CONDUCT	√	√	√	√		
	Passenger's door module/MDP PASSAG	√	√	√	√		
	CD player	√	√	√	√	√	
	BSI	√	√	√			1.Reset maintenance indicator
	Parking aid	√	√	√	√	√	
	Multifunction display SAGEM B	√	√	√	√	√	1.Configuration
	Telematic unit	√	√	√	√	√	1.Configuration
	Control panel	√	√	√	√	√	
	Airbag/SAC TEMIC	√	√	√	√		1.Configuration
	Diesel additive function(ADDITIF FAP)	√	√	√	√	√	1.Configuration
	Diesel additive function(ADDGO2)	√	√	√	√	√	1.Configuration
Air conditioning	√	√	√	√	√	1.Configuration	
Additional heating	√	√	√	√			

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	Auto geatbox 4HP20	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	ABR5.7	√	√	√	√		
	ESP BOSCH5.7	√	√	√	√	√	1.Configuration 2.Calibration
Triomphe	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	ABS	√	√	√	√	√	
	Airbag	√	√	√	√	√	
	BSI	√	√	√	√	√	1.Programming of keys
	Automatic A/C	√	√	√	√	√	1.Configuration
	Alarm	√	√	√	√	√	
	Multifunction display C	√	√	√	√	√	1.Configuration
	Radio	√	√	√	√	√	1.Configuration
	CD player	√	√	√	√	√	
	Electric power steering	√	√	√	√		
	Engine service box	√	√	√	√	√	
Parking assistance	√	√	√	√	√		

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Power steering	√	√	√	√		
	Instrument cluster	√	√	√	√	√	1.Configuration
	Telematic RT3	√	√	√	√	√	
	Telematic RT4	√	√	√	√	√	
	Driver door module	√	√	√	√	√	
	Passenger door module	√	√	√	√	√	
	Rain sensor/Brightness	√	√	√			
	Hands Free Kit	√	√	√	√	√	1.configuration
	Adjustable Headlight	√	√	√	√	√	
	Engine relay unit	√	√	√	√	√	
	Switch module at the steering wheel	√	√	√	√	√	
	Directional headlamps(PROJECTEURS)	√	√	√	√	√	1.configuration 2.Vehicle height sensor programming
	Tachometer control box	√	√	√	√	√	
Berlingo	1.1L HDY/HDZ BOSCH MA3.1	√	√	√			
	1.1L HFX BOSCH M7.4.4	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	1.4L KFW SAGEM S2000	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	1.4L KFX SAGEM SL96	√	√	√	√	√	
	1.4L KFX BOSCH MP7.3	√	√	√	√	√	1.Configuration
	1.6L NFU BOSCH ME7.4.4	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	1.8L LFX MM1AP	√	√	√	√		
	2.0L RHY BOSCH EDC15C2	√	√	√	√	√	1.Configuration

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	1.9L WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
	RHY SIEMENS SID801	√	√	√	√	√	1.Configuration
	ABS electronic distribution	√	√	√	√		
	Airbag TRW/(SAC TRW)	√	√	√			
	Airbag AUTOLIV/(SAC AKF)	√	√	√			
	Radio	√	√	√	√	√	1.Configuration
	CD player	√	√	√	√	√	
	Control panel	√	√	√	√	√	1.Configuration
	2.0L RFN MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	NFU BOSCH ME744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	KFV SAGEM S2000PM1	√	√	√	√	√	1.configuration
	KFV SAGEM S2000PM2	√	√	√	√	√	
	NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	TU3A J34P	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	9HX BOSCH EDC16C34 DV6ATED4	√	√	√	√	√	1.configuration 2.DPF 3.Injector classification
	NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
Berlingo2	N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RHY SIEMENS SID801	√	√	√	√	√	1.Configuration
	1.9L WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
	ABS8.1 BOSCH	√	√	√	√	√	1.configuration
	ABS8 BOSCH	√	√	√	√	√	1.configuration
	ABR5.3	√	√	√	√		
	ESP8.1 BOSCH	√	√	√	√	√	1.configuration
	ESP BOSCH5.7	√	√	√	√	√	1.Configuration 2.Calibration
	ESP8.0 BOSCH	√	√	√	√	√	1.configuration 2.Calibration
	Additional heating(Chauff-add)	√	√	√			
	Airbag/SAC AUTOLIV)	√	√	√			1.configuration
	BSI	√	√	√			1.Reset maintenance indicator
	Control panel	√	√	√	√	√	1.Configuration
	Radio	√	√	√	√	√	1.Configuration
	CD player(Changeur-cd)	√	√	√	√	√	
	Parking aid	√	√	√	√	√	
	Alarm(Alarme_texton)	√	√	√			
	Switch module at the steering wheel(COM2000)	√	√	√	√		
	Rain sensor/Brightness(Pluie_luminosite)	√	√	√	√		
	Multifunction display SAGEM A	√	√	√	√	√	1.Configuration
Multifunction display SAGEM B	√	√	√	√	√	1.Configuration	

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	9HT BOSCH EDC16C34 DV6BUTED4-75CV	√	√	√	√	√	1.configuration 2.DPF 3.Injector classification
	9HT BOSCH EDC16C34 DV6BTED4-75CV	√	√	√	√	√	1.configuration 2.DPF 3.Injector classification
	9HZ(FAP) BOSCH EDC16C34 DV6TED4-110CV	√	√	√	√	√	1.configuration 2.Injector classification
	9HX BOSCH EDC16C34 DV6AUTED4-90CV	√	√	√	√	√	1.configuration 2.DPF 3.Injector classification
	9HX BOSCH EDC16C34 DV6ATED4-90CV	√	√	√	√	√	1.configuration 2.DPF 3.Injector classification
	9HV FAP BOSCH EDC16C34 DV6TED4B-90CV	√	√	√	√	√	1.configuration 2.DPF
	9HS FAP BOSCH EDC16C34 DV6TED4BU-90CV	√	√	√	√	√	1.configuration 2.DPF 3.Injector classification
	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
Berlingo(B9)	1.6L NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	1.6L NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	ABS8.1 BOSCH	√	√	√	√	√	1.configuration
	ESP8.1 BOSCH	√	√	√	√	√	1.configuration
	CD player	√	√	√	√	√	
	Electric power steering	√	√	√	√	√	
	Parking aid	√	√	√	√	√	1.configuration
	Rain sensor/brightness	√	√	√			
	Engine relay unit	√	√	√	√	√	
	BSI	√	√	√			1.Reset maintenance indicator
	Radio	√	√	√	√	√	1.Configuration
	Control panel	√	√	√	√	√	1.Configuration
	Telematic RNEG navigation radio	√	√	√	√	√	1.Configuration
Switch module at the steering wheel	√	√	√	√	√		

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Deflation detection	√	√	√	√		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
	Battery charge status unit	√	√	√	√		1.Configuration
	Hands Free Kit	√	√	√	√	√	
	Type"A"(segments)	√	√	√	√	√	1.Configuration
	Type"C"(dot matrix)	√	√	√	√	√	1.Configuration
	AC	√	√	√	√	√	1.Configuration
	Airbage/SAC AUTOLIV	√	√	√	√		1.Configuration 2.locking 3.unlocking
	KFU MM6LPC	√	√	√	√	√	1.configuration
	TU1A J34P	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	TU3A J34P	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFU BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C2 CANBUS	NFR BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFS BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	KFV SAGEM S2000PM2	√	√	√	√	√	
	9HZ(FAP) BOSCH EDC16C34 DV6TED4	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	8HZ BOSCH EDC16C34 DV4TD	√	√	√	√	√	1.Configuration 3.Injector classification
	8HX BOSCH EDC16C34 DV4TD	√	√	√			1.Injector classification
	8HZ SEIMENS SID806	√	√	√	√		
	AC	√	√	√	√	√	1.Configuration
	Alarm	√	√	√			
	BSI	√	√	√			1.Reset maintenance indicator
	CD player	√	√	√	√	√	
	Control panel	√	√	√	√	√	1.Configuration
	TELEMATIC RT3	√	√	√	√	√	
	TELEMATIC RT4	√	√	√	√	√	
	TELEMATIC RT5	√	√	√	√	√	
	ABS MK70	√	√	√	√	√	1.Configuration
ABS MK70.1	√	√	√	√	√	1.Configuration	

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	ESP MK60	√	√	√	√	√	1.Configuration 2.Calibration 3.Initialisation
	ESP MK60-O	√	√	√	√	√	1.Configuration 2.Calibration
	Controlled manual gearbox ECU	√	√	√	√	√	1.Specific operations
	ECU reversible stopstart alternator	√	√	√			
	electric power steering	√	√	√	√		
	engine relay unit	√	√	√	√	√	
	multifunction screen A	√	√	√	√	√	1.configuration
	multifunction screen C	√	√	√	√	√	1.configuration
	radio	√	√	√	√	√	1.configuration
	rain sensor-brightness	√	√	√			
	SRS/SAC TEMIC	√	√	√	√		1.Configuration
	Switch module at the steering wheel	√	√	√	√	√	
	Parking aid	√	√	√	√	√	1.configuration
	Trailer relay unit	√	√	√			
	Hands free kit	√	√	√			
	High frequency receiver	√	√	√			
	BSI	√	√	√			1.Reset maintenance indicator
	Petrol/RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Diesel/4HP BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	Diesel/4HR BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C8 CANBUS	Diesel/4HS BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	Diesel/4HT BOSCHE DEC16CP39 DW12BTED4	√	√	√	√	√	1.Configuration 2.DPF
	Diesel/RHR SIEMENS SID803A	√	√	√	√	√	1.Configuration 2.DPF
	Diesel/RHK SIEMENS SID803A	√	√	√	√	√	1.Configuration 2.DPF
	Diesel/2.2L 4HW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	Diesel/2.0L RHT BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	Diesel/2.0L RHM BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	Diesel/2.0L RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	Diesel/2.0L RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	Diesel additive_function	√	√	√	√	√	1.Configuration
	Airbag/SAC TEMIC	√	√	√	√		1.Configuration
	Gearbox ECU/Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	Gearbox ECU/Auto gearbox AM6	√	√	√	√	√	1.Configuration
	Gearbox ECU/BVA AM6 Euro5	√	√	√	√	√	1.configuration 2.Oil wear counter
Anti-lock brake system/ESP8.1 BOSCH	√	√	√	√	√	1.configuration	

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Anti-lock brake system/ESP8 BOSCH	√	√	√	√	√	1.configuration 2.Calibration
	Multifunction screen/Colour multifunction display	√	√	√			
	Multifunction screen/Multifunction display SIEMENS C	√	√	√			
	Telematics/Telematics(RT3)	√	√	√	√	√	
	Telematics/Telematics(RT4)	√	√	√	√	√	
	Instrument panel	√	√	√			
	Air conditioning	√	√	√	√	√	
	Multifunction display SIMENS C	√	√	√	√	√	1.configuration
	alarm	√	√	√			
	Control panel	√	√	√	√	√	
	engine relay unit	√	√	√	√	√	
	Power steering	√	√	√			
	Radio	√	√	√	√	√	1.configuration
	Rain sensor/Brightness	√	√	√			
	CD player	√	√	√	√	√	
	Electric power steering	√	√	√	√	√	
	Parking aid	√	√	√	√	√	1.configuration
	Deflation detection	√	√	√	√		1.wheel transmitter module manage 2.Type pressure detector activation/deactivation 3.Valve programming check
	Hands Free Kit	√	√	√	√	√	

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Driver's door module/MDP CONDUCT	√	√	√	√	√	
	Passenger's door module/MDP PASSAG	√	√	√	√	√	
	Sliding side doors module	√	√	√			
	Switch module at the steering wheel	√	√	√	√	√	
	BSI	√	√	√			1.Reset maintenance indicator
	Control panel	√	√	√	√	√	1.Configuration
	Telematic RNEG navigation radio	√	√	√	√	√	1.Configuration
	Radio	√	√	√	√	√	1.Configuration
	CD player	√	√	√	√	√	
	Parking assistance	√	√	√			
	Air conditioning	√	√	√	√	√	1.Configuration
	Multifunction screen A	√	√	√	√	√	1.Configuration
	Multifunction screen C	√	√	√	√	√	1.Configuration
	Rear air conditioning panel	√	√	√			
	Switch module at the Steering wheel	√	√	√	√	√	
	alarm	√	√	√			
	Rain sensor/Brightness	√	√	√			
	Airbag/SAC BOSCH	√	√	√	√		1.Configuration
	Multifunction screen/Multifunction screen A	√	√	√			
	Multifunction screen/Multifunction screen C	√	√	√			
	Suspension	√	√	√	√	√	1.Configuration
	Telematics/Telematics(RT3)	√	√	√	√	√	
	Telematics/Telematics(RT4)	√	√	√	√	√	
	Telematics/Telematics(RT5)	√	√	√	√	√	
DISPATCH 3 / JUMPY	Petrol/RFH MM6KP	√	√	√	√	√	1.configuration 2.Initialise auto-

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Diesel/9HU BOSCH EDC16C34 DV6UTD4-90CV	√	√	√	√	√	1.Configuration 2.DPF 3.Injector classification
	Diesel/RHR SIEMENS SID803A	√	√	√	√	√	1.Configuration 2.DPF
	Diesel/RHK SIEMENS SID803A	√	√	√	√	√	1.Configuration
	Diesel/RHG SIEMENS SID803A	√	√	√	√		1.DPF
	ABS/ESP8_BOSCH	√	√	√	√	√	1.configuration 2.Calibration
	ABS/ABS8.1 BOSCH	√	√	√	√	√	1.configuration
	ABS/ESP8.1 BOSCH	√	√	√	√	√	1.Configuration
	ABS/ABS8 BOSCH	√	√	√	√	√	1.configuration
	Power steering/Electric power steering ECU	√	√	√			
	Pneumatic suspension/Suspension	√	√	√			
	Additional heating(KWP)	√	√	√			
	Trailer relay unit	√	√	√			
	engine relay unit	√	√	√	√	√	
	Rain sensor/brightness	√	√	√			
	Electric power steering	√	√	√	√	√	
	Hands Free Kit	√	√	√	√	√	
	Bodywork Conversion Unit	√	√	√			
	2.0L RFN MM48P	√	√	√	√	√	1.Initialise auto- adaptives
	2.0L RHX BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	2.0L RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	1.9L DHX BOSCH AS3-VP20	√	√	√	√		

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
DISPATCH / JUMPY	2.0L RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	1.9L WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	ABR5.3	√	√	√	√		
DISPATCH 2 / JUMPY 2	2.0L RFN MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	2.0L RHX BOSCH EDC15C2	√	√	√	√	√	1.Configuration
	2.0L RHW BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	2.0L RHZ BOSCH EDC15C2	√	√	√	√	√	1.Configuration 2.DPF
	1.9L WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	ABR5.3	√	√	√	√		
XM	2.0L R6E BOSCH MP5.2	√	√	√	√	√	
	2.0L RGY BOSCH MP3.2	√	√	√	√	√	
	2.0L RFZ BOSCH MP5.1	√	√	√	√	√	
	2.0L RGX BOSCH MP3.2	√	√	√	√	√	
	2.0L RFV BOSCH MP5.2	√	√	√	√	√	
	3.0L XFZ BOSCH MP7.0	√	√	√	√	√	
	2.5L THY BOSCH MSA11 VP36	√	√	√	√		
	2.0L RFV BOSCH MP5.1.1	√	√	√			

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	ABS TEVES MK20E	√	√	√	√		
XM mux	2.5L THY MSA11 7.6 VP36	√	√	√	√		
	ABS TEVES MK20E	√	√	√	√		
JUMPER 3 /RELAY 3	DCU-102 4HU PUMA 120 CV	√	√	√	√		
	DCU-102 4HV PUMA 100 CV	√	√	√	√		
	EDC16C39 SOFIM 3.0 145 CV FAP	√	√	√	√		
	EDC16C39 SOFIM 3.0 145 CV	√	√	√	√		
	ABS8 BOSCH	√	√	√	√	√	
	ASR8.0	√	√	√	√		
	ESP8 BOSCH	√	√	√	√	√	
	Electric power steering	√	√	√	√		
JUMPER 3 Minibus/RELAY 3 Minibus	DCU-102 4HU PUMA 120 CV	√	√	√	√		
	DCU-102 4HV PUMA 100 CV	√	√	√	√		
	EDC16C39 SOFIM 3.0 145 CV FAP	√	√	√	√		
	EDC16C39 SOFIM 3.0 145 CV	√	√	√	√		
	Electric power steering	√	√	√	√		
SYNERGIE/EVASION	2.0L RFN MM48P	√	√	√	√	√	1.Initialise auto-adaptives
	2.0L RGX BOSCH MP3.2	√	√	√	√	√	
	1.9L DHX BOSCH AS3-VP20	√	√	√	√		
	2.0L RFV BOSCH MP7.3	√	√	√	√	√	1.Configuration
	2.0L RHW BOSCH EDC15C2	√	√	√		√	1.Configuration
	2.0L RHZ BOSCH EDC15C2	√	√	√		√	1.Configuration
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	ABR5.3	√	√	√	√		
	Airbag/SAC CENT AUTOLIV	√	√	√			1.Configuration

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C15	1.9L WJY LUCAS DCN2	√	√	√	√	√	1.Configuration
C-QUATRE 4	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	ABS8.1 BOSCH	√	√	√	√	√	1.configuration
	ESP8.1 BOSCH	√	√	√	√	√	1.configuration
	Airbag/SAC AUTOLIV	√	√	√	√		1.Configuration
	BSI	√	√	√			1.Reset maintenance indicator
	CD player	√	√	√	√	√	
	Electric power steering	√	√	√	√		
	Hands Free Kit	√	√	√	√	√	1.configuration
	Control panel	√	√	√	√	√	1.configuration
	Telematic RT3	√	√	√	√	√	
	Telematic RT4	√	√	√	√	√	
	Driver's door module/MDP CONDUCT	√	√	√	√	√	
	Radio	√	√	√	√	√	1.configuration
	Engine relay unit	√	√	√	√	√	
Switch module at the steering wheel	√	√	√	√	√		
AC	√	√	√	√	√	1.configuration	
Multifunction screen	√	√	√	√	√	1.configuration	

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Passenger's door module/MDP PASSAG	√	√	√	√	√	
C-QUATRE 5	1.6L N6A BOSCH ME745	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	RFJ MM6LPB	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Auto gearbox AL4	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	ABS8.1 BOSCH	√	√	√	√	√	1.configuration
	ESP8.1 BOSCH	√	√	√	√	√	1.configuration
	Hands Free Kit	√	√	√	√	√	1.configuration
	BSI	√	√	√			1.Reset maintenance indicator
	CD player	√	√	√	√	√	
	Electric power steering	√	√	√	√		
	Rain sensor/brightness	√	√	√			
	Driver's door module/MDP CONDUCT	√	√	√	√	√	
	Radio	√	√	√	√	√	1.configuration
	Control panel	√	√	√	√	√	1.configuration
	Telematic RT3	√	√	√	√	√	
	Telematic RT4	√	√	√	√	√	
	Engine relay unit	√	√	√	√	√	
Switch module at the steering wheel	√	√	√	√	√		
Passenger's door module/MDP PASSAG	√	√	√	√	√		
AC	√	√	√	√	√	1.configuration	

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	Multifunction screen C	√	√	√	√	√	1.configuration
	Airbag/SAC AUTOLIV	√	√	√	√		1.Configuration
FUKANG	1.4L KFX BOSCH MP5.2	√	√	√	√	√	
	1.6L NFZ BOSCH MP5.2	√	√	√	√	√	
	1.6L NFU BOSCH ME744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Auto gearbox AL4 TA96	√	√	√	√	√	1.configuration
	Auto gearbox AL4 TA2000	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	ABS8.1 BOSCH	√	√	√	√	√	1.configuration
	ABR5.3	√	√	√	√		
FUKANG 988	1.4L KFX BOSCH MP5.2	√	√	√	√	√	
	1.6L NFZ BOSCH MP5.2	√	√	√	√	√	
	1.6L NFU BOSCH ME744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	Auto gearbox AL4 TA96	√	√	√	√	√	1.configuration
	Auto gearbox AL4 TA2000	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	ABS8.1 BOSCH	√	√	√	√	√	1.configuration
	ABR5.3	√	√	√	√		
	1.6L NFU BOSCH ME744	√	√	√	√	√	1.Initialise auto-adaptives

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
C-ELYSEE 4	Auto gearbox AL4 TA2000	√	√	√	√	√	1.Configuration 2.Initialise auto-
	ABS8.1 BOSCH	√	√	√	√	√	1.configuration
	Airbag/SAC SIEMENS	√	√	√	√		
DS3	Trailer relay unit	√	√	√	√		
	Engine relay unit	√	√	√	√		
	Electric power steering	√	√	√	√		
	Telematic	√	√	√	√		
	8FR MEV17.4	√	√	√	√		
	8FP MEV17.4	√	√	√	√		
	5FS MEV17.4	√	√	√	√		
	5FS MEV17.4.2	√	√	√	√		
	8FP MEV17.4.2	√	√	√	√		
	8FR MEV17.4.2	√	√	√	√		
	5FR MED17.4	√	√	√	√		
	5FF MED17.4	√	√	√	√		
	9HP BOSCH EDC17C10 DV6DTED-90 CV	√	√	√	√		1.DPF
	8HR BOSCH EDC17C10 DV4CTED-70 CV	√	√	√	√		1.DPF
	9HR HDI SID807	√	√	√	√		1.DPF
	9HP EDC 17 C10_BR2-DV6DTED-92CV	√	√	√	√		1.DPF
	Auto gearbox AL4	√	√	√	√		
	BSI	√	√	√			1.Reset maintenance indicator
	Air conditioning	√	√	√	√		
	Alarm	√	√	√	√		
	Hands Free Kit	√	√	√	√		
Radio	√	√	√	√			
ESP MK60	√	√	√	√			

Citroen V40.50 Diagnostics List

Vehicle	ECU Type	Functions					
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function
	ABS MK70.2	√	√	√	√		
	Airbag	√	√	√	√		
	Rain sensor/Brightness	√	√	√	√		
	Switch module under the steering wheel	√	√	√	√		
	Parking aid	√	√	√	√		
	High frequency receiver	√	√	√	√		
	Battery charge status unit	√	√	√	√		
	Type"A"	√	√	√	√		
	Type"C"	√	√	√	√		
	Instrument panel	√	√	√	√		
	Multiplexed diesel additive pump	√	√	√	√		
	Telematics unit independent	√	√	√	√		
C-ELYSEE 5	1.6L NFU BOSCH ME744	√	√	√	√	√	1.configuration 2.Initialise auto-adaptives
	NFU J35	√	√	√	√	√	1.Initialise auto-adaptives 2.Configuration
	Auto gearbox AL4 TA2000	√	√	√	√	√	1.Configuration 2.Initialise auto-adaptives 3.Oil counter
	Airbag/SAC SIEMENS	√	√	√	√		
	ABS8.1 BOSCH	√	√	√	√	√	1.configuration

Citroen **V40.50** Diagnostics List

Vehicle	ECU Type	Functions				
		Recognize	Read Dtc	Clear Dtc	Data Stream	Actuation
CONNECTOR	X431	DIAGUN				
SMART OBD	For all the cars except ZX-2, Triomphe, new C3, C4, New C5	N/A				
OBD 16C	For all the cars except ZX-2, Triomphe, new C3, C4, New C5	N/A				
CANBUS II	Just for Triomphe, new C3, C4, New C5, And need to add Peugeot/Citroen Connector to test.	N/A				
diagun connector	N/A	For all the cars except ZX-2				
SUPER 16	For all the cars except ZX-2	N/A				