

- stand for support the function
- stand for not support the function

### ASTONMARTIN V10.03 Diagnostics List(Note:For reference only)

YEAR	MODEL	SYSTEM	Read DTC	Clear DTC	Read ECU Information	Read Current Data
As of 2011	Cygnnet	ECM	●	●	●	●
As of 2011	Cygnnet	EMS-P	●	●	●	●
As of 2011	Cygnnet	EMS-S	●	●	●	●
As of 2011	Cygnnet	BCM	●	●	●	●
As of 2011	Cygnnet	RCM	●	●	●	●
As of 2011	Cygnnet	CEM-HS	●	●	●	●
As of 2011	Cygnnet	CEM-LS	●	●	●	●
As of 2011	Cygnnet	DIM	●	●	●	●
As of 2011	Cygnnet	PAM	●	●	○	●
As of 2011	Cygnnet	CCM	●	●	●	○
As of 2011	Cygnnet	AUD5	●	●	●	○
As of 2011	Cygnnet	SUB5	●	●	●	○
As of 2011	Cygnnet	MMM	●	●	●	○
As of 2011	Cygnnet	MP1	●	●	●	○
As of 2011	Cygnnet	AFM	●	●	●	○
As of 2011	Cygnnet	GPS	●	●	●	○
As of 2011	Cygnnet	TCMZP	●	●	●	●
As of 2011	Cygnnet	ASM	●	●	●	●
As of 2011	Cygnnet	EPB	●	●	●	●
As of 2011	Cygnnet	ESCL	●	●	●	●
As of 2011	Cygnnet	HLM	●	○	●	●
As of 2011	Cygnnet	SAS	●	●	●	●
As of 2011	Cygnnet	ADM	●	●	●	●
As of 2011	Cygnnet	TPMS	●	●	●	●
As of 2011	Cygnnet	DSM+	●	●	●	●
As of 2011	Cygnnet	PSM+	●	●	●	●
As of 2011	Cygnnet	DDM+	●	●	●	●
As of 2011	Cygnnet	DDM	●	●	●	●
As of 2011	Cygnnet	PDM+	●	●	●	●
As of 2011	Cygnnet	PDM	●	●	●	●
As of 2011	Cygnnet	DDMR	●	●	●	●
As of 2011	Cygnnet	PDMR	●	●	●	●
As of 2011	Cygnnet	FCIM	●	●	●	○
As of 2011	Cygnnet	RCIM	●	●	●	○
As of 2011	Cygnnet	LCDM	●	●	●	○
As of 2011	Virage	ECM	●	●	●	●
As of 2011	Virage	EMS-P	●	●	●	●
As of 2011	Virage	EMS-S	●	●	●	●
As of 2011	Virage	BCM	●	●	●	●
As of 2011	Virage	RCM	●	●	●	●
As of 2011	Virage	CEM-HS	●	●	●	●
As of 2011	Virage	CEM-LS	●	●	●	●
As of 2011	Virage	DIM	●	●	●	●
As of 2011	Virage	PAM	●	●	○	●
As of 2011	Virage	CCM	●	●	●	○
As of 2011	Virage	AUD5	●	●	●	○
As of 2011	Virage	SUB5	●	●	●	○
As of 2011	Virage	MMM	●	●	●	○
As of 2011	Virage	MP1	●	●	●	○
As of 2011	Virage	AFM	●	●	●	○
As of 2011	Virage	GPS	●	●	●	○
As of 2011	Virage	TCMZP	●	●	●	●
As of 2011	Virage	ASM	●	●	●	●
As of 2011	Virage	EPB	●	●	●	●
As of 2011	Virage	ESCL	●	●	●	●
As of 2011	Virage	HLM	●	○	●	●
As of 2011	Virage	SAS	●	●	●	●
As of 2011	Virage	ADM	●	●	●	●
As of 2011	Virage	TPMS	●	●	●	●
As of 2011	Virage	DSM+	●	●	●	●
As of 2011	Virage	PSM+	●	●	●	●
As of 2011	Virage	DDM+	●	●	●	●
As of 2011	Virage	DDM	●	●	●	●
As of 2011	Virage	PDM+	●	●	●	●
As of 2011	Virage	PDM	●	●	●	●
As of 2011	Virage	DDMR	●	●	●	●
As of 2011	Virage	PDMR	●	●	●	●
As of 2011	Virage	FCIM	●	●	●	○
As of 2011	Virage	RCIM	●	●	●	○
As of 2011	Virage	LCDM	●	●	●	○
As of 2009	Rapide	ECM	●	●	●	●
As of 2009	Rapide	EMS-P	●	●	●	●
As of 2009	Rapide	EMS-S	●	●	●	●
As of 2009	Rapide	BCM	●	●	●	●
As of 2009	Rapide	RCM	●	●	●	●
As of 2009	Rapide	CEM-HS	●	●	●	●
As of 2009	Rapide	CEM-LS	●	●	●	●
As of 2009	Rapide	DIM	●	●	●	●
As of 2009	Rapide	PAM	●	●	○	●
As of 2009	Rapide	CCM	●	●	●	○
As of 2009	Rapide	AUD5	●	●	●	○
As of 2009	Rapide	SUB5	●	●	●	○
As of 2009	Rapide	MMM	●	●	●	○
As of 2009	Rapide	MP1	●	●	●	○
As of 2009	Rapide	AFM	●	●	●	○
As of 2009	Rapide	GPS	●	●	●	○
As of 2009	Rapide	TCMZP	●	●	●	●
As of 2009	Rapide	ASM	●	●	●	●
As of 2009	Rapide	EPB	●	●	●	●
As of 2009	Rapide	ESCL	●	●	●	●
As of 2009	Rapide	HLM	●	○	●	●
As of 2009	Rapide	SAS	●	●	●	●
As of 2009	Rapide	ADM	●	●	●	●
As of 2009	Rapide	TPMS	●	●	●	●
As of 2009	Rapide	DSM+	●	●	●	●
As of 2009	Rapide	PSM+	●	●	●	●
As of 2009	Rapide	DDM+	●	●	●	●
As of 2009	Rapide	DDM	●	●	●	●
As of 2009	Rapide	PDM+	●	●	●	●
As of 2009	Rapide	PDM	●	●	●	●
As of 2009	Rapide	DDMR	●	●	●	●

- stand for support the function
- stand for not support the function

### ASTONMARTIN V10.03 Diagnostics List(Note:For reference only)

YEAR	MODEL	SYSTEM	Read DTC	Clear DTC	Read ECU Information	Read Current Data
As of 2009	Rapide	PDMR	●	●	●	●
As of 2009	Rapide	FCIM	●	●	●	○
As of 2009	Rapide	RCIM	●	●	●	○
As of 2009	Rapide	LCDM	●	●	●	○
As of 2007	DBS V12	ECM	●	●	●	●
As of 2007	DBS V12	EMS-P	●	●	●	●
As of 2007	DBS V12	EMS-S	●	●	●	●
As of 2007	DBS V12	BCM	●	●	●	●
As of 2007	DBS V12	RCM	●	●	●	●
As of 2007	DBS V12	CEM-HS	●	●	●	●
As of 2007	DBS V12	CEM-LS	●	●	●	●
As of 2007	DBS V12	DIM	●	●	●	●
As of 2007	DBS V12	PAM	●	●	○	●
As of 2007	DBS V12	CCM	●	●	●	○
As of 2007	DBS V12	AUD5	●	●	●	○
As of 2007	DBS V12	SUB5	●	●	●	○
As of 2007	DBS V12	MMM	●	●	●	○
As of 2007	DBS V12	MP1	●	●	●	○
As of 2007	DBS V12	AFM	●	●	●	○
As of 2007	DBS V12	GPS	●	●	●	○
As of 2007	DBS V12	TCMZP	●	●	●	●
As of 2007	DBS V12	ASM	●	●	●	●
As of 2007	DBS V12	EPB	●	●	●	●
As of 2007	DBS V12	ESCL	●	●	●	●
As of 2007	DBS V12	HLM	●	○	●	●
As of 2007	DBS V12	SAS	●	●	●	●
As of 2007	DBS V12	ADM	●	●	●	●
As of 2007	DBS V12	TPMS	●	●	●	●
As of 2007	DBS V12	DSM+	●	●	●	●
As of 2007	DBS V12	PSM+	●	●	●	●
As of 2007	DBS V12	DDM+	●	●	●	●
As of 2007	DBS V12	DDM	●	●	●	●
As of 2007	DBS V12	PDM+	●	●	●	●
As of 2007	DBS V12	PDM	●	●	●	●
As of 2007	DBS V12	DDMR	●	●	●	●
As of 2007	DBS V12	PDMR	●	●	●	●
As of 2007	DBS V12	FCIM	●	●	●	○
As of 2007	DBS V12	RCIM	●	●	●	○
As of 2007	DBS V12	LCDM	●	●	●	○
As of 2005	Vantage	ECM	●	●	●	●
As of 2005	Vantage	EMS-P	●	●	●	●
As of 2005	Vantage	EMS-S	●	●	●	●
As of 2005	Vantage	BCM	●	●	●	●
As of 2005	Vantage	RCM	●	●	●	●
As of 2005	Vantage	CEM-HS	●	●	●	●
As of 2005	Vantage	CEM-LS	●	●	●	●
As of 2005	Vantage	DIM	●	●	●	●
As of 2005	Vantage	PAM	●	●	○	●
As of 2005	Vantage	CCM	●	●	●	○
As of 2005	Vantage	AUD5	●	●	●	○
As of 2005	Vantage	SUB5	●	●	●	○
As of 2005	Vantage	MMM	●	●	●	○
As of 2005	Vantage	MP1	●	●	●	○
As of 2005	Vantage	AFM	●	●	●	○
As of 2005	Vantage	GPS	●	●	●	○
As of 2005	Vantage	TCMZP	●	●	●	●
As of 2005	Vantage	ASM	●	●	●	●
As of 2005	Vantage	EPB	●	●	●	●
As of 2005	Vantage	ESCL	●	●	●	●
As of 2005	Vantage	HLM	●	○	●	●
As of 2005	Vantage	SAS	●	●	●	●
As of 2005	Vantage	ADM	●	●	●	●
As of 2005	Vantage	TPMS	●	●	●	●
As of 2005	Vantage	DSM+	●	●	●	●
As of 2005	Vantage	PSM+	●	●	●	●
As of 2005	Vantage	DDM+	●	●	●	●
As of 2005	Vantage	DDM	●	●	●	●
As of 2005	Vantage	PDM+	●	●	●	●
As of 2005	Vantage	PDM	●	●	●	●
As of 2005	Vantage	DDMR	●	●	●	●
As of 2005	Vantage	PDMR	●	●	●	●
As of 2005	Vantage	FCIM	●	●	●	○
As of 2005	Vantage	RCIM	●	●	●	○
As of 2005	Vantage	LCDM	●	●	●	○
As of 2004	DB9	ECM	●	●	●	●
As of 2004	DB9	EMS-P	●	●	●	●
As of 2004	DB9	EMS-S	●	●	●	●
As of 2004	DB9	BCM	●	●	●	●
As of 2004	DB9	RCM	●	●	●	●
As of 2004	DB9	CEM-HS	●	●	●	●
As of 2004	DB9	CEM-LS	●	●	●	●
As of 2004	DB9	DIM	●	●	●	●
As of 2004	DB9	PAM	●	●	○	●
As of 2004	DB9	CCM	●	●	●	○
As of 2004	DB9	AUD5	●	●	●	○
As of 2004	DB9	SUB5	●	●	●	○
As of 2004	DB9	MMM	●	●	●	○
As of 2004	DB9	MP1	●	●	●	○
As of 2004	DB9	AFM	●	●	●	○
As of 2004	DB9	GPS	●	●	●	○
As of 2004	DB9	TCMZP	●	●	●	●
As of 2004	DB9	ASM	●	●	●	●
As of 2004	DB9	EPB	●	●	●	●
As of 2004	DB9	ESCL	●	●	●	●
As of 2004	DB9	HLM	●	○	●	●
As of 2004	DB9	SAS	●	●	●	●
As of 2004	DB9	ADM	●	●	●	●
As of 2004	DB9	TPMS	●	●	●	●
As of 2004	DB9	DSM+	●	●	●	●
As of 2004	DB9	PSM+	●	●	●	●
As of 2004	DB9	DDM+	●	●	●	●

- stand for support the function
- stand for not support the function

### ASTONMARTIN V10.03 Diagnostics List(Note:For reference only)

YEAR	MODEL	SYSTEM	Read DTC	Clear DTC	Read ECU Information	Read Current Data
As of 2004	DB9	DDM	●	●	●	●
As of 2004	DB9	PDM+	●	●	●	●
As of 2004	DB9	PDM	●	●	●	●
As of 2004	DB9	DDMR	●	●	●	●
As of 2004	DB9	PDMR	●	●	●	●
As of 2004	DB9	FCIM	●	●	●	○
As of 2004	DB9	RCIM	●	●	●	○
As of 2004	DB9	LCDM	●	●	●	○